



Operating Manual
Network Analyzer
PQ-Box 150
Power-Quality Evaluation Software





Note:

Please note that this operating manual cannot describe the latest version of the device in all cases. For example, if you download a more recent firmware version from the internet, the following description may no longer be accurate in every point.

In this case, either contact us directly or refer to the most recent version of the operating manual, available on our website (www.a-eberle.de).

A. Eberle GmbH & Co. KG

Frankenstraße 160

D-90461 Nuernberg

Tel.: 0911 / 62 81 08 0

Fax: 0911 / 62 81 08 96

E-Mail: info@a-eberle.de

Internet: www.a-eberle.de

A.-Eberle GmbH & Co. KG cannot be held liable for any damage or losses, resulting from printing errors or changes to this operating manual.

Furthermore, **A. Eberle GmbH & Co. KG** does not assume responsibility for any damage or losses resulting from defective devices or from devices altered by the user.

Copyright 2017 by A. Eberle GmbH & Co. KG

All rights reserved.

Table of Contents

1.	User Guidance.....	6
1.1	Warnings	6
1.2	Notes.....	6
1.3	Other Symbols.....	6
2.	Safety Instructions	7
2.1	Safety instructions	7
2.2	Meaning of the symbols used on the device	8
3.	Scope of Delivery/Order Codes PQ-Box 150	9
3.1	Scope of Delivery	9
3.2	Order Codes	9
3.3	Technische Daten PQ-Box 150.....	12
4.	External power supply.....	14
4.1	Requirement external power supply	14
4.2	External power supply	14
5.	Accessories for current measurement.....	16
5.1.1	Rogowski current clamps.....	16
5.1.2	Current clamps.....	17
5.1.3	Accessories for current measurement.....	19
6.	Intended use	19
7.	Description	19
8.	Hardware PQ-Box 150	20
8.1	PQ-Box 150 Hardware.....	20
8.1.1	Overview PQ-Box 150	20
9.	Battery management and micro SD card	22
9.1	Micro SD card	22
9.2	Accumulator.....	22
10.	Network connection PQ-Box 150	23
10.1.1	Direct connection to a 3-phase low voltage network.....	23
10.1.2	Connection to a single-phase low voltage network.....	24
10.1.3	Connection to an isolated network.....	25
10.1.4	Connection to secondary transformer.....	26
10.1.5	Display.....	28
10.1.6	Starting a measurement	31
10.1.7	Manual Trigger.....	31
10.1.8	Time synchronisation using the RS232 interface.....	32

10.1.9	PQ-Box 150 Setup	32
10.1.10	Keypad Lock	35
10.1.11	Password Protection and Interface Lock	35
10.1.12	Memory management	36
10.1.13	Delete device memory	37
10.1.14	Continuous mode without power supply	37
10.1.15	TCP-IP settings.....	38
11.	Evaluation software WinPQ mobile	39
11.1	SW – Installation / Removal / Update.....	39
11.2	Software Wizard.....	41
11.3	WinPQ mobile start screen	42
11.3.1	General Software Settings	43
11.3.2	TCP-IP Settings in WinPQ mobil.....	48
11.4	Transferring measurement data from the PQ-Box to the PC	49
11.4.1	Data folder in Windows Explorer.....	50
11.4.2	Transferring measurement data while a measurement is in progress.....	51
11.4.3	Fast data transfer in USB disc mode	52
11.5	Evaluation of Measurement Data.....	53
11.5.1	Change the measurement data directory.....	54
11.5.2	Standard evaluation for EN50160 and IEC61000-2-2	57
11.5.3	Bar chart of the Harmonics and Interharmonics	62
11.5.4	D-A-CH-CZ report	64
11.5.5	Level-time diagrams of the long-term data	65
11.5.6	Oscilloscope recordings	72
11.5.7	½ periode rms RMS Recorder	74
11.5.8	Ripple Control Signal Recorder	75
11.5.9	PQ Events	76
11.5.10	Data export – Interval data	78
11.5.11	Additional functions.....	81
12.	PQ-Box Limits and Settings	84
12.1	Setup - Basic Settings	85
12.2	Setup – EN50160 / IEC61000-2-2 / IEC61000-2-4 Limits	90
12.3	Oscilloscope trigger settings	92
12.4	½ period rms Recorder.....	94
12.5	Automatic Trigger	95
12.6	Ripple control signal analysis	96
12.7	Scheduled Operation	97

12.8	PQ-Box 150 Firmware Update	98
12.9	PQ-Box License Update	99
13.	Data Converter.....	99
13.1	Change VT and CT ratio.....	99
13.2	Merging partial measurements into a combined measurement.....	100
14.	Online Analysis: PQ-Box & PC	101
14.1	Online - Oscilloscope Image	101
14.2	Online – FFT – 20,000 Hz.....	102
14.3	Online - Harmonics	104
14.4	Online - Interharmonics	105
14.5	Online – Frequency Bands 2 kHz to 9 kHz (Option)	106
14.6	Online – Direction of the Harmonics	107
14.7	Harmonic power and phase angle	109
14.8	Online Level-Time Diagram.....	110
14.9	Online - Measurement Value Details.....	111
14.10	Online - Phasor Diagram	112
14.11	Power Triangle	113
14.12	Online Status PQ-Box	114
15.	Measurement Data – PQ-Box 150	115
15.1	PQ-Box Measurement Procedure / Formulas.....	115
16.	Maintenance/Cleaning	124
17.	Calibration	124
18.	Disposal	124
19.	Product Warranty	125

1. User Guidance



1.1 Warnings

Types of Warnings

Warnings are distinguished according to the type of risk through the following signal words:

- **Danger** warns of a risk of death
- **Warning** warns of physical injury
- **Caution** warns of damage to property

Structure of a warning

	Nature and source of the danger
	 Actions to avoid the danger.
Signal word	

1.2 Notes




Notes on appropriate use of the device

1.3 Other Symbols

Instructions

Structure of instructions:

-  Guidance for an action.
- Indication of an outcome, if necessary.

Lists

Structure of unstructured lists:













 

- List level 1
 - List level 2

Structure of numbered lists:

- 1) List level 1
- 2) List level 1
 1. List level 2
 2. List level 2

2. Safety Instructions

2.1 Safety instructions

-  Follow the operating instructions.
-  Keep the operating instructions with the device.
-  Ensure that the device is operated only in a perfect condition.
-  Never open the device.
-  When opening the battery compartment, disconnect the power supply.
-  Ensure that only qualified personnel operate the device.
-  Connect the device only as specified.
-  Ensure that the device is operated only in the original condition.
-  Connect the device only with recommended accessories.
-  Ensure that the device is not operated outside the design limits. (See the technical data)
-  Ensure that the original accessories are not operated outside the design limits.
-  For measurements in short circuit resistant systems, ensure that voltage taps with integrated fuses are used.
-  Do not use the device in environments where explosive gases, dust or fumes occur.
-  Clean the device only with commercially available cleaning agents.



If the device is used in a way not specified by the equipment producer, the device protection will be impaired.

2.2 Meaning of the symbols used on the device



Nature and source of the danger! Read the safety instructions inside the manual!



Voltage ground



USB-interface



TCP-IP interface



CE marking guarantees compliance with the European directives and regulations regarding EMC.



The unit is fully protected by double or reinforced insulation.

IP65

6X = Protection against dust

 
Protection against water **X5** = Protection against water jets from any angle



AC voltage



DC voltage



Maximum allowed RMS voltage against earth potential

CAT IV

Category IV

3. Scope of Delivery/Order Codes PQ-Box 150

3.1 Scope of Delivery

- PQ-Box 150
- User Manual
- Case
- 3 red dolphin clips, 1 blue dolphin clip, 1 green dolphin clip
- 3 high-load fuses integrated in voltage leads
- USB cable, Ethernet cable
- AC socket adapter with country-specific adapters
- Wide range power supply with 2 x 4 mm safety plugs and integrated high-load fuses
- 2 pcs. 4mm safety connectors (to staple power supply and voltage leads to one dolphin clip)

3.2 Order Codes

Two options are available for the PQ-Box 150:

▶ **-Optional "IEC 61000-4-7 - 2 kHz bis 9 kHz" (B1)**

- Frequency measurement of voltage and current according IEC 61000-4-7 from 2 kHz up to 9 kHz.



With a licence code, the PQ-Box 150 can be upgraded with option B1

▶ **-Optional "Ripple control recorder" (R1)**

- Used for triggering and recording ripple control signals for voltages and currents.



With a licence code, the PQ-Box 150 can be upgraded with ripple control recorder.

CHARACTERISTICS	CODE
Fault recorder and network analyzer according to DIN EN 50160 and IEC 61000-4-30 class A Mobile power-quality-network analyzer and power-meter for low-, medium- and high voltage networks according to DIN EN-50160/IEC 61000-4-30 class A <ul style="list-style-type: none"> 4 GB micro SD card memory Slot for SD memory card 1GB to 32GB USB 2.0 and TCP/IP interface RS232 interface to connect radio clock or GPS clock Color Display IP65 rated enclosure Uninterruptible power supply USB- and TCP/IP cable set Connection cable with 4 mm banana plug for voltage (internal power fuse 50kA) 5 pcs. Dolphin clips Hard case for PQ-Box 150 and accessories Power supply AC/DC Evaluation software WinPQ mobil 	PQ-Box 150
Option <ul style="list-style-type: none"> Frequency measurement 2 kHz up to 9 kHz Ripple control analysis 	B1 R1
Operating manual and display language <ul style="list-style-type: none"> German English French Spanish Italian Dutch Czech Russian Polish 	G1 G2 G3 G4 G5 G6 G7 G8 G9
ACCESSOIRES	IDENT-NO.
<ul style="list-style-type: none"> Voltage tap on insulated cable; contact support 1 ~, connected for 35-240mm² 	111.7037
<ul style="list-style-type: none"> Cable set 4 phase, 1.5 mm², 2m long, 4x 16A fuse, 4x 4mm safety plugs 	111.7038
<ul style="list-style-type: none"> Network adapter connector socket for 1 ~; 4mm safety plugs 	582.0511
<ul style="list-style-type: none"> Calibration set for PQ-Box 100/150/200; calibration software and adapter box 	111.7039
<ul style="list-style-type: none"> Kensington lock - Lock for PQ-Box 150/200, 1.8 m length 	111.7032
<ul style="list-style-type: none"> Kit of magnetic voltage taps 	111.7008
<ul style="list-style-type: none"> DCF 77 radio controlled clock 	111.9024.01
<ul style="list-style-type: none"> GPS radio clock (230 V – RS 232) 	111.9024.47
<ul style="list-style-type: none"> SD memory card, 4GByte industry-standard 	900.9099.4
<ul style="list-style-type: none"> Replacement battery pack 	570.0011

Measurement / Functions	
PQ-Box 150	
Automatic event detection and evaluation standards for: EN50160 (2011) / IEC61000-2-2 / IEC61000-2-12 / IEC61000-2-4 (Class 1; 2; 3) / NRS048 / IEEE519 / IEC61000-4-30 Ed. 3 class A / IEC61000-4-7 / IEC61000-4-15	
Continuous recording with user defined interval of >3,500 parameters including::	
Voltage: min. max. average	
Current: min. max. average	
Power: P, Q, S, PF, cos phi, sin phi, tan phi	
Distortion power D; fundamental power	
Energy: P, Q, P+, P-, Q+, Q-	
Flicker (Pst, Plt, Ps5) (IEC61000-4-15)	
Unbalanced voltage, current	
Voltage harmonics according to EN 61000-4-30 Class A (average, max.)	Up to 50th.
Voltage harmonics 200 Hz frequency bands (IEC61000-4-7)	2 kHz up to 9 kHz
Current harmonics (average, max.)	Up to 50th.
Current harmonics 200 Hz frequency bands (IEC61000-4-7)	2 kHz up to 9 kHz
Phase-angle of voltage and current harmonics	Up to 50th.
THD voltage, current; PWHD, PHC	
FFT calculation of voltages and currents	DC up to 10 kHz
Ripple control signal 100 Hz up to 3,7 kHz	
Frequency 10sec, average, min, max	
10/15/30 min interval – P, Q, S, D, cos phi, sin phi ...	
Online mode for direct reading:	
Oscilloscope recorder	20.48 kHz
3D power triangle for active, reactive, apparent power and distortion power	
Voltage, current harmonics	DC up to 10 kHz
Inter harmonics (U, I)	DC up to 10 kHz
Direction of harmonics & phase angle of harmonics	
Trigger functions	
Manual trigger – trigger button	
RMS level trigger (U, I)	
RMS jump trigger (U, I)	
Phase shift trigger	
Envelope trigger	
Automatic trigger	
Interval trigger	
Option ripple signal voltage recorder – Option R1	
	100 Hz to 3,7 kHz

3.3 Technische Daten PQ-Box 150

4 voltage inputs (TRMS):	L1, L2, L3, N, PE
Maximum input voltage:	565V AC/800V DC L-N 980V AC/1380V DC L-L
Input Impedance:	10 M Ω impedance
4 current inputs (AC/DC):	1000 mV-input for Rogowski 330mV for current clamps
Impedance:	10 k Ω
Sampling frequency:	20,48 kHz
Synchronisation fundamental frequency:	45 Hz bis 65 Hz
Measurement intervall:	Free from 1 sec to 30 min
Memory	4 GByte standard
Mikro-SD card (industrie standard):	Optional bis 32 GByte
Interface:	USB 2.0 TCP/IP 100Mbit
Time synchronisation:	DCF77 or GPS clock (RS232)
Abmessungen:	202 x 181 x 40 mm
Weight:	1,0 kg
IP protection:	IP 65
IEC 61000-4-30 (Ed. 3):	Klasse A
Accuracy voltage and current input:	< 0,1%
Category:	CAT IV / 600V
Overvoltage	Pulse voltage = 12,8 kV 5 sec = 7,4 kV rms
A/D converter:	24 Bit
Temperature:	Funktion: -20°60°C Storage:-30°80°C
TFT-display:	100 x 60 mm
Power supply:	15V / < 10VA

Measurement quantity	Error limits according IEC 61000-4-30, Class A
Fundamental oscillation: r.m.s.	$\pm 0.1\%$ of U_{din} over 10% ~ 150% of U_{din}
Fundamental oscillation: Phase	$\pm 0.15^\circ$ over 50% ~ 150% of U_{din} over $f_{nom} \pm 15\%$
2nd ... 50th harmonic	$\pm 5\%$ of display over $U_m = 1\% \sim 16\%$ of U_{din} $\pm 0.05\%$ of U_{din} over $U_m < 1\%$ of U_{din}
2nd 49th interharmonic	$\pm 5\%$ of display over $U_m = 1\% \sim 16\%$ of U_{din} $\pm 0.05\%$ of U_{din} over $U_m < 1\%$ of U_{din}
Frequency	$\pm 5\text{mHz}$ over $f_{nom} \pm 15\%$ ($f_{nom} = 50\text{ Hz} / 60\text{ Hz}$)
Flicker, Pst, Plt	$\pm 5\%$ of display over 0.02% ~ 20% of $\Delta U / U$
Dip residual voltage	$\pm 0.2\%$ of U_{din} over 10% ~ 100% of U_{din}
Dip duration	$\pm 20\text{ ms}$ over 10% ~ 100% of U_{din}
Swell residual voltage	$\pm 0.2\%$ of U_{din} over 100% ~ 150% of U_{din}
Swell duration	$\pm 20\text{ ms}$ over 100% ~ 150% of U_{din}
Interruption duration	$\pm 20\text{ ms}$ over 1% ~ 100% of U_{din}
Voltage asymmetry	$\pm 0.15\%$ over 1% ~ 5% of display
Ripple control voltage	$\pm 5\%$ of display over $U_m = 3\% \sim 15\%$ of U_{din} $\pm 0.15\%$ of U_{din} over $U_m = 1\% \sim 3\%$ of U_{din}

4. External power supply

4.1 Requirement external power supply

Maximum power consumption incl. Backlight PQ-Box 150	Output power supply: Voltage: 15V DC Current: 0,58A
---------------------------------------------------------	-----------------------------------------------------------



In order not to reduce the device protection class and surge strength of the network analyzer, the following requirements must be met by the external power supply. If these details are reduced, so the entire PQ-Box is reduced to this lower requirement.

IP protection	IP 65
Temperature	Function: -20°60°C Storage: -30°70°C
Overvoltage category	EN61010-1 600V / CAT IV
surge	12kV 1,2/50 ysec
AC voltage	7,4kV 5 sec

Polarity of the external voltage supply with 15V DC



4.2 External power supply

Scope of Delivery PQ-Box 150:

- AC socket adapter with country-specific adapters (582.0509)
- Wide range power supply with safety plugs and integrated high-load fuses (111.7069)
- 2 pcs. 4mm safety connectors (582.2037)

The PQ-Box 150 is equipped with an extremely robust power supply unit. The power supply is designed for high noise immunity of 600V CAT IV and meets the IP65 protection class.

The PQ-Box can be supplied with energy directly at the measurement place and does not require a socket. The following voltage ranges for the power supply are possible: 100V to 440V AC or 100V to 300V DC.



In fuse carrier only 6.3mm x 32mm, 3 A, F, fuses are allowed, with a shut-off value of 50kA. Only fuses with the identical data must be used.

Suggestion: SIBA, Part.no. 7009463; 3AF

With two short adapter cables, the user has the option to staple the wide range power supply and the voltage leads the network analyzer to one dolphin clip.



Socket adapter with 4 mm safety banana plugs for voltage Measurement or connection of the wide range power supply at a socket.



Caution

Damage to the power supply by using wrong voltage

☞ supply device only with 100-440 V AC voltage.

☞ supply device only with 100-300 V DC voltage.

☞ do not supply the device directly from highly disturbed voltages.

(for. example, a frequency inverter output / caution at high transients or high sampling frequency)

5. Accessories for current measurement

- Standard accessories are automatically recognized by the meter.
- The conversion factor is automatically adjusted for the connected accessory.

5.1.1 Rogowski current clamps

- ▶ **Rogowski current clamp 4~: Ident-No. 111.7001**
- ▶ **Rogowski current clamp 4~: Ident-No. 111.7006**

Model 111.7001/6

Model	111.7001 Pro Flex 3000 4~	111.7006 Pro Flex 6000 4~
Current range	3,000 A AC RMS	6,000 A AC RMS
Measurement range	0-3300 A AC RMS	0-6,600 A AC RMS
Output voltage	85 mV / 1000 A	42.5 mV / 1000 A
Frequency range	1 Hz to 20 kHz	10 Hz to 20 kHz
Isolation voltage type	600 V AC / DC CAT IV	600 V AC / DC CAT IV
Accuracy (20 °; 50 Hz)	<50 A/0.1 % of the full scale value 50-3000 A/1.5 % of the measured value	<100 A/0.1 % of the full scale value 100-6000 A/1.5 % of the measured value
Angle error (45-65 Hz)	<50 A/2.5 ° 50-3000 A/1 °	<100 A/2.5 ° 100-6000 A/1 °
Position accuracy	<50 A/0.2 % of the full scale value 50-3000 A/1.5% of the measured value	<100 A/0.1 % of the full scale value 100-6000 A/1.5% of the measured value
Long Rogowski coils	610 mm	910mm
Diameter clamp head	9,9mm	9,9mm

- ▶ **Mini- Rogowski current clamp 4~: Ident-No. 111.7085**

Current range: 500A RMS; Accuracy: 1%

Rogowski clamp length = 220mm;

Diameter = 70mm; Rogowski clamp head = 6mm

Frequency range: 10Hz to 50kHz

Automatic current clamp factor detection.
In this example the PQ-Box set the clamp factor to 1

0d00:00:00 3802MB/3819MB			
DCF	no	Serial number	1651-101
Battery	32%	BOOT-Version	0.197
Date	24.01.2017	MCU-Version	3.008
Time	15:16:34	DSP-Version	4.015
Clamp detection	1	transients	0.012
		License	-

5.1.2 Current clamps

The MU-metal clamp is especially applicable for small current measurements on secondary transformers in medium- and high-voltage networks. High accuracy and small angle errors are combined.

▶ Mu-Metal Mini-Current clamps 3~: Ident-No. 111.7003

Current range: 10mA to 20A

Frequency range: 40Hz to 20kHz

▶ Mu-Metal Mini-Current clamps 4~: Ident-No. 111.7015

Current range: 10mA to 20A/200A AC RMS (two ranges)

Frequency range: 40Hz to 20kHz

Model 111.7015

Measurement range	20 A measurement range	200A measurement range
Current range	20 A AC RMS	200 A AC RMS
Measurement range	100 mA to 20 A RMS	1 A to 200 A RMS
Output voltage	10 mV/A	1 mV/A
Frequency range	40 Hz to 20 kHz	40 Hz to 20 kHz
Isolation voltage type	600 V AC	600 V AC
Accuracy	100 mA- 10 A/1.5 % of the measured value 10-20 A/1 % of the measured value >20 A/1% of the measured value	10-40 A/<2 % of the measured value 40-100 A/<1.5 % of the measured value 100-200 A/<1 % of the measured value
Angle error	100 mA- 10 A/2 ° 10-20 A/2° >20 A/2°	10-40 A/<2 ° 40-100 A/<1.5 ° 100-200 A/<1 °



200 A Measurement range (111.7015)

✎ Adjustment of the power converter factor to x10. For the clamp with two ranges the automatic factor detection of the PQ-Box does not work for the second.

▶ **Mu-Metal Mini-Current clamp 0...5A 1~: Ident-No. 111.7043**

Current range: 5mA to 5A AC RMS

Frequency range: 40Hz to 20kHz

Free current adapter set necessary

▶ **AC/DC Current clamp 1~: Ident-No. 111.7020**

AC/DC hall sensor clamp. Set with power supply and 2 pcs. 4mm connectors

Current range 60A/600A (two ranges)

Model 111.7020

Measurement range	AC/DC 60 A	AC/DC 600 A
Current range	60 A DC / 40A AC RMS	600 A DC / 400A AC RMS
Measurement range	200 mA to 60 A RMS	600 A RMS
Output voltage	10 mV/A	1 mV/A
Frequency range	DC to 10 kHz	DC to 10 kHz
Isolation voltage type		
Accuracy	0.5-40 A/<1.5 % +5 mV 40-60 A/1.5 %	0.5-100 A/<1.5 % +1 mV 100-400 A/<2 % 400-600 A(DC only)/<2.5 %
Angle error	10-20 A/<3 ° 20-40 A/<2.2 °	10-300 A/<2.2 ° 300-400 A/<1.5 °



600 A Measurement range (AC/DC)



Adjustment of the power converter factor to x10

5.1.3 Accessories for current measurement

▶ **Free Adapter set for connecting 4 clamps: Ident-No.: 111.7004**

Adapter set for connecting 4 clamps or shunt with 4mm connectors. 2m length



Power conversion factor

Current conversion correction factor; the default is 1 A/10 mV



Caution

Damage to the device from external current clamps

- ✎ Do not use clamps with A or mA output
- ✎ Avoid input voltages at the current inputs greater than 30 V

▶ **Current clamp cable extension: Ident-No.: 111.7025**

Cable extension 5 m for current clamps or Rogowski coils.

▶ **Current-shunt 2A: Ident-No.: 111.7055**

Measurement of AC- and DC-currents. Current range = 2A / 200mV output signal

6. Intended use



The product is exclusively for the measurement and evaluation of voltages and currents. The current inputs are mV-inputs.

7. Description

The Network Analyzers PQ-Box 150 & 200 are suitable for analysis in low, medium and high-voltage networks. They meet all the requirements of the measurement equipment standard IEC61000-4-30 Ed. 3 class A.

Functions:


- Voltage quality measurements according to EN50160, IEC61000-2-2 and IEC61000-2-4 for low and medium voltage networks
- Fault recorder functions
- Load analyses; energy measurements
- Ripple control signal analysis
- Transient analysis

8. Hardware PQ-Box 150

8.1 PQ-Box 150 Hardware

8.1.1 Overview PQ-Box 150

Top panel view

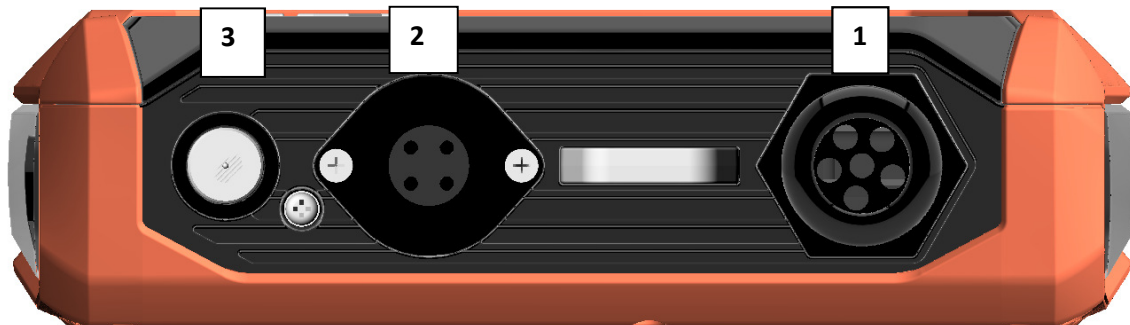


- 1) Securely connected voltage inputs
 - L1 (red + label L1)
 - L2 (red + label L2)
 - L3 (red + label L3)
 - N (blue + label N)
 - Measurement ground (green + label E)
- 2) Current clamp connection (7-pin plug)
- 3) 15 V DC power supply

Front panel - keypad



 Measurement Start / Stop



Manual trigger



Setup




Panel with 5 keys for scrolling and changing setup parameters

Bottom view




- 1) Kensington lock
- 2) TCP/IP interface
- 3) USB 2.0 interface

Side view

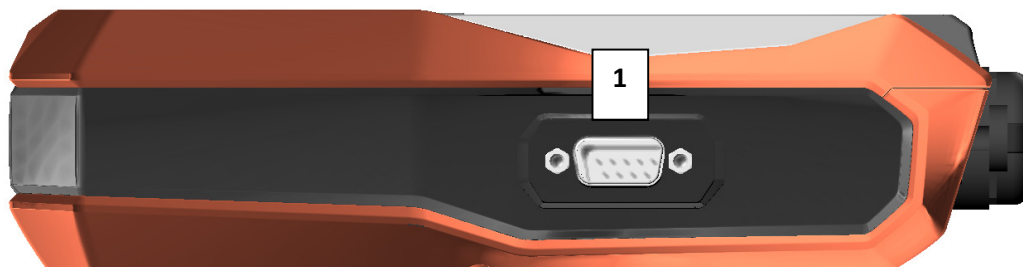

- 1) RS232 interface – for connecting a DCF77 or GPS radio clock

Rear view

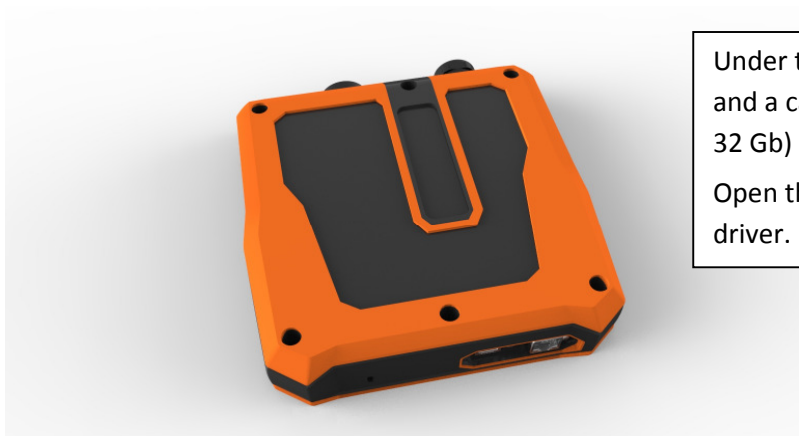

Under the cover you find a battery pack and a card slot for a micro SD card (1 Gb to 32 Gb)
Open the screws with a torx (TX15) screw driver.

9. Battery management and micro SD card

9.1 Micro SD card

To replace the microSD card, please note the following:

- The PQ-Box 150 support microSD cards up to a maximum size of 32 GB.
- We recommend the use of an industrial micro-SD card, to reach the temperature range from -20 ° C to +50 ° C of the PQ Box.



- Insert the micro SD card into the appropriate slot in the correct direction. The correct direction is defined by a notch on the microSD card.

9.2 Accumulator

The PQ Box 150 are equipped with a lithium-ion battery and intelligent charging electronic.

The aim is to achieve a long battery life time. At 80% capacity, the PQ-Box can run approximately 6 hours without mains supply.

The Li-ion battery is first charged to 100% when the threshold (75%) is reached. This has a very positive effect on the total life time of the batteries.

Aging: At high temperature and the battery is full, the cell oxidation developed particularly rapidly. This condition may occur, f. e. in notebooks when the battery is fully charged and at the same time, the device is in operation. The optimal charge level is between 50% and 80% during storage.

- Charging stops when exceeding a battery temperature of 50 ° C
- Start charging only when the battery temperature is less than 45 ° C
- Warning Battery capacity below 7%
- PQ-Box shutdown when battery capacity <5%

▶ **Display state of charge battery:**

state of charge \geq 100% --> four green bars
state of charge \geq 75% --> three green bars
state of charge \geq 40% --> two green bars
state of charge \geq 20% --> one red bar
state of charge < 20% --> empty




We recommend storing the battery of the PQ-Box at 15 ° C with a charge of 60% - this is a compromise between accelerated aging and self-discharge. The battery of the PQ-Box should be recharged to approximately 55-75% every six months, due to the natural self-discharge, in order to ensure a long-term service life.

10. Network connection PQ-Box 150

10.1.1 Direct connection to a 3-phase low voltage network

Connection in a 3-phase 4-wire AC network

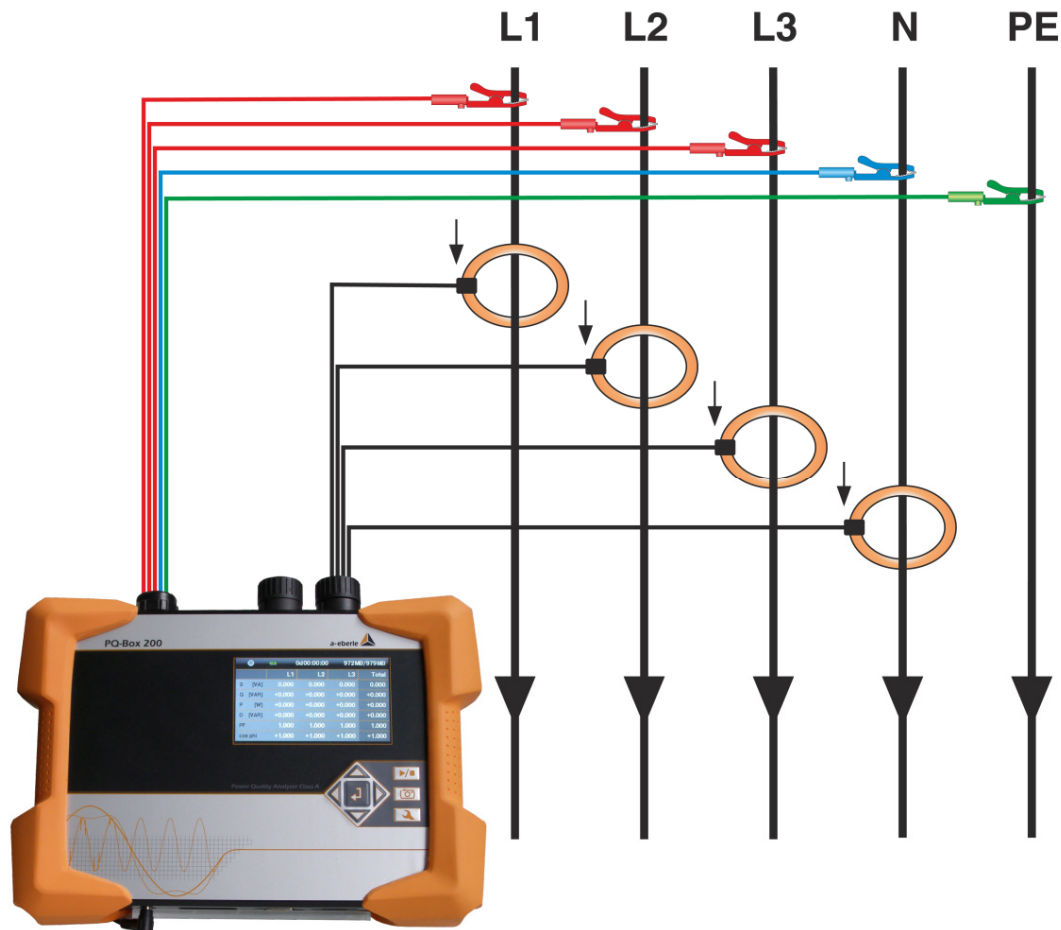


Voltage connection

- 👉 Ensure that voltage measurement cable PE is connected for every measurement.
- 👉 If no PE connection is available, connect E and N together.
- 👉 Ensure that switching (4-wire) is selected. (Setting via display or software)

10.1.2 Connection to a single-phase low voltage network

Connection for single-phase measurements

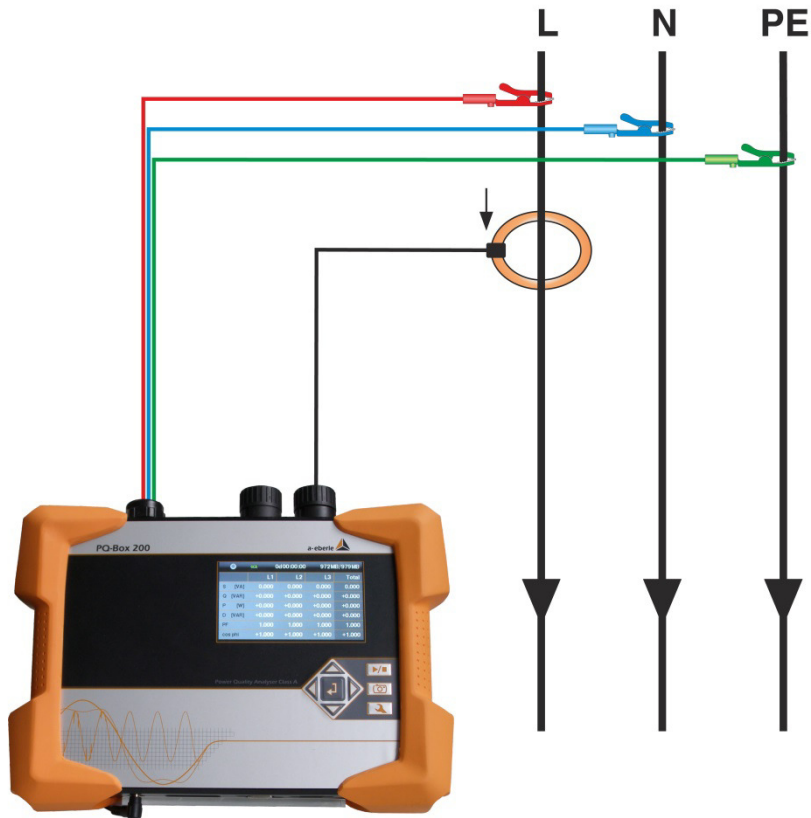


Voltage connection

- 👉 Ensure that voltage measurement cable E is connected for every measurement.
- 👉 If no PE connection is available, connect E and N together.
- 👉 Ensure that switching “1-wire system” is selected. (Setting via display or software)

☒ 1-wire System

- 👉 Not necessary to connect phases L2 and L3 for voltage and currents in single phase measurement.

10.1.3 Connection to an isolated network

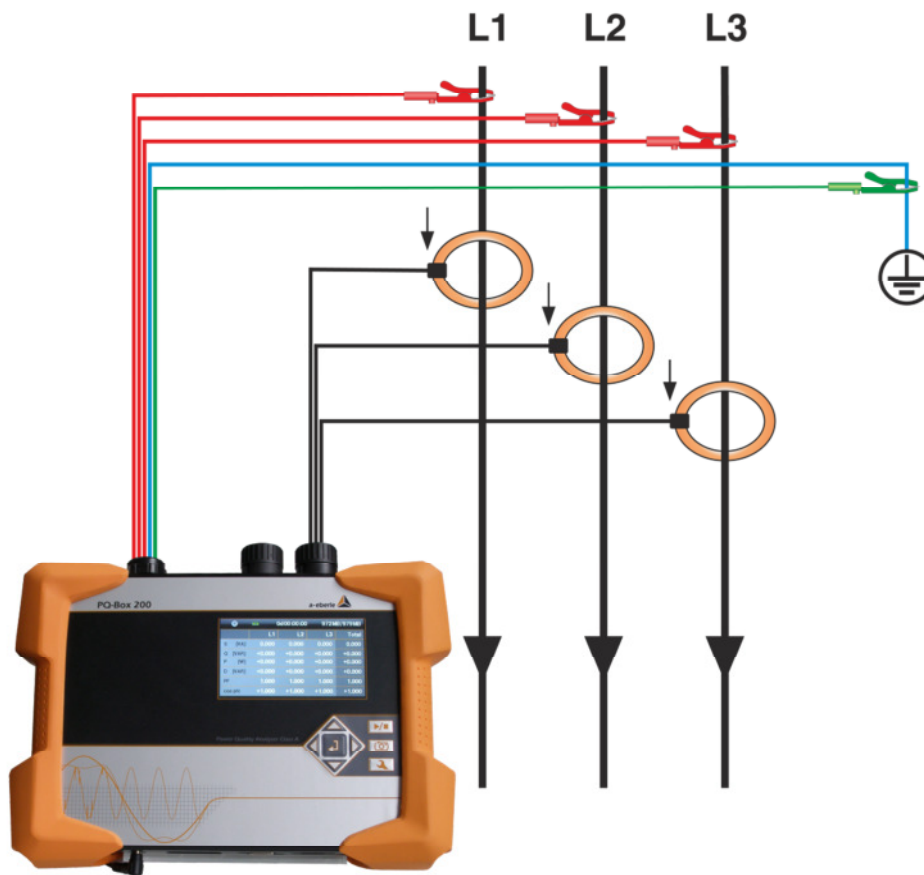

Connections

- ✎ Connect terminals E and N together and connect it to a ground potential.
- ✎ Ensure that switching (3-wire) is selected. (Setting via display or software)




The input impedance of a measuring input is 10 mega ohms.





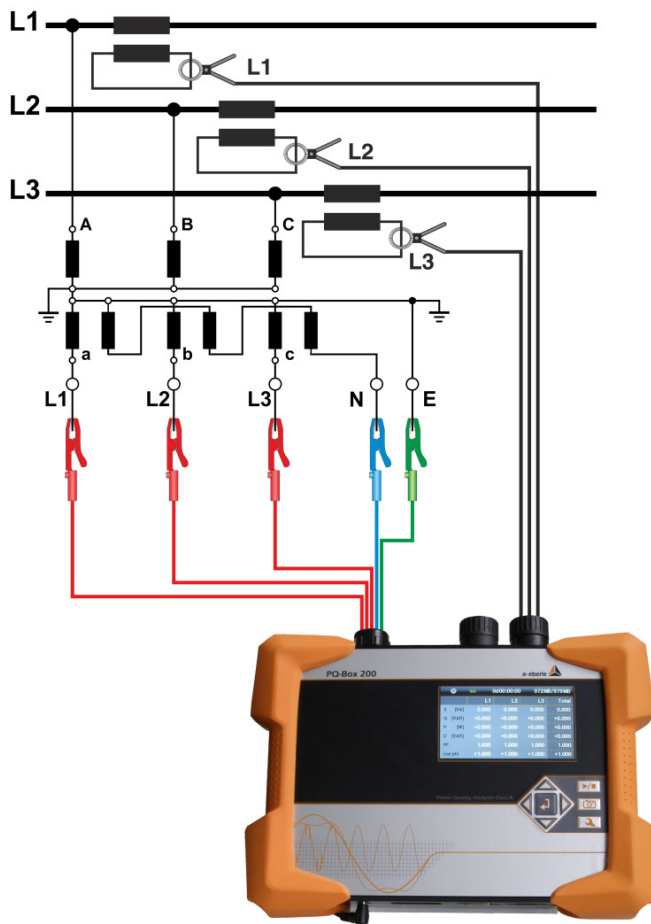

If the high-resistance ground connection is not desired, it is also possible to interconnect the terminals E and N and to hang open. (No connection to any ground)

In 3-wire connection the 4th voltage channel and the 4th current channel will be calculated from the device. (Voltage Neutral to Ground and current of the star point)

10.1.4 Connection to secondary transformer



Connections


-  Ensure that voltage measurement cable E is connected for every measurement.
-  If no PE connection is available, connect E and N together.
-  Ensure that switching (3-wire) is selected. (Setting via display or software)
-  Set the voltage transformer ratio
-  Enter the nominal conductor-conductor voltage
-  Set the current transformer ratio



In 3-wire connection the 4th voltage channel and the 4th current channel will be calculated from the device. (Voltage Neutral to Ground and current of the star point)

Special circuit types

Configurations such as a V connection or aron connection can be parameterized.

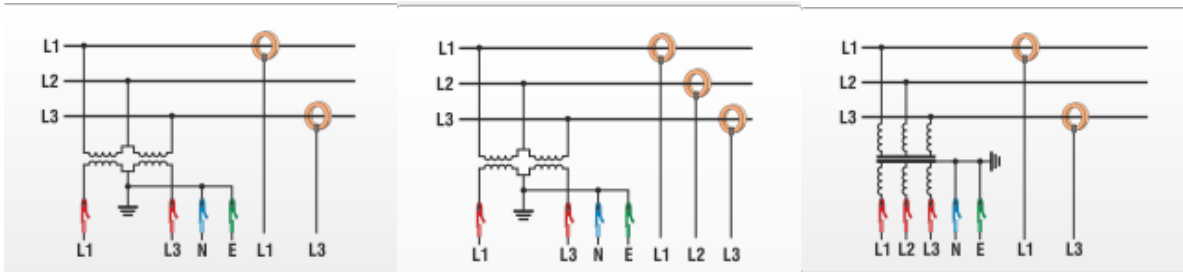



- V connection (parameterization through the evaluation software or device setup)
- Aron connection (parameterization through the evaluation software or device setup)

Isolated networks

Connections


- ✎ Connect voltage measurement conductors E and N to ground
- ✎ If this is not desired in the plant due to isolation monitoring, the E and N connections can be connected together and remain free without connection.
- ✎ Ensure that switching (3-wire) is selected.
- ✎ Set the voltage transformer ratio
- ✎ Enter the nominal conductor-conductor voltage
- ✎ Set the current transformer ratio

10.1.5 Display



 Pressing the right and left arrows on the directional pad  changes the page of the Display.

Display page 1

1	2	3	4	
		0d00:00:00	944MB/956MB	
	L1	L2	L3	Total
U [kV]	1.331	0.000	0.000	
I [A]	0.000	0.000	0.000	0.000
P [W]	+0.000	+0.000	+0.000	+0.000
Phi [°]	+0.000	+0.000	+0.000	
F [Hz]	0.000			

- 1) Recording "On" is indicated by a flashing red light 
- 2) Display state of charge battery
 state of charge $\geq 100\%$ --> four green bars
 state of charge $\geq 75\%$ --> three green bars
 state of charge $\geq 40\%$ --> two green bars
 state of charge $\geq 20\%$ --> one red bar
 state of charge $< 20\%$ --> empty
- 3) Current recording duration
- 4) Free space for recording / SD card size

Display page 2

		0d00:00:00	701MB/952MB
Recorder			Count
Oscilloscope Rec.			0
RMS Recorder			0
Signal voltage			0
PQ events			0
Transient Events			0

→ Display the number of PQ events and fault recorder during the current measurement

Display page 3

0d00:00:00 944MB/956MB				
	L1	L2	L3	Total
S [VA]	0.000	0.000	0.000	0.000
Q [VAR]	+0.000	+0.000	+0.000	+0.000
P [W]	+0.000	+0.000	+0.000	+0.000
D [VAR]	+0.000	+0.000	+0.000	+0.000
PF	1.000	1.000	1.000	1.000
cos phi	+1.000	+1.000	+1.000	+1.000

→ Display of the apparent, active and reactive power with sign prefix (individual phases and total performance)

Display page 4

0d00:00:00 944MB/956MB				
	L1	L2	L3	N
THD [k%]	2.408	0.000	0.000	0.000
THD I [%]	0.000	0.000	0.000	0.000
	L12	L23	L31	
U [kV]	1.337	0.000	1.337	
Ep [Wh]	-0.000	0.000	0.000	-0.000
Eq[VARh]	0.000	0.000	0.000	0.000

→ Display of the current and voltage THD (individual phases, neutral conductor)

→ Display of the conductor-conductor voltages

→ On the last two lines, the active and reactive power are displayed from the start of the measurement.

Display page 5

0d00:00:00 3802MB/3819MB			
DCF	no	Serial number	1651-101
Battery	32%	BOOT-Version	0.197
Date	24.01.2017	MCU-Version	3.008
Time	15:16:34	DSP-Version	4.015
Clamp detection	1	Transients	0.012
		License	-

→ Date, time, version, current firmware version and time synchronization display.


→ After changing display pages once more, display page 1 appears again.

Graphic display PQ-Box

With the keypad by pressing, "up" or "down" you get into the graphic screens.



Graphic display 1: Phasor diagram voltage and current

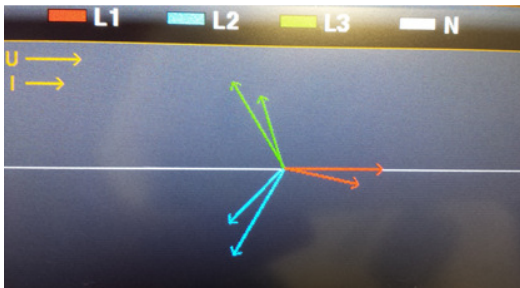


Scroll to the right or to the left with the keypad to reach the oscilloscope pictures.

Graphic display 2: oscilloscope voltage and current



Graphic display 3: oscilloscope voltage

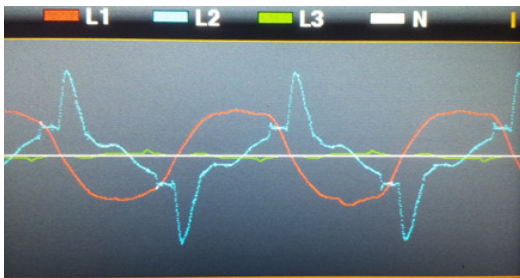
Graphic display 4: oscilloscope current



With the "Enter" key it is possible to get back to the value view.

10.1.6 Starting a measurement

 Press the  key to stop or start measuring.

- Recording "On" is indicated by a flashing red light 



For a positive display of the active power

Ensure that the arrows on the current clamps point towards the consumer.

10.1.7 Manual Trigger

 Press the  key to set manual trigger.

→ Store the current voltages and currents with:

- Oscilloscope recorder
- 10ms RMS recorder
- Transient recorder (only PQ-Box 200 with option Transient)

The recording length and sampling frequency from transient measurement depends on the recorder configuration selected in the software.

0d00:04:01 2332MB/3780MB	
Rekorder	Anzahl
Oszilloskop Rekorder	3/4
RMS Rekorder	2/2
Rundsteuersignal	0/0
PQ Ereignisse	174
Transiente Ereignisse	0/0



Example 3/4:

4 fault records were triggered while 3 fault records been stored on the SD card.

- 1) The number of the Oscilloscope record increases by 1.
- 2) The number of the RMS record increases by 1.

Example:

To evaluate the network perturbation of a consumer in the network:

-  Before starting the consumer, activate manual trigger.
-  After starting the consumer, activate manual trigger.

It is possible to compare all the images in the software. The images provide information about the cause of the network perturbations

10.1.8 Time synchronisation using the RS232 interface

- The RS232 interface is equipped as standard for a DCF77 or GPS receiver connection.
- Automatic synchronisation of the measurement equipment after connecting receivers. If synchronisation is lost, the PQ-Box 200 runs with an internal quartz clock.
- A detected external clock is shown on the equipment display on display page 5.


10.1.9 PQ-Box 150 Setup



Press the  key to open Setup.

Press this key again to exit the Setup Menu.

→ Display page changes to the Main Menu.

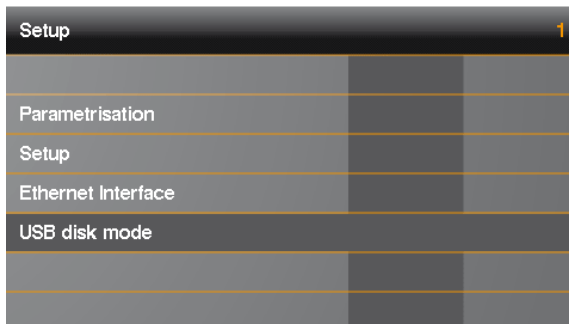

- 1) Change the network data parameters (measurement interval, nominal voltage, conversion factors)
- 2) Basic equipment settings (display language, date, time)
- 3) TCP-IP interface settings
- 4) Change USB interface of PQ-Box to mass storage (very fast USB data transfer to PC)



Parameterisation page 1

Setup Parametrisation		1 2
Measurement Cycle [sec]	1	
Net type	4 conductors	
Nominal Voltage PP [V]	400	
Nominal Voltage PE [V]	230,940	
Voltage Converter L	1	
Voltage Converter N	1	

- 1) Freely adjustable measurement interval: 1 sec to 30 min (default interval setting = 600 sec)
Settings < 1 min should only be used for short measurements.
- 2) Switch between 1~; 3~ and 4~ conductor networks.
In a single phase network, only phase L1, neutral and earth will be measured.
In a 3-conductor system, all evaluations of the standard reports are calculated from the phase-phase voltages.
In a 4-conductor system, all evaluations of the standard reports are calculated from the phase-ground voltages.
Additional network types are: V-connection, split phase and delta high leg
- 3) Nominal voltage refers to the contractually agreed phase-to-phase voltage.
All recorders refer to this value as a percentage.
For the low voltage: 400 V applies.
- 4) Voltage converter corresponds to the ratio between the primary and secondary voltage.

 scroll with the left/right control keys

Parameterisation page 2

Setup Parametrisation		1 2
Current Converter L	1	
Current Converter N	1	
Aron network	off	

- 1) Current converter corresponds to the ratio between the primary and secondary current.
- 2) Switch Aron connection for 2-current converter measurement on and off


Changing parameters

Setup Parametrisation		1 2
Measurement Cycle	0600	
Nominal Voltage	400	
Voltage Converter L	1	
Voltage Converter N	1	
Current Converter L	1	
Current Converter N	1	



Press

 → the colour of the selected parameter changes to orange



Select position

→ the value can now be changed with the up and down arrows



Press

to accept the changed value

→ the new value appears in the Menu

Settings page 1

Setup Setup		1
Language	English	
Date	12.01.2012	
Time	02:08	
Continuous mode	off	
Memory limitation (680MB)	off	

- 1) Change the display language
- 2) Change the date
- 3) Change the time
- 4) Continuous mode (active = PQ-Box run permanent)
- 5) Memory limitation to 680 MB – active or no limitation of memory (Memory management)

10.1.10 Keypad Lock



👉 Press and hold the Setup key for > 5 sec while a measurement is in progress.

→ Keypad lock active.

👉 Then press and hold > 5 sec.

→ Keypad lock inactive.

It is possible to see the measurement readings when the keypad is locked.

The Setup menu and screen pages are locked.

10.1.11 Password Protection and Interface Lock


In order to protect the PQ-box from unauthorized access and manipulation during measurement task the device provides an interface lock mode with password (PIN) protection. The interface lock can be activated in the setup menu and is protected with a corresponding four-digit numerical password, a PIN consisting of any combination from 0000 to 9999.

Setup Setup		1 2
Date	14.12.2016	
Time	09:28	
Continuous mode	off	
Memory limitation (680MB)	off	
Interface Lock	active	
Change PIN		

The PIN (default factory setting is 0000) is set in the menu item Change PIN.

Setup Change PIN		1
old PIN	****	
new PIN	****	
new PIN repeated	****	

If the interface lock is active, the password protection locks the device automatically one minute after starting a measurement. With the keypad lock function (see description above) the device can be locked with password protection manually. In locked mode the USB and Ethernet interface are deactivated and a display lock is active.

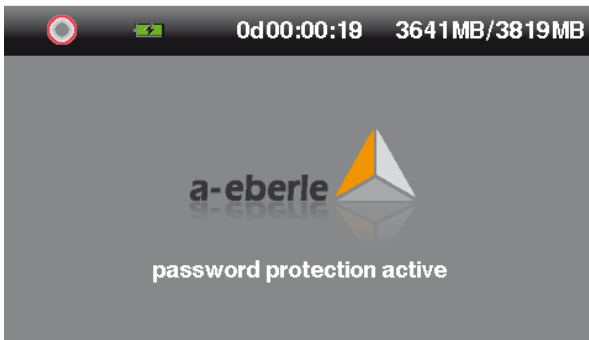

In active interface lock mode the device can only be unlocked with the correct PIN. After more than eleven incorrect PIN entries, user access is locked permanently and the device has to be sent to the A. Eberle support address.


10.1.12 Memory management

So that the recorder data does not fill the whole memory when a too sensitive or incorrect trigger level is set and thus the long-term recording is stopped, at the start of the measurement the PQ Box 200 reserves a maximum size of the free space for all fault records. If this memory size is reached, this can be seen in the display by an asterisk * after the number of fault records.

e.g. Display: Oscilloscope recorder = 1312*

If the memory of the SC card is filled 100%, the message "**Memory full**", appears in the display.

Two possibilities to run the memory management:

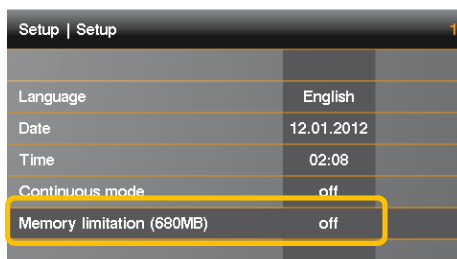

- **Memory limitation (680MB) = off**

On single data file can get up to the maximum size of 3,41GB. If the data size is reached then the PQ Box automatically starts a new measurement file. This will be repeated until the maximum size of the microSD memory card is reached (f. e. 32 GByte). The size of all recorders is limited to 1GB in one 3,41GB file.

Warning: This type needed for evaluating the 64bit WinPQ mobile software.

- **Memory limitation (680MB) = active**

The PQ-Box memory size for one measurement file is limited to 680 MByte, to avoid problems with Windows 32bit systems. If the data size is reached then the PQ Box automatically starts a new measurement file. This will be repeated until the maximum size of the microSD memory card is reached (f. e. 32 GByte).


The size of all recorders is limited to 300 MB in one 680 MB file.

The data converter provides the opportunity to connect several measurements to one measurement file, if needed. (see chapter "Data Converter")

10.1.13 Delete device memory

It is possible to clear the device memory of the PQ-Box using the front panel keys while the PQ-Box is booting up.

👉 Connect the power supply

👉 If "A. Eberle logo" appears hold enter key  for some seconds

→ Message appears: "Please press start button to clear the device memory"

👉 Press record button



→ Device memory is formatted

→ PQ-Box is starting

10.1.14 Continuous mode without power supply

PQ-Box 200

If the function „continuous mode“ is active, the PQ box don't stop running if the power supply is pinched off. The PQ Box can work up to 6 hours with battery supply. You can start and stop records or measure in online mode.

At 7% capacity, about 10 minutes before turning off, a warning message appears on the display.

Start without power supply

PQ-Box 150 can be started directly without power supply.

👉 press start button  > 10 seconds

→ PQ-Box 150 starts without power supply via battery.


→ PQ-Box 150 is now in the "Battery continuous operation"

Deactivate battery mode via the setup menu "Off".



10.1.15 TCP-IP settings

In “Setup/ Ethernet Interface” you can change all parameters for IP interface.

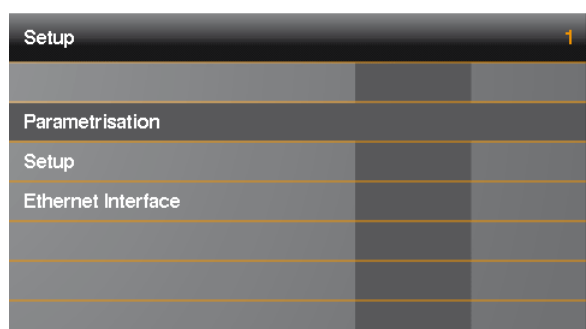

This example shows the basic settings for the PQ Box 150 interface. All parameters can be changed with the control keys on the box.

Setup Ethernet Interface	
IP address	192.168.56.94
Subnet mask	255.255.0.0
Gateway	192.168.0.8
TCP port	5001



To accept the changed parameters, the device must be restarted

11. Evaluation software WinPQ mobile

The evaluation software WinPQ mobile supports the PQ-Box 100, PQ-Box 150, PQ-Box 200 and PQ Box 300 **portable network analyzers**.

It was developed in collaboration with power supply companies with the goal of creating an easy-to-use and adaptable solution for the evaluation of power quality parameters in energy distribution networks.

The network analyzer is suitable for network analyses in low, medium and high voltage networks.

The purpose of the program is to process the stored power quality measurement data and fault records for the viewer and display them on the PC screen in an appropriate manner. To this end, the program provides tools for the efficient selection of stored data and a set of graphical and tabular presentations of the parameters of power quality according to European standard **EN50160, IEC61000-2-2 or the standard for industrial networks IEC61000-2-4**.

- ✓ Automatic reporting according to the compatibility levels of EN50160, IEC61000-2-2 or IEC61000-2-4.
- ✓ Information about faults in the network by means of fault records
- ✓ Management of many measurements
- ✓ Data acquisition of long-term data and events
- ✓ Statistical long-term analyses
- ✓ Correlation of events and different measurement data
- ✓ User-friendly, user-oriented evaluation

11.1 SW – Installation / Removal / Update

System Requirements:

Operating system: Microsoft Windows 7 (32-bit & 64-bit)


Microsoft Windows 8

Microsoft Windows 10

Memory, at least 2 GB

The WinPQ mobile software is available free of charge in 32-bit and 64-bit versions.

 
Installation of the evaluation software:


To start the installation of the evaluation software, place the installation CD in your CD-ROM drive. If the Autostart function is activated, the installation program starts automatically. Otherwise, go to the root directory of your CD-ROM drive and start the program by double-clicking the file  SETUP.EXE .

The installation complies with the Windows standard including uninstalling the program using the "software" system control. The installation location of the program (target directory) can be freely selected during installation.



Install the software in a directory in which you also have read and write rights.



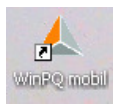The start icon  is created automatically on your PC's Desktop.

Uninstalling the software using the system control:

The components are removed from the PC using the Windows "System control".

Under "Software", select "WinPQ mobile" and delete the evaluation software with the "Remove" button.

All parts of the program, including the generated links, are completely removed after a single confirmation. Before uninstalling the program, the components launched must be closed.

Software Update

The evaluation software and all updates are available free of charge on our website under the category "Power Quality":

www.a-eberle.de




Please update both, the software and the firmware of the PQ-Box 150, to avoid problems.


11.2 Software Wizard

If you install the software on a new PC, after the first opening, a setup assistant will start. Customer and country-specific settings are automatically queried and copied into the software. All settings can be changed later in the Software General Settings.


● Select language

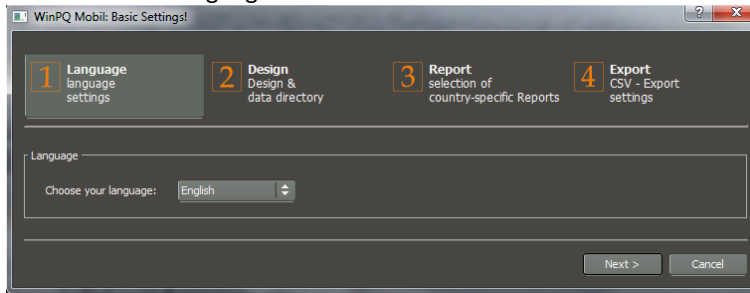


● Select software design (Windows design or Black Magic design)

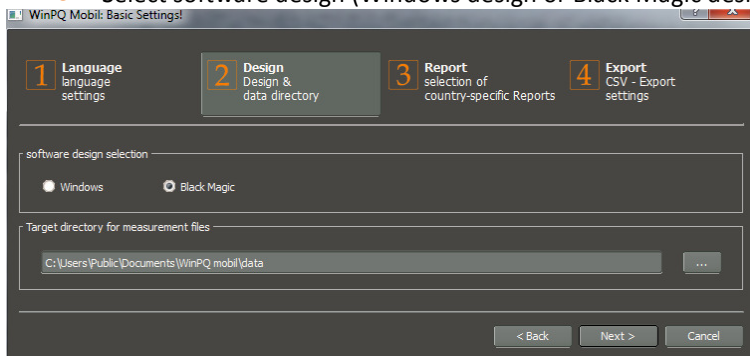

● Setup country specific standard settings

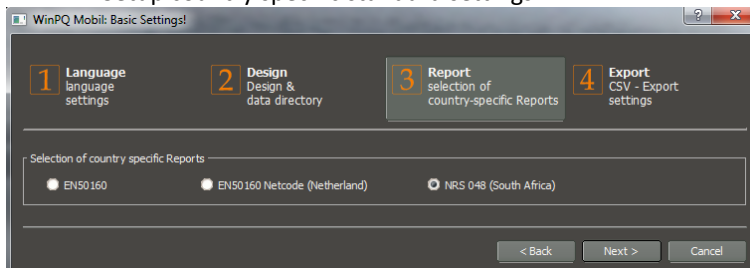

● General settings for data export

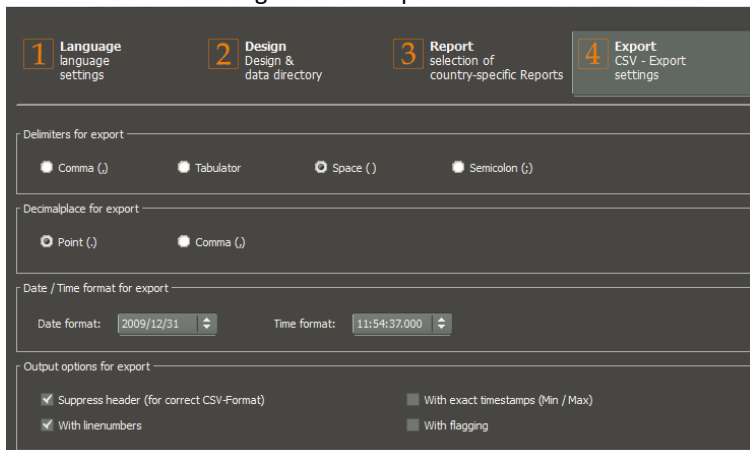

11.3 WinPQ mobile start screen


Start screen of the evaluation software WinPQ mobile

- Open a measurement on the disk
 - Load the measurement data from the PQ-Box

- Change the PQ-Box setup

- Online measurement with the PQ-Box


Data converter

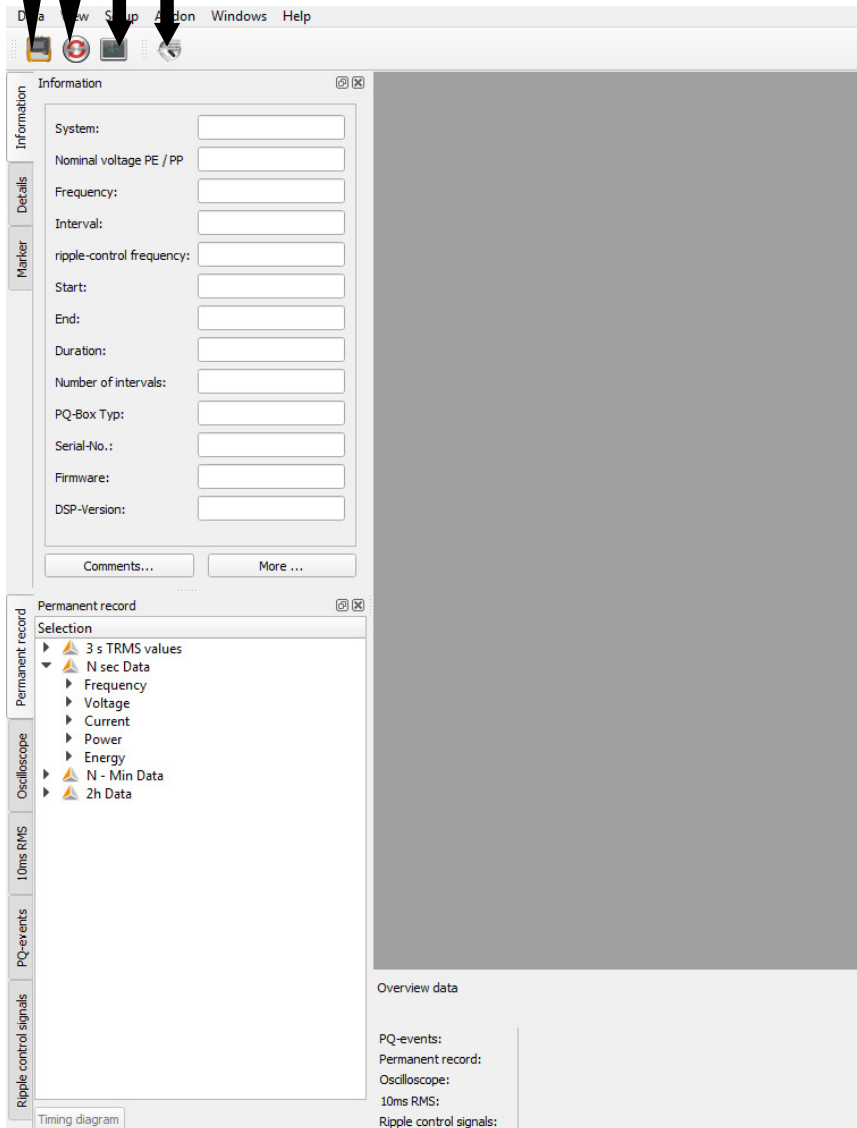

11.3.1 General Software Settings


Changing the language

The evaluation software language can be changed in the "Settings" menu. After changing to a new language, the software must be restarted for the change to take effect.

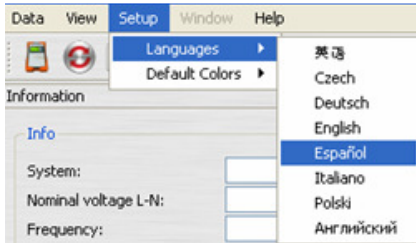


Changing the colours of lines

Here, each measuring channel can be assigned a specific colour. There are two different settings possible: Windows native and Black magic. For print always the colours Windows native are used.

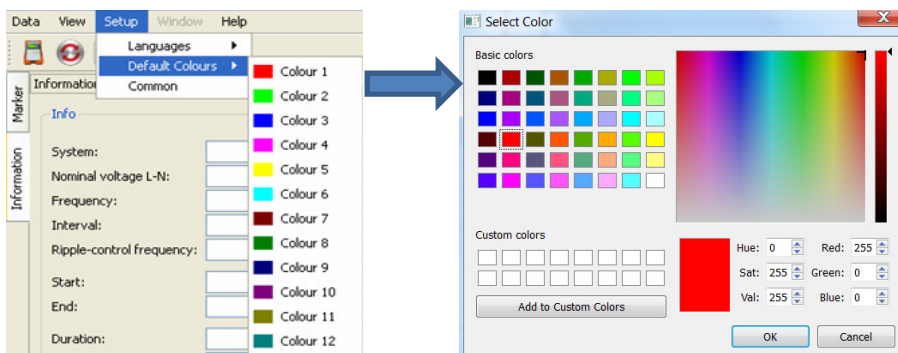

Export Preferences:

Basic settings for data export

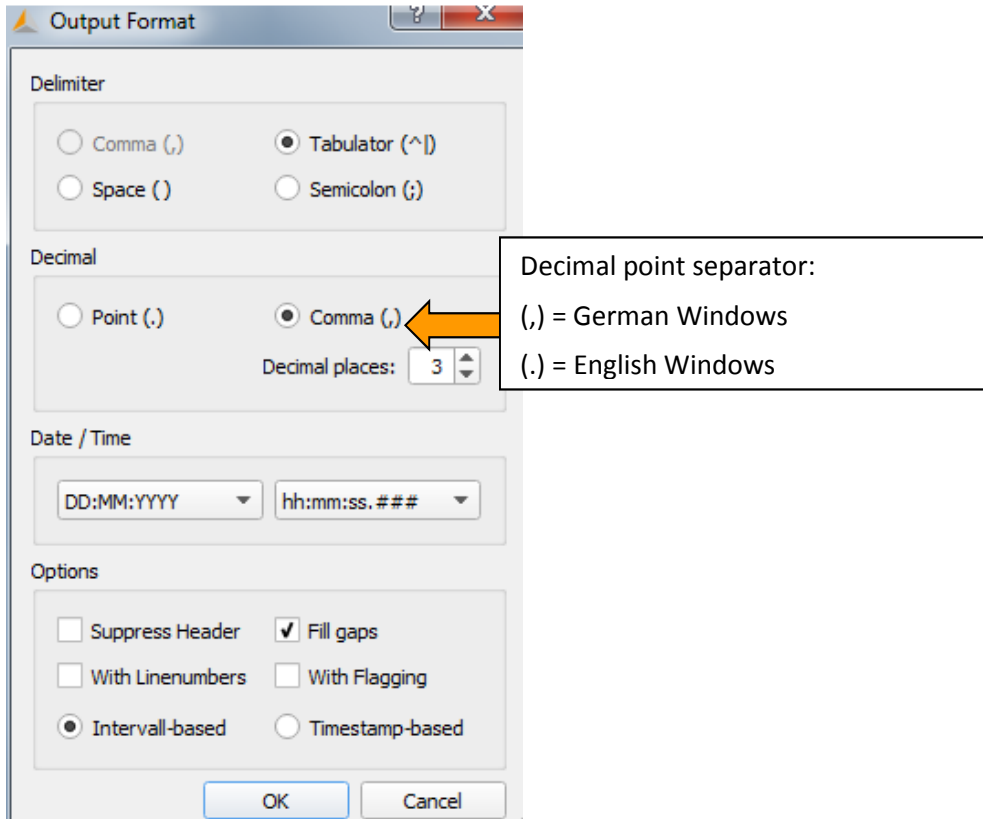

Output Format

Delimiter

☐ Comma (,)

☒ Tabulator (^I)

☐ Space ()

☐ Semicolon (;)

Decimal

☐ Point (.)

☒ Comma (,) →

Decimal places: 3

Date / Time

DD:MM:YYYY

hh:mm:ss.###

Options

☐ Suppress Header

☒ Fill gaps

☐ With Linenumbers

☐ With Flagging

☒ Intervall-based

☐ Timestamp-based

OK Cancel

Decimal point separator:

(,) = German Windows

(.) = English Windows

Options:

- Suppress Header – Information like device number, measuring interval and comments will be not in the header of the export file
- Fill gaps – gaps inside the measurement data based on interruption will be filled with 0.
- With flagging: show flagged data according IEC61000-4-30 in export data file
- With exact time stamp: all extreme values are stored with the exact time stamp in milliseconds. For data export format it can be selected to receive the exact time stamp or one time stamp
- Export with exact time stamp: All ½ period extreme values are recorded by the meter with exact time stamps in milliseconds. For the data export it is now possible to choose whether the extreme values should be displayed in milliseconds in the export or whether all min, medium and maximum values should have a common time interval in the export.

General

Change the logo in printouts and headers

Set the header for automatic standard

Two predefined comment fields can be set. These will be shown in any printout, as well as in the standard report.

Insert your own logo for printouts and PDF

1) **Extended standard report:**
This feature extends the standard report for all PQ event information and the ITIC graphic

2) **Standard report including tan phi**
The inclusion of the tan phi in the standard report can be switched on or off here

5 text boxes for the standard report and all printouts can be specified here

Statistic Limits	EN Statistics	Upper Limit
Frequency:	99,50%	100,00%
Voltage 4-wire-systems:	95,00%	100,00%
Voltage 3-wire-systems:	99,00%	100,00%
Harmonics / THD:	95,00%	100,00%
Voltage unbalance / Flicker:	95,00%	100,00%

Header Labels

Header Label 1: Kunde:

Header Label 2: Adresse:

Header Label 3: Kontakt:

Header Label 4: Telefonnummer:

Header Label 5: Grund:

Options

☐ Include harmonics in Report

☐ Include tanphi in Report

☒ Extended Report


These text boxes appear below the "Comment" icon as template text and can be filled here with Information about the measurement.

Carbon dioxide calculation

Co2

Factor: 550 g/kWh


The energy supply can be displayed in WinPQ mobil in carbon dioxide. The calculation factor can be set here.

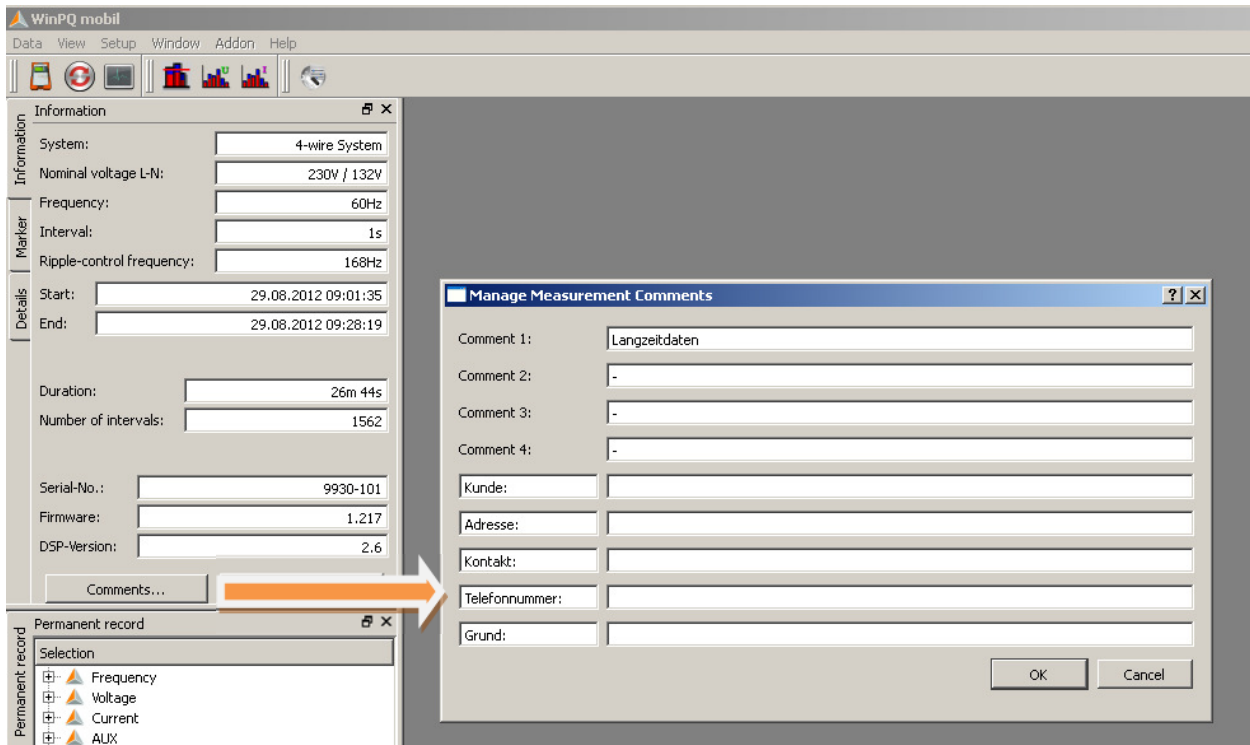

Harmonics settings

Under "Settings / Harmonics Settings", the type of presentation can be set.

- ▶ Voltage harmonics: Display as "Volt" or "% of the fundamental oscillation"
- ▶ Current harmonics / THD, TDD current:
Display as "Ampere", "% of the fundamental oscillation" or "% of the nominal current"

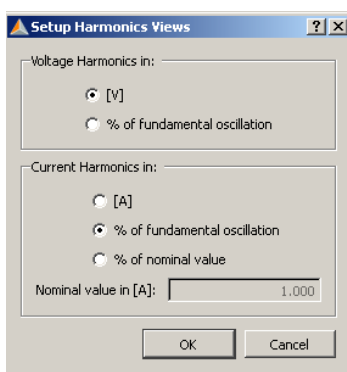


All diagrams and bar graphs in the software will use the selected units (volts or %; amps or % etc.).

Changing the WinPQ mobile design

WinPQ mobile offers two different designs for screen displays.

- Windows native
- Black magic

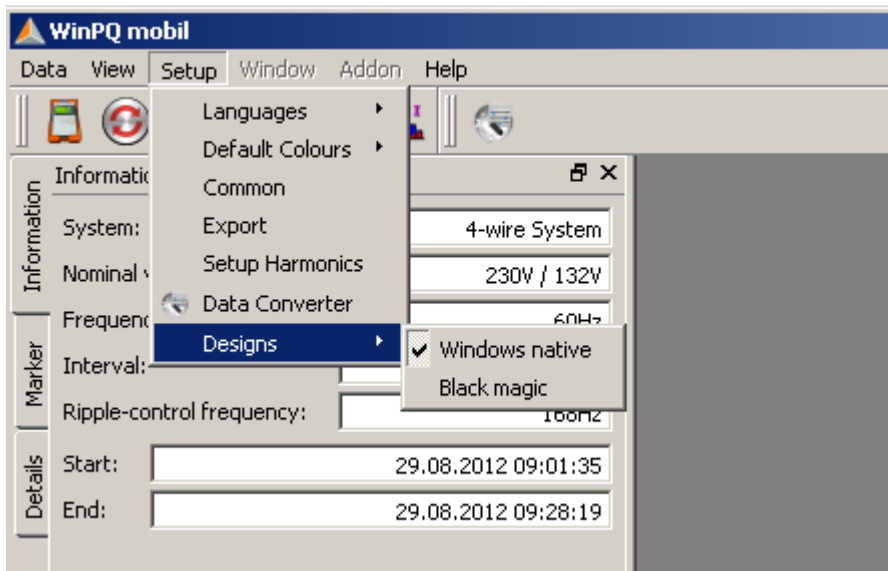


Example: "Black magic" design with a black background




With the "Black magic" setting, all print tasks are printed in "Windows native".

11.3.2 TCP-IP Settings in WinPQ mobil

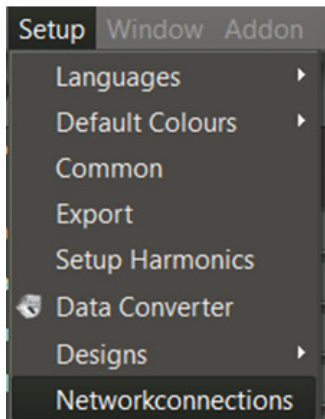

In the analysis software in "Settings / Network Connections", multiple network connections from PQ-Box devices are stored.

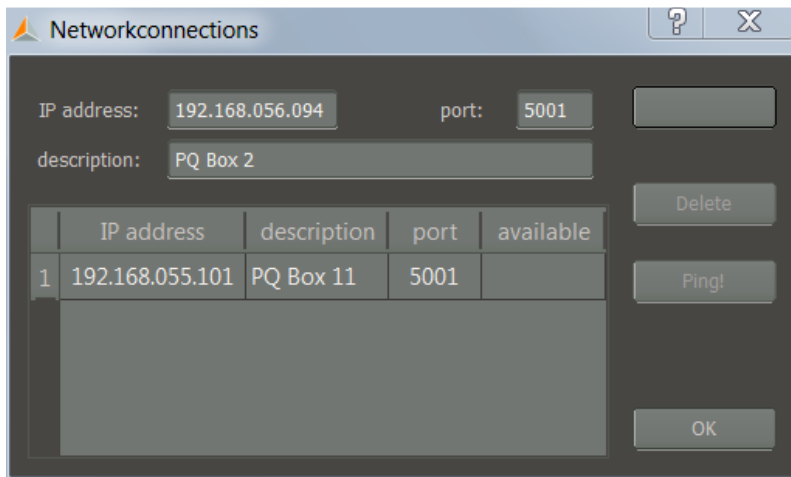



- IP address, port number, and a free name of the analyzer can be stored.
- Pick up with "Add" this connection to the software menu.
- "Delete data" deletes the selected IP address from the drop-down menu.
- With "Ping" an IP data connection can be tested.


WinPQ software try to connect always to existing connections. In the software in setup, online data or read out measurement data available devices are selectable.

11.4 Transferring measurement data from the PQ-Box to the PC


Connect the power quality analyzer to the PC with the USB cable or TCP-IP connection.

When the PQ-Box is connected the  icon can be used to display all of the available measurement data within the PQ-Box memory.

Press the icon  to read the memory of the device.

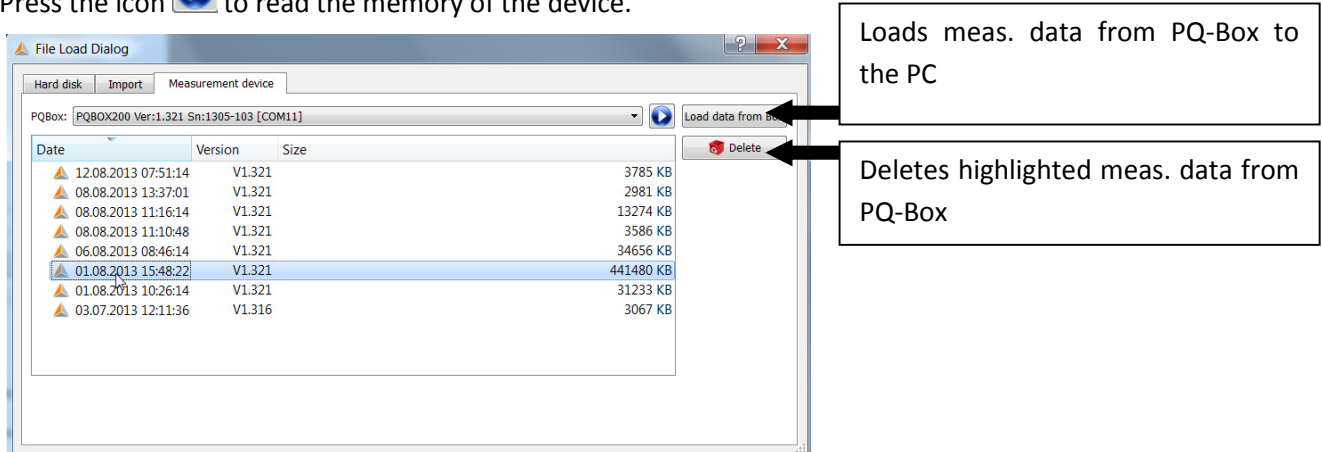

After reading the data from the device to the PC hard drive, the message "Should the measurement data in the PQ-Box now be deleted?" is displayed.

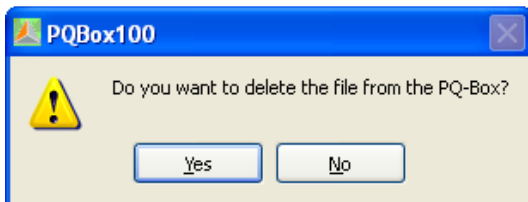


Yes – The data will be deleted and the occupied memory in the device is freed.

No – The measurement data remain stored in the device and can be downloaded from other PCs.



We recommend deleting the measurement data from the device's memory after downloading so that the memory is not filled unnecessarily.

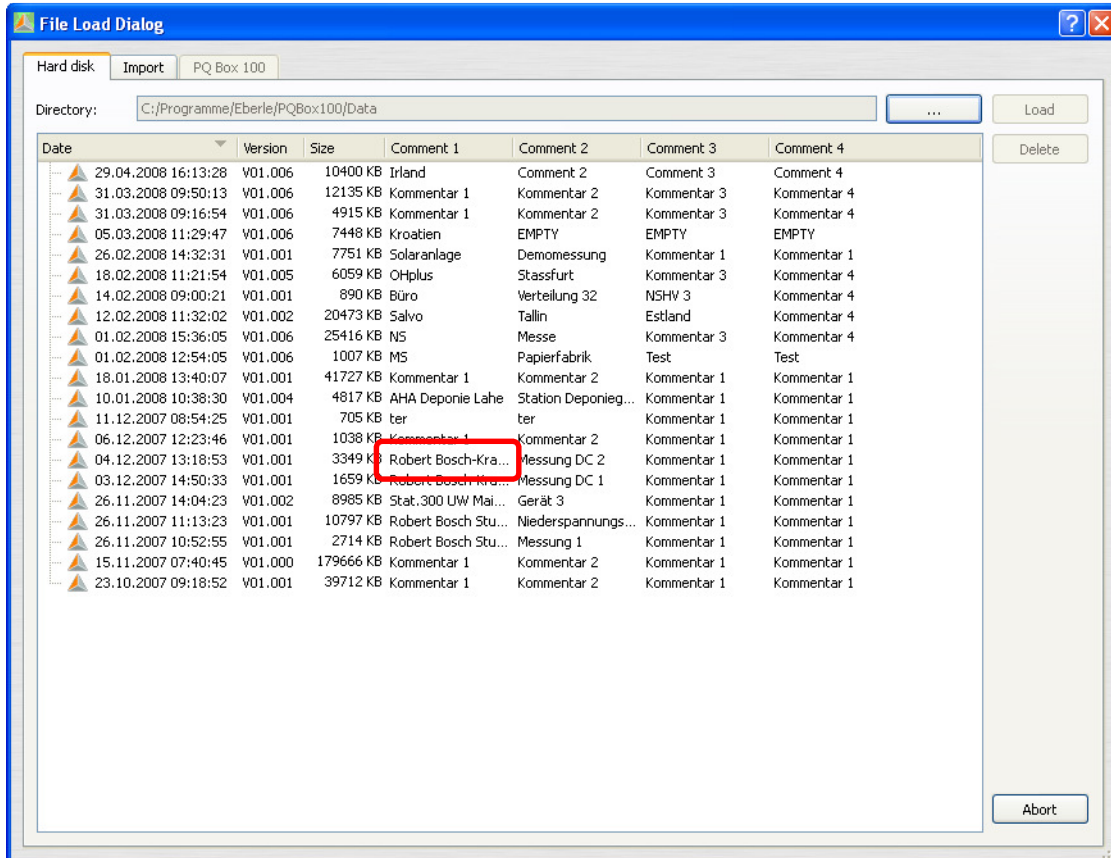


In this view, four comments can be attached to each measurement. If no comment has been entered yet, this field contains "-". Double-click a comment field to edit it.

All four comment fields appear in the printed reports.


11.4.1 Data folder in Windows Explorer

If a text is entered in the first comment field of a measurement file, the folder containing the measurement data will also be called this in Windows Explorer.

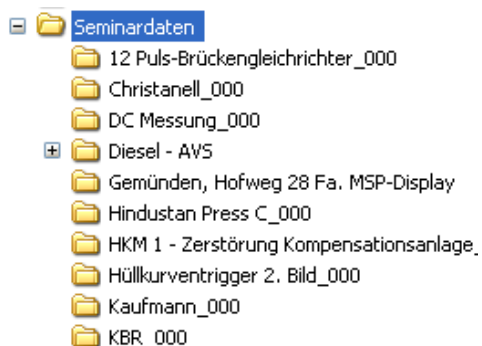


11.4.2 Transferring measurement data while a measurement is in progress

To transfer measurement data from the device after a measurement has been started, the measurement is stopped briefly during the data transfer. Confirm the question "Should the recording be stopped?" with "Yes"

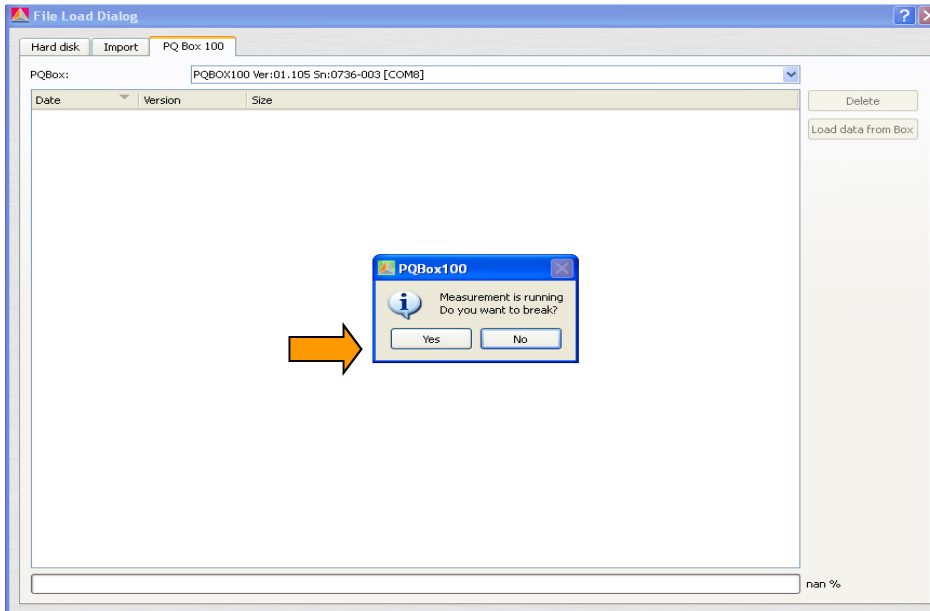


Select the measurement data and press the "Transfer data" icon.

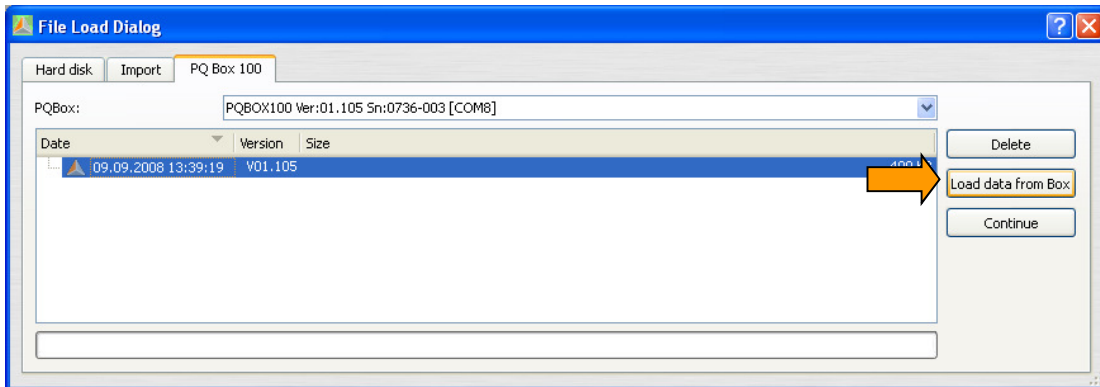


The measurement is resumed by pressing the **"Continue"** button.

All of the measurement data are available at the end of the recording in a complete measurement file.

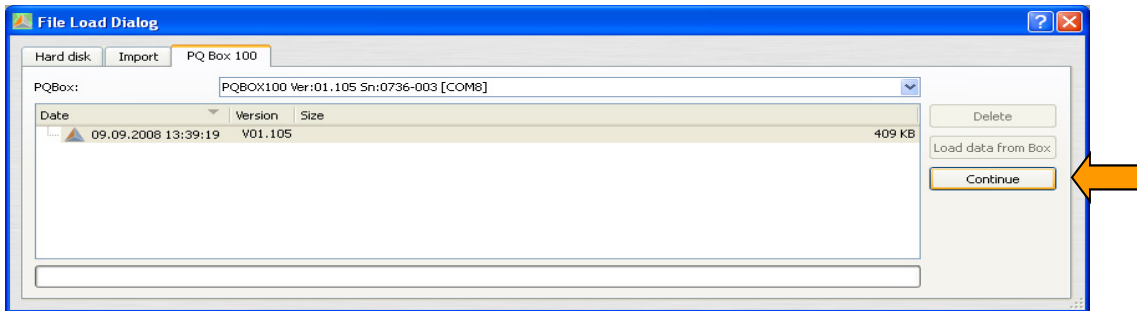


11.4.3 Fast data transfer in USB disc mode

If PQ Box 150 is in the setting "USB disc mode", huge data files can be transmitted very quickly to the PC.

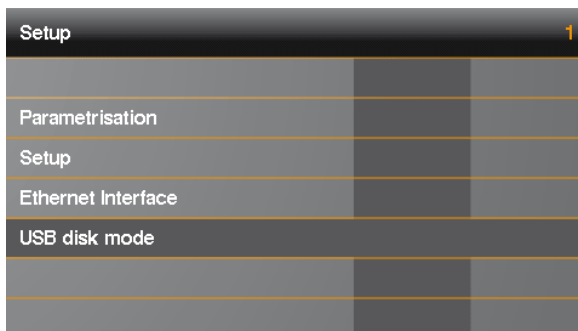



Use the tap "Import" the PQ-Box appears as a disk. In the folder "DATA" are all measured data of the device. Select one or more measurement files and copy them via the icon "Import" on the PC.

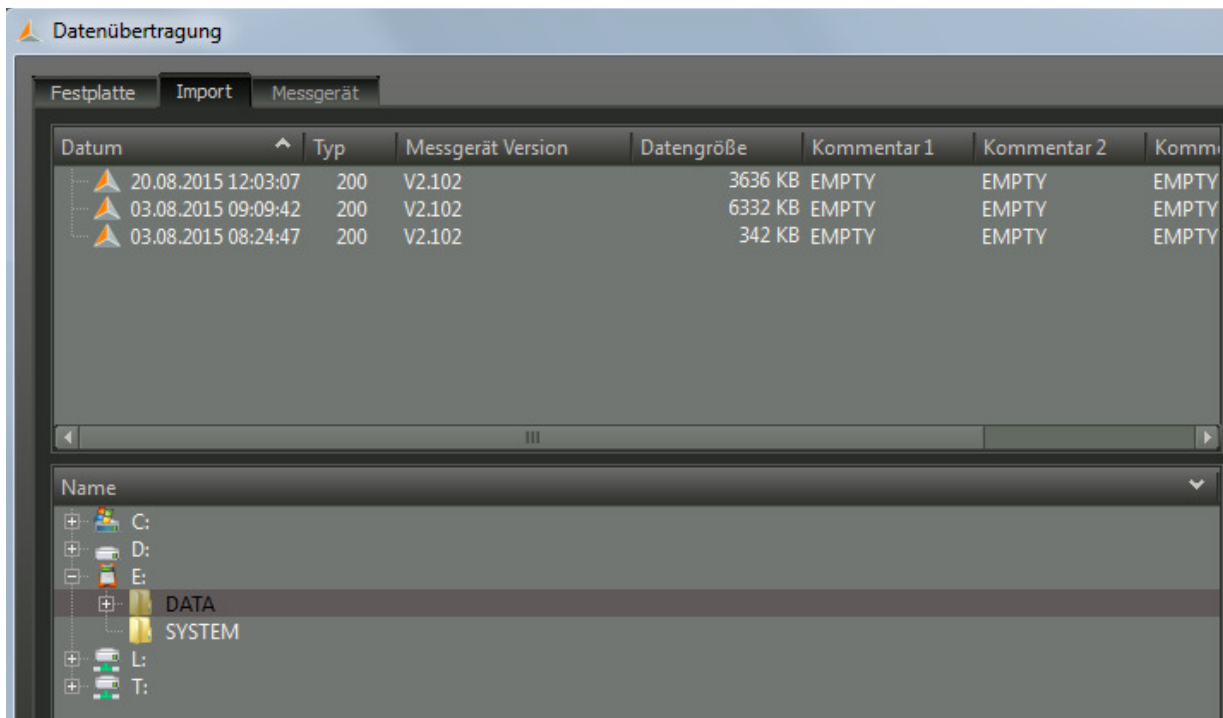


11.5 Evaluation of Measurement Data

All measurements available on the PC are listed in the "Hard disk" folder.

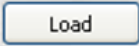The various measurement data can be sorted by "Date" and "Comment" in ascending or descending order. The  button opens the selected measurement for analysis.


The  icon removes the measurement data from the PC's hard disk. More than one measurement can be selected. You will be asked for confirmation before the data is deleted.

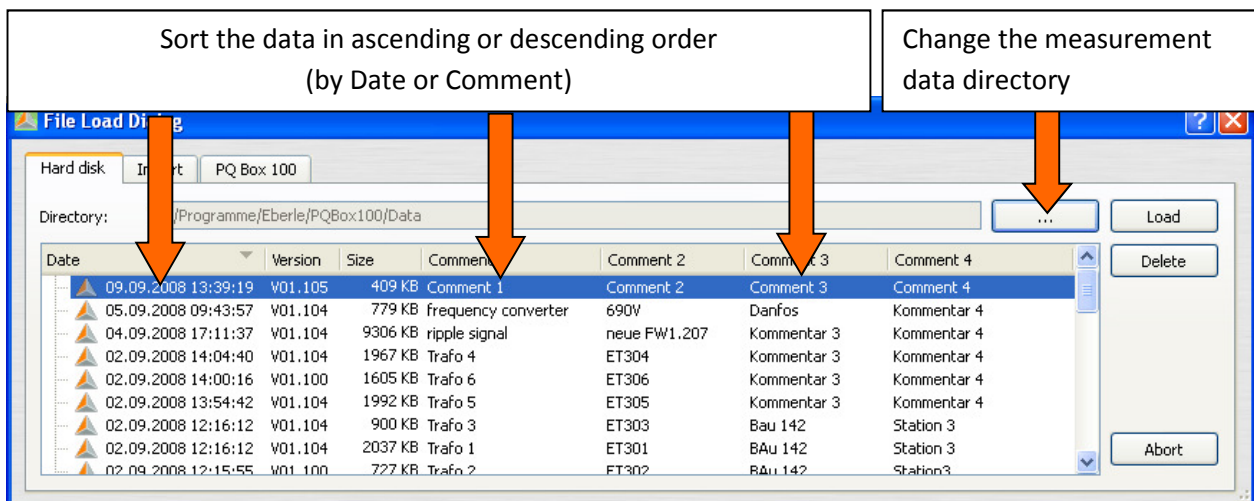

With double mouse click on "Comment" you can change the text for the measurement file.

The measurement data can also be opened by double-clicking without the WinPQ mobile start via Windows Explorer. By opening the measurement data folder, you can load "12 Puls-

Brückengleichrichter_000" by double-clicking on one of the icons as shown in the example below. The WinPQ mobile starts automatically and opens the selected measurement.

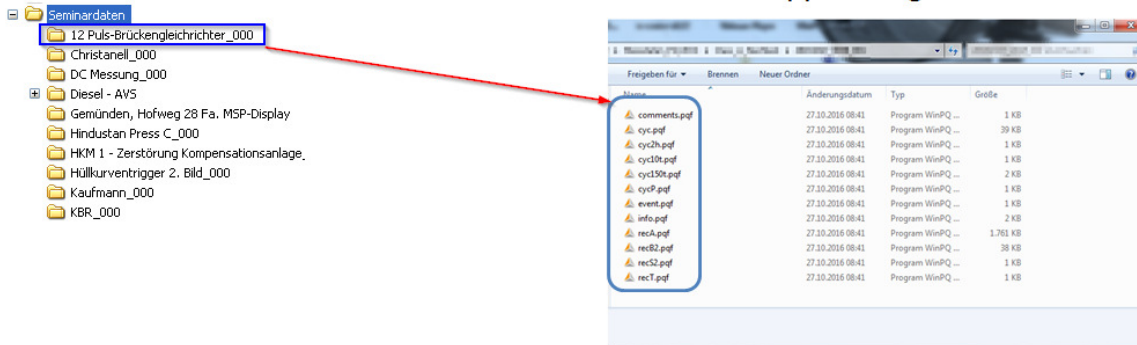

11.5.1 Change the measurement data directory


The button  opens an Explorer window.

Here the folder is assigned in which the measurement data are located.




Do not select the measurement data folder directly but only the parent folder.

Any number of folders with measurement data can be created. These can be located anywhere in the network. Example: A folder for "Measurement data 20kV 2015".

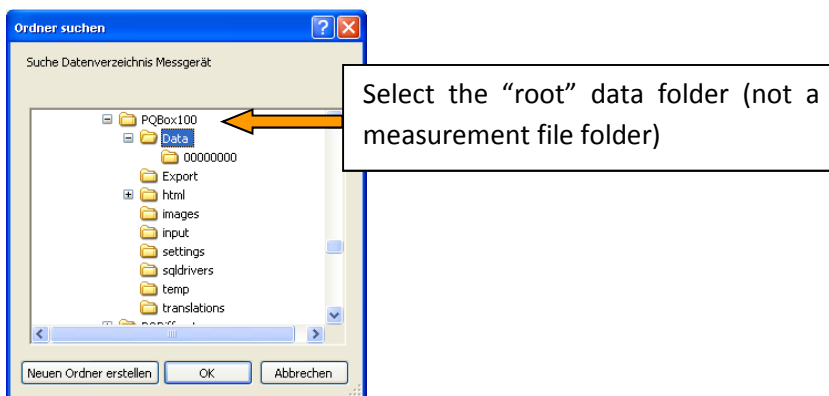

After opening a data file, the information for the whole measuring period is displayed. In the "Evaluation Period" field you can select a specific time period within the measurement and only evaluate this.


Example: A measurement was carried out over 10 days. The standard report is however to be created over a week. By pressing the "1 week" button, the measurement data is limited to one week.

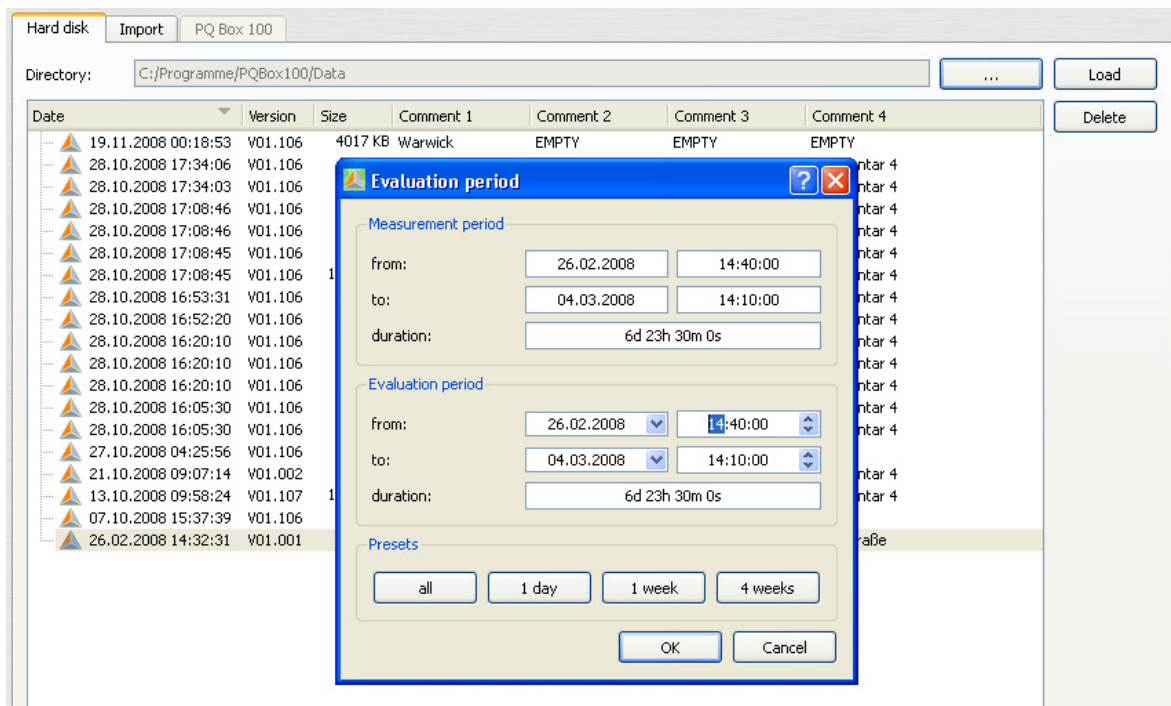

After pressing the "OK" button, the specified period of the selected measurement is opened.

All of the measurements and analyses shown below have been prepared with demo data, which are included in every installation.

Start screen after loading one measurement:

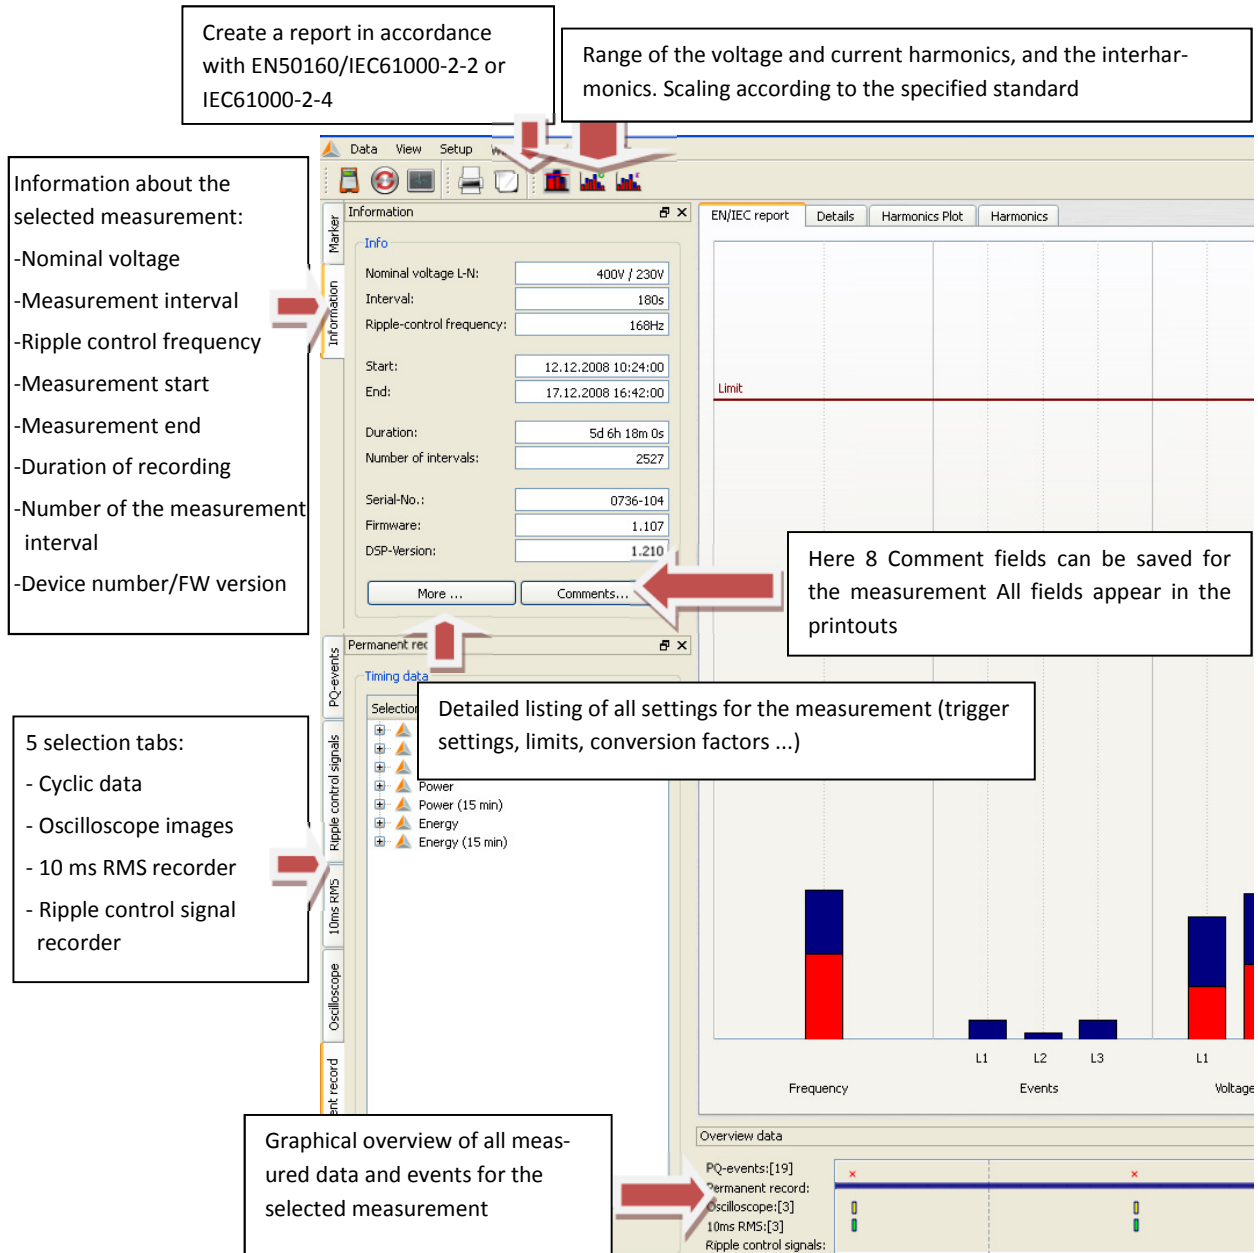

Create a report in accordance with EN50160/IEC61000-2-2 or IEC61000-2-4

Range of the voltage and current harmonics, and the interharmonics. Scaling according to the specified standard

Information about the selected measurement:

- Nominal voltage
- Measurement interval
- Ripple control frequency
- Measurement start
- Measurement end
- Duration of recording
- Number of the measurement interval
- Device number/FW version

EN/IEC report

Here 8 Comment fields can be saved for the measurement All fields appear in the printouts


5 selection tabs:

- Cyclic data
- Oscilloscope images
- 10 ms RMS recorder
- Ripple control signal recorder

Detailed listing of all settings for the measurement (trigger settings, limits, conversion factors ...)

Graphical overview of all measured data and events for the selected measurement

When the mouse pointer is over an icon for the oscilloscope or RMS recorder, information will be displayed for this event.

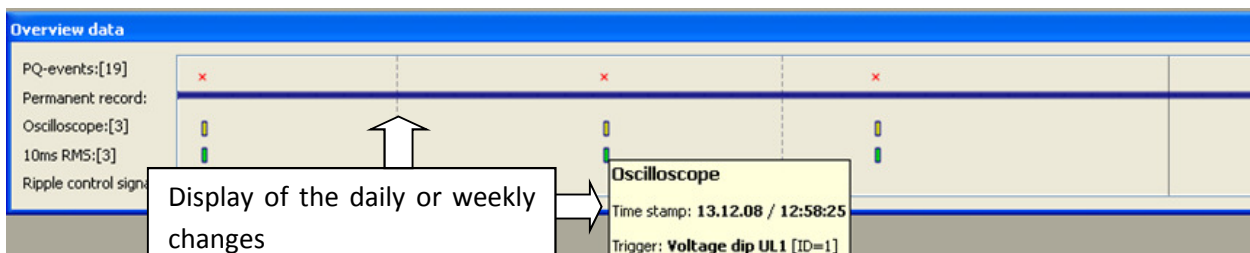

Overview data

PQ-events:[19]

Permanent record:

Oscilloscope:[3]

10ms RMS:[3]

Ripple control signals:

Display of the daily or weekly changes

Oscilloscope

Time stamp: 13.12.08 / 12:58:25

Trigger: Voltage dip UL1 [ID=1]




Clicking on a sign of an oscilloscope recorder, RMS recorder, ripple signal recorder or transient recorder automatically opens the corresponding fault description.

11.5.2 Standard evaluation for EN50160 and IEC61000-2-2



The button gives you a quick overview of all voltage measurement value, with regard to the compatibility levels of the specified standard. In the basic settings, this is the EN50160 and IEC61000-2-2 combined. Depending on the size of the measurement data, the creation of these statistics may take few seconds. In a week of measurements, more than 300,000 measurement values are compared with the corresponding performance level and displayed graphically.

Figure: Example of an EN50160/IEC61000-2-2 evaluation

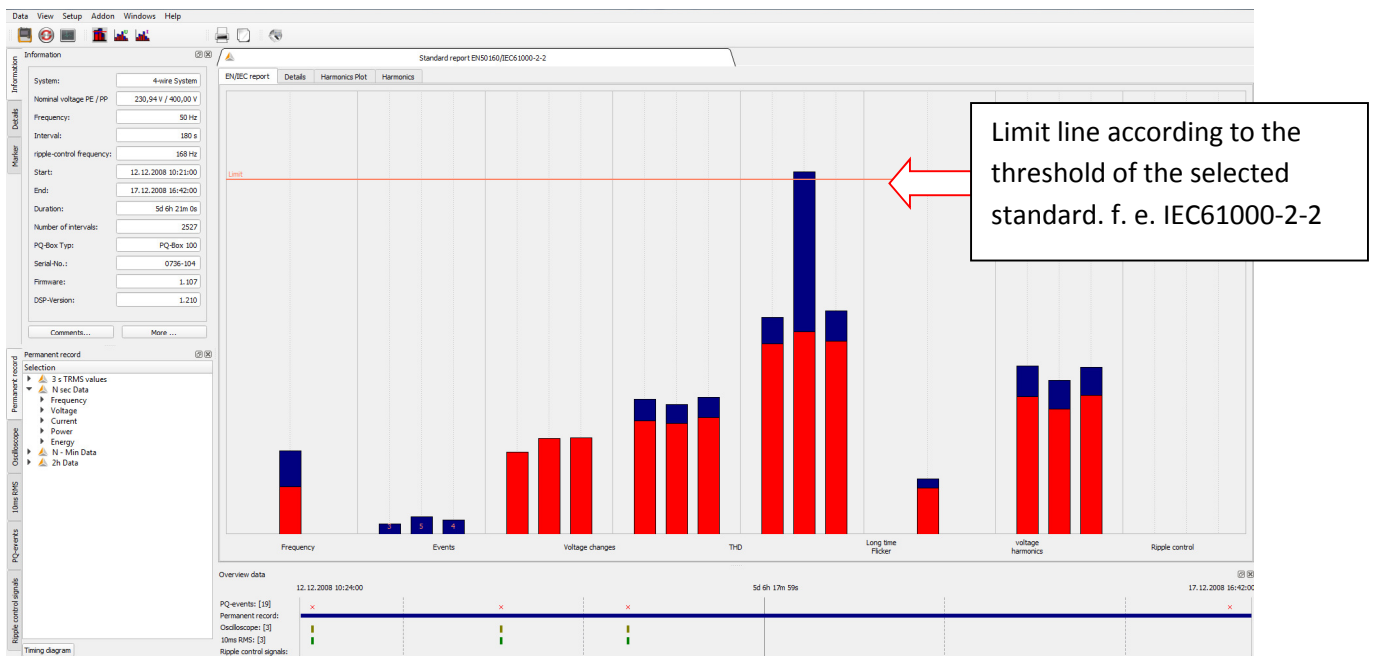

The bars show in a clear format the 95% reading in red and the highest "100% value" measurement value occurring in blue.

In the example shown, the maximum value of the long term flicker Plt exceeds the standard performance levels in all phases. The 95% value however is far below the permitted limits.


In the basic settings for the standard analysis, it is also possible to set a 100% limit. Should the 100% limit set be exceeded, the blue bar is cross-hatched red








Harmonic oscillations:

In the bars of the voltage harmonics all the measurements of the 2nd to 50th harmonic are compared with the respective performance level of standards EN50160 and IEC61000-2-2. The harmonic is displayed that is the next to the corresponding limit or exceeds it.

All standard limits can be changed by the user in the software "Configuration / Limits" menu.

List of the standard basic settings for the network analyzer:

PQBox: PQBOX300 Ver:0.000 Sn:1735-201 [COM7] 

 Basic settings
 Limits
 Oscilloscope
 10ms RMS recorder
 Ripple control
 HF Modul
 Scheduled Operation

Slow voltage change

Tolerance 99%: positive [%] 110,00 negative [%] 90,00
 Tolerance 100%: positive [%] 110,00 negative [%] 85,00

Voltage Changes (Dip/Swell)

Tolerance 100%: positive [%] 110,00 negative [%] 90,00

Network frequency

Tolerance 99.50%: positive [Hz] 50,50 negative [Hz] 49,50
 Tolerance 100%: positive [Hz] 52,00 negative [Hz] 47,00

Unbalance

Tolerance 95.00% [%]: 2,00
 Tolerance 100% [%]: 3,00


Long term flicker Plt

Tolerance 95.00%: 1,00
 Tolerance 100%: 5,00

THD

Tolerance 99% [%]: 8,00
 Tolerance 100% [%]: 12,00

Voltage harmonics

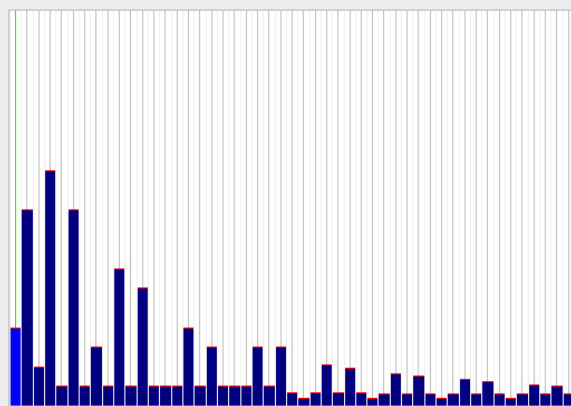

THD calculation

☒ H2 - H40
☐ H2 - H50

Grouping of harmonics (U/I)

☒ IEC 61000-4-30 ClassA
☐ Full grouped (EN61000-4-7 Kap. 5.5.1)
☐ no grouping

Harmonics: 2
 Tolerance 99% [%]: 2,00
 Factor 100%: 5,00

Load setup from Box

Send new setup to Box


Load

Store

Basic settings

Close

In the "Details" panel of the standard report, detailed information is given on the respective maximum and minimum value, and the reference to the standard limit.



The image shows the 'Details' panel of a standard report. It is divided into several sections: 'Frequency', 'Voltage changes', 'Voltage unbalance', and 'Flicker'. The 'Flicker' section is highlighted with a red box. The 'Frequency' section shows values for Maximum, 95%, 5%, Minimum, Limiting value Max, Limiting value Min, and Number (10sec values). The 'Voltage changes' section shows values for Maximum, 95%, 5%, Minimum, Limiting value Max, and Limiting value Min for phases L1, L2, and L3. The 'Voltage unbalance' section shows values for Maximum, 95%, Limit, and Number (free interval). The 'Flicker' section shows values for Maximum, 95%, and Limiting value Max for phases L1, L2, and L3.


Frequency		Voltage changes			Voltage unbalance			Flicker		
Parameter	Value	L1	L2	L3	Parameter	Value	L1	L2	L3	
Maximum value	50.11 Hz	238.94 V	240.72 V	238.77 V	Maximum value	0.53	0.81	1.03	1.06	
95% value	50.04 Hz	236.52 V	238.13 V	236.27 V	95% value	0.32	0.48	0.40	0.37	
5% value	49.97 Hz	227.26 V	227.79 V	227.52 V	Limit value	2.00	1.00			
Minimum value	49.89 Hz	225.64 V	226.10 V	225.84 V	Number (free interval)	1012	Number (2h value)	84		
Limiting value Max	50.50 Hz	Limiting value Max	254.03 V	Number (free interval)	1012					
Limiting value Min	49.50 Hz	Limiting value Min	207.85 V							
Number (10sec values)	60717									

Example: Standard flicker evaluation

The maximum values for the phases are: L1 = 0.61; L2 = 1.02; L3 = 0.63. As the Plt limit is 1, the bars for the phases L2 exceed the limit line in the overview display. The 95% values (red bars) are all well below the limit.

The "Voltage Harmonics" page shows all the harmonics in a bar chart.

All harmonics are scaled to their limit from the specified standard.

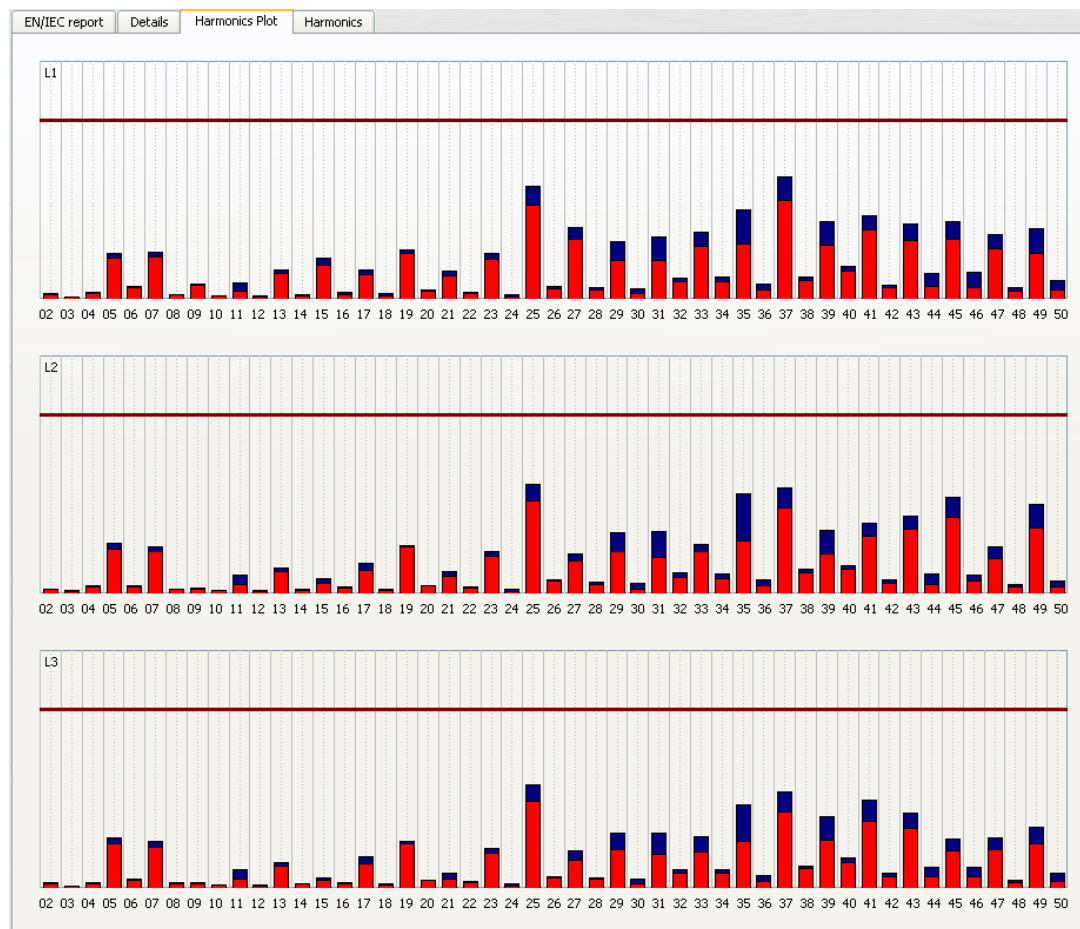



The bars show in a clear format the 95% reading in red and the highest "100% value" measurement value occurring in blue.

In the "Harmonic" page the limits of the selected standard, and the 95% values and maximum values of the individual phases are shown in a table. If a harmonic exceeds the limits, the corresponding row is highlighted in red.

Figure: Detailed listing of the 2nd to 50th harmonics and the respective compatibility levels

EN/IEC report	Details	Harmonics Plot	Harmonics				
	Limiting values	L1 - 95%	L1 - Max	L2 - 95%	L2 - Max	L3 - 95%	L3 - Max
THD	8.0000	3.7028	3.8651	3.7193	3.8347	3.8746	4.0123
2	1.9800	0.0453	0.2403	0.0485	0.1825	0.0476	0.3435
3	5.0000	1.0037	1.1899	1.5526	1.8083	1.2526	1.3641
4	0.9800	0.0341	0.1093	0.0342	0.0620	0.0338	0.1134
5	5.9900	1.7805	1.9978	2.0271	2.2265	2.0183	2.1887
6	0.4900	0.0433	0.0901	0.0435	0.0781	0.0397	0.0860
7	5.0000	1.5627	1.7216	1.3307	1.4671	1.3040	1.4341
8	0.4900	0.0349	0.0643	0.0470	0.0718	0.0317	0.0668
9	1.4800	2.0620	2.2404	1.6792	1.7914	1.6678	1.7670
10	0.4900	0.0465	0.0598	0.0639	0.0711	0.0304	0.0468
11	3.5000	1.2885	1.4374	0.9626	1.1277	0.8011	0.9654
12	0.4900	0.0539	0.0724	0.0654	0.0850	0.0351	0.0562
13	2.9800	1.2765	1.3788	1.1910	1.3007	1.8570	1.9765
14	0.4900	0.0663	0.0849	0.0640	0.0964	0.0472	0.0787
15	0.4900	1.1853	1.4093	1.0159	1.2275	1.1176	1.2282
16	0.4900	0.0497	0.0581	0.0510	0.0756	0.0544	0.0812
17	1.9800	0.9106	1.1839	1.2213	1.4485	0.9030	1.1085
18	0.4900	0.0220	0.0319	0.0308	0.0506	0.0297	0.0547
19	1.4800	0.4927	0.5951	0.7245	0.8352	1.3650	1.5697
20	0.4900	0.0165	0.0226	0.0158	0.0231	0.0202	0.0338
21	0.4900	0.2196	0.2462	0.3041	0.3365	0.5712	0.6424
22	0.4900	0.0150	0.0207	0.0154	0.0185	0.0151	0.0231
23	1.4800	0.2629	0.3045	0.3732	0.4201	0.1470	0.1879
24	0.4900	0.0199	0.0226	0.0237	0.0252	0.0187	0.0271
25	0.4900	0.2350	0.2785	0.3291	0.3818	0.5948	0.6640



Highest value measured in the recording (L1)

95%-value of the measurement (L1)

Limit from the standard

Create EN50160 / IEC61000-2-2 report:

With the Print function, a multi-page standard report opens.


Scroll through the
standard report

Send a report
to the printer

Create PDF
document

Change printer
settings


First
Previous
Next
Last
Print
Export PDF
Printer Setup




Standard report EN50160/IEC61000-2-2


20.12.2016
Page 1/5

Company Department	Rundsteuer 250Hz EN50160 - IEC61000-2-2 LV - def	EMPTY EMPTY
Customer:		Phone:
Address:		Reason:
Contact:		SW-Version: 3.1.4 64bit
System:	4-wire System	
Nominal voltage PE / PP	230.00 V / 398.37 V	Interval: 1 s
Frequency:	50 Hz	Ripple-control frequency: 250 Hz
Start:	05.10.2016 08:04:48	End: 05.10.2016 08:11:13
Duration:	6m 25s	Number of intervals: 385
PQ-Box Typ:	PQ-Box 150: ExpertB1 (2-9kHz)	Serial-No.: 9938-004
Firmware:	3.004	DSP-Version: 4.005

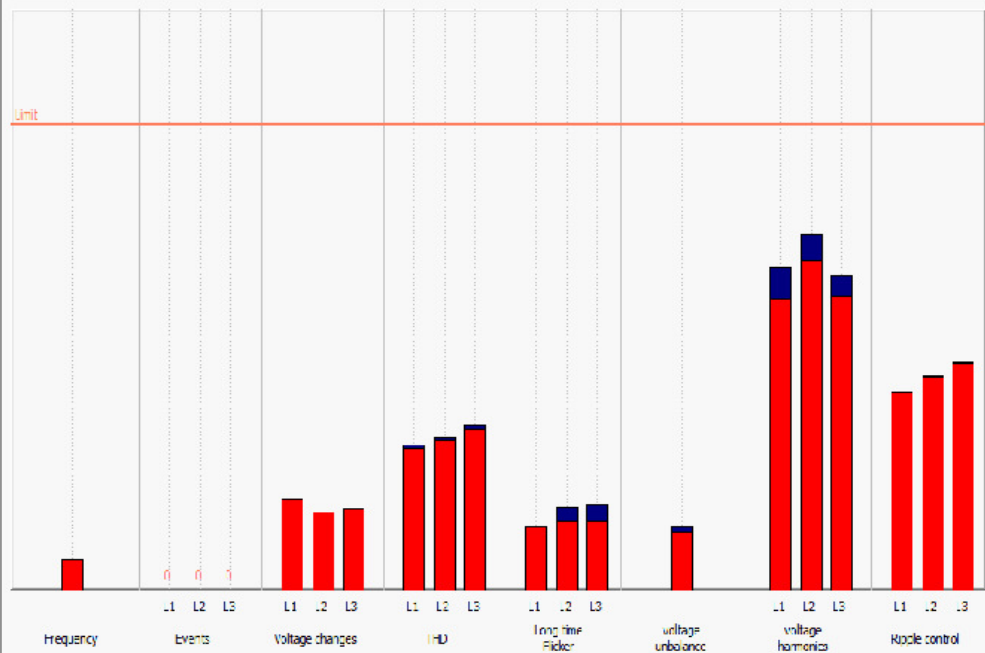
Overview


11.5.3 Bar chart of the Harmonics and Interharmonics

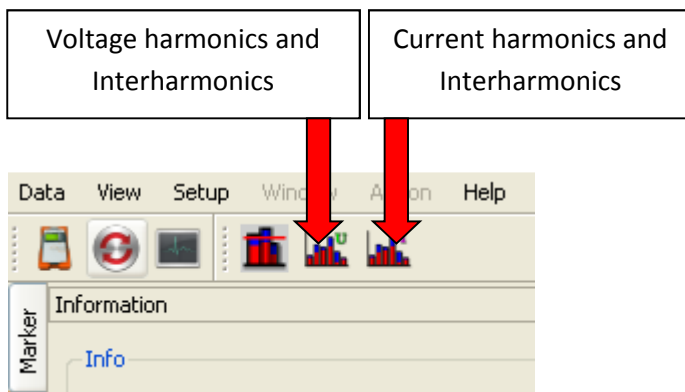

Using the two  icons, all voltage and current harmonics, as well as voltage and current interharmonics are displayed graphically or in a table form.

The scaling can be changed in “setup harmonics” from absolute values to relative values.

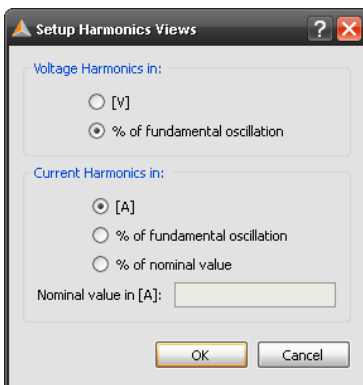

The example shows the list of all current harmonics of the three phases and neutral. The ordinals 5 and 7, 11 and 13, 17 and 19 stand out. Red bar represents the 95% measured value, the blue bar represents the 100% value.

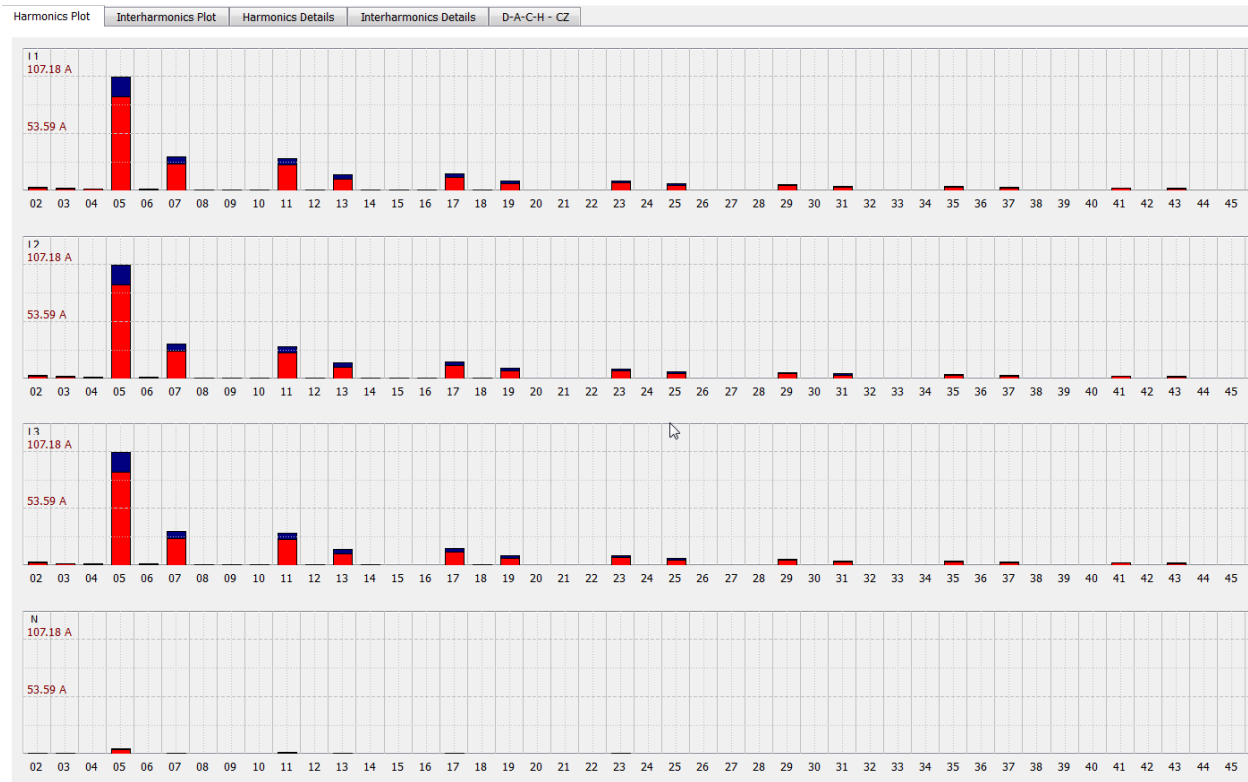


Table of harmonic values

Harmonics Plot	Interharmonics Plot	Harmonics Details	Interharmonics Details	D-A-C-H - CZ				
	L1 - 95%	L1 - Max	L2 - 95%	L2 - Max	L3 - 95%	L3 - Max		
02	2.8521 [A]	3.4658 [A]	2.6505 [A]	3.5537 [A]	2.5926 [A]	3.2562 [A]		
03	1.7764 [A]	2.2264 [A]	1.8707 [A]	2.3933 [A]	1.5029 [A]	1.9265 [A]		
04	1.2930 [A]	1.6541 [A]	1.2510 [A]	1.8606 [A]	1.2403 [A]	1.6760 [A]		
05	88.0763 [A]	106.7447 [A]	88.3021 [A]	107.1785 [A]	87.8084 [A]	106.6618 [A]		
06	1.0791 [A]	1.4184 [A]	1.0394 [A]	1.4161 [A]	1.0252 [A]	1.4987 [A]		
07	25.4768 [A]	32.0951 [A]	26.1785 [A]	33.0616 [A]	25.5559 [A]	32.1389 [A]		
08	0.6486 [A]	0.9401 [A]	0.6441 [A]	0.8871 [A]	0.6309 [A]	0.8007 [A]		
09	0.5818 [A]	0.7895 [A]	0.5549 [A]	0.7112 [A]	0.5185 [A]	0.7063 [A]		
10	0.5378 [A]	0.7709 [A]	0.5205 [A]	0.7113 [A]	0.5028 [A]	0.7268 [A]		
11	24.4563 [A]	30.5683 [A]	24.4522 [A]	30.5124 [A]	24.3625 [A]	30.4375 [A]		
12	0.4965 [A]	0.6506 [A]	0.4973 [A]	0.7355 [A]	0.4640 [A]	0.6367 [A]		
13	11.0046 [A]	14.7722 [A]	11.3741 [A]	15.3005 [A]	11.0889 [A]	14.8478 [A]		
14	0.3423 [A]	0.4776 [A]	0.3570 [A]	0.4720 [A]	0.3331 [A]	0.4413 [A]		
15	0.3337 [A]	0.4499 [A]	0.3349 [A]	0.4376 [A]	0.3039 [A]	0.3993 [A]		
16	0.3181 [A]	0.4593 [A]	0.3323 [A]	0.4456 [A]	0.3126 [A]	0.4064 [A]		
17	12.5913 [A]	15.7555 [A]	12.4908 [A]	15.6298 [A]	12.5218 [A]	15.7005 [A]		
18	0.3317 [A]	0.4455 [A]	0.3349 [A]	0.4393 [A]	0.3082 [A]	0.4272 [A]		
19	7.0123 [A]	9.5618 [A]	7.3320 [A]	10.0010 [A]	7.0974 [A]	9.5995 [A]		
20	0.2396 [A]	0.3149 [A]	0.2420 [A]	0.3224 [A]	0.2352 [A]	0.3055 [A]		
21	0.2378 [A]	0.3196 [A]	0.2341 [A]	0.3165 [A]	0.2211 [A]	0.2829 [A]		
22	0.2334 [A]	0.3069 [A]	0.2334 [A]	0.3146 [A]	0.2301 [A]	0.2942 [A]		
23	7.6396 [A]	9.3913 [A]	7.5836 [A]	9.2955 [A]	7.6189 [A]	9.3453 [A]		
24	0.2514 [A]	0.3249 [A]	0.2534 [A]	0.3468 [A]	0.2290 [A]	0.3186 [A]		
25	4.8823 [A]	6.5485 [A]	5.1987 [A]	6.9194 [A]	4.9771 [A]	6.5909 [A]		
26	0.1847 [A]	0.2600 [A]	0.1909 [A]	0.2500 [A]	0.1801 [A]	0.2174 [A]		

11.5.4 D-A-CH-CZ report

The software produces an automatic report according the D-A-CH-CZ standard.

All current harmonics will be compared to the maximum allowed limit of this standard. You have to fill the “short circuit power” of the network, the connected load and the nominal voltage.

Harmonics Plot
Interharmonics Plot
Harmonics Details
Interharmonics Details
D-A-C-H - CZ

Short circuit power [kVA]:

Connection Load [kVA]:

Nominal voltage L-L [V]:

valid THDi [%]:

voltage h...	Standard factor value		max. emission limit [A]		meas. harm. values [A]	
	L1 - L3	N	L1 - L3	N	L1 - L3	N
H 3	6.0	18.0	21.7	65.2	2.4	1.2
H 5	15.0		54.3		107.2	
H 7	10.0		36.2		33.1	
H 11	5.0		18.1		30.6	
H 13	4.0		14.5		15.3	
H 17	2.0		7.2		15.8	
H 19	1.5		5.4		10.0	
H 21	1.0		3.6		0.3	

DACH-CZ report compare all current harmonics to the limits. Red values are above the thresholds.

Details						
DACH-CZ: NOT COMPLIED						
voltage harmonics	Standard factor value		max. emission limit [A]		meas. harm. values [A]	
	L1 - L3	N	L1 - L3	N	L1 - L3	N
H 3	6.0	18.0	21.7	65.2	2.4	1.2
H 5	15.0		54.3		107.2	
H 7	10.0		36.2		33.1	
H 11	5.0		18.1		30.6	
H 13	4.0		14.5		15.3	
H 17	2.0		7.2		15.8	
H 19	1.5		5.4		10.0	
H 21	1.0		3.6		0.3	
H 23	1.0		3.6		9.4	
H 25	1.0		3.6		6.9	

11.5.5 Level-time diagrams of the long-term data

In the "Cyclic data" menu item all permanent recorded measurement data are listed. In each measurement more than 3800 different measurement values (voltage, harmonics, interharmonics, current, power and energy) are saved. Any measurement values can be displayed together in a level-time diagram. Thus, for example, a relationship between the voltage fluctuations, the resulting flicker level and the cause in the network can be shown by means of the associated current changes.



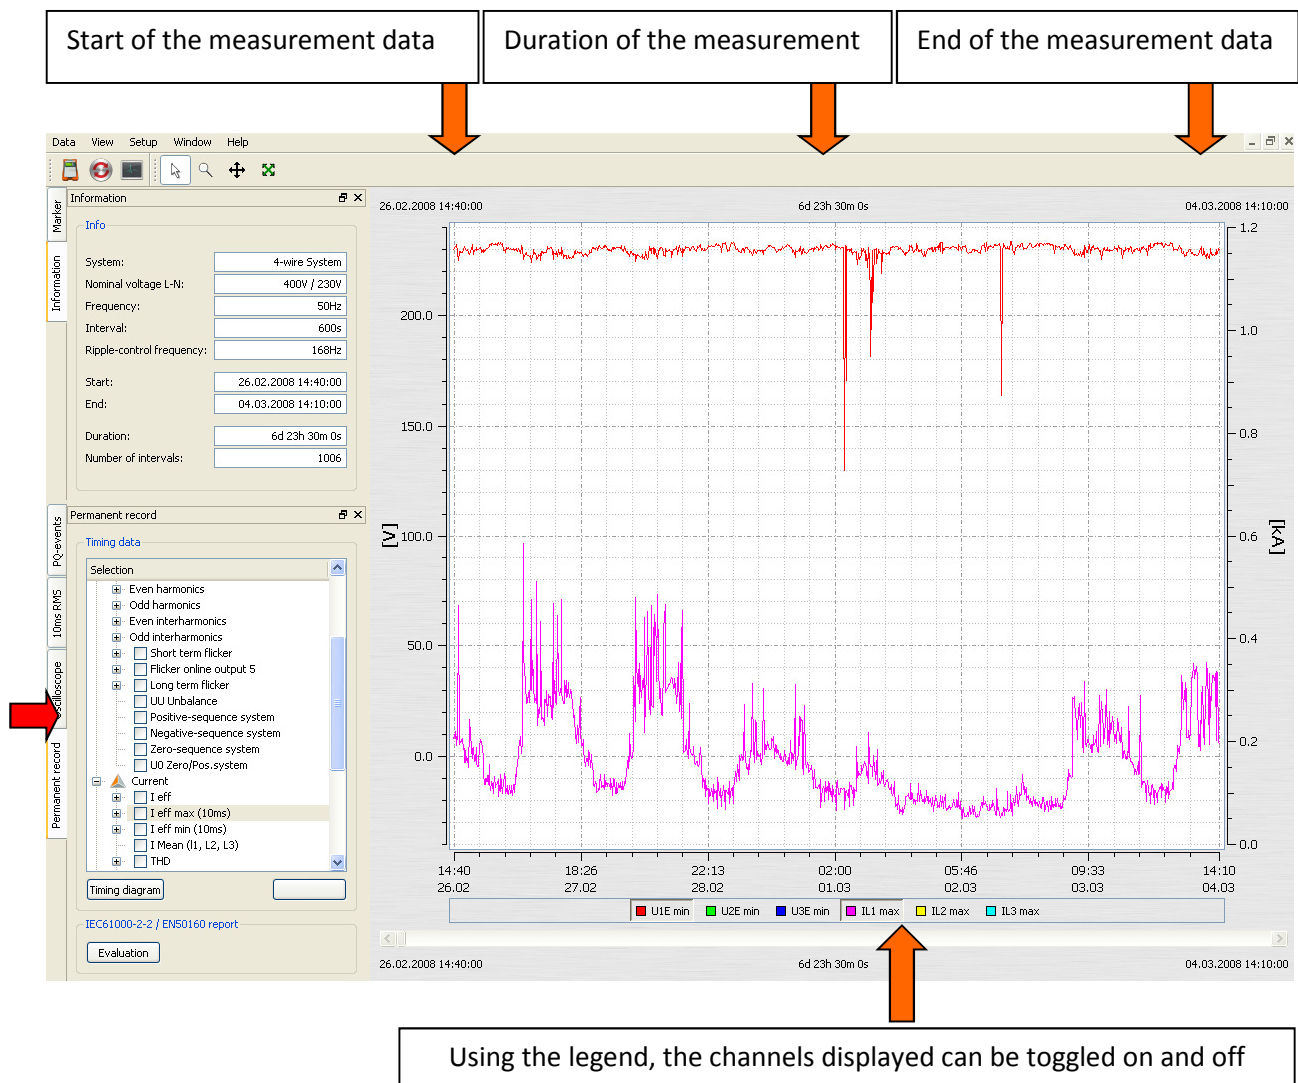
Selecting the required parameter (or multiple parameters)  and pressing the  button displays the level-time diagram of the required measurement value.


Figure: Level-time diagram of the 10 ms minimum value of the voltages L1, L2, L3



Zoom function in the graphic:



To magnify an area, activate the zoom function. Then pull with the left mouse button pressed, a window from the top left to bottom right. If the window is drawn in the opposite direction, the magnification is reset.

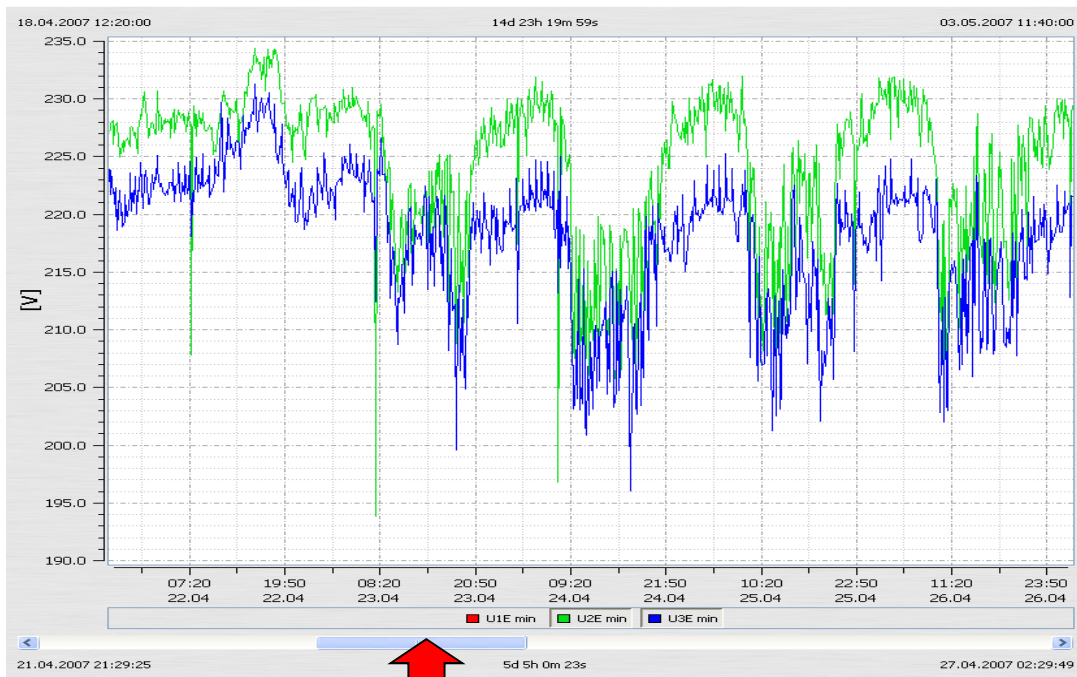

Bars represent the zoomed area.

The moving the bar you can scroll through the measurement

Move graphic:



When the "Move" button is pressed, the graphic can be moved freely in the time axis and value axis.

Place a marker:



Using the "Marker" button, two markers can be positioned in the graphic.



Two markers can be set in the plot using the left mouse button. This selects the closest curve and the marker acquires its colour.

- **Marker No. 1** with the left mouse button and Shift
- **Marker No. 2** with the left mouse button and Control key

The distance between the two markers is determined as an absolute value. The time interval is always calculated; the difference value is calculated only with identical units.

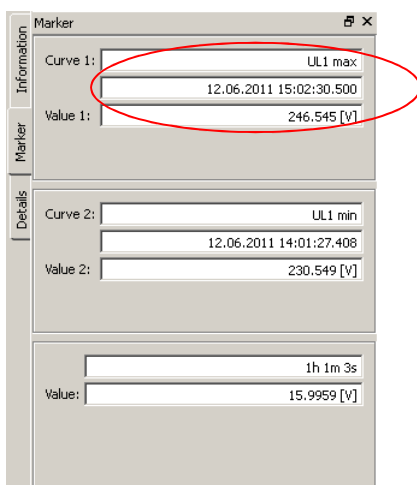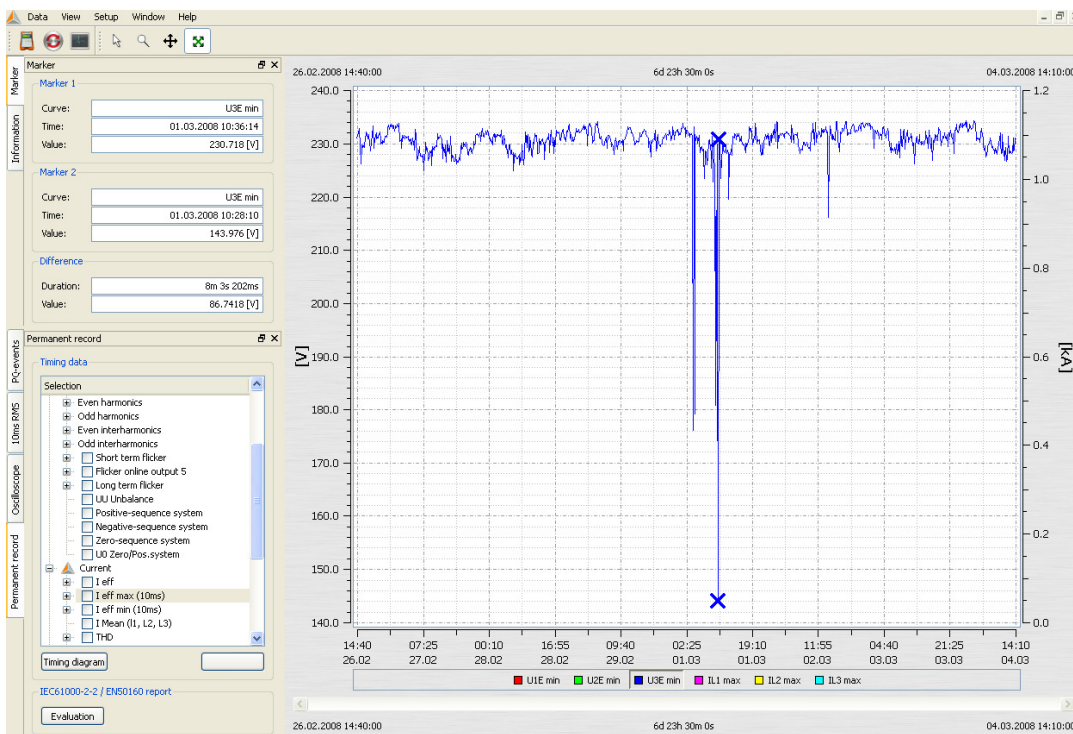

With long measurement intervals set (e.g. 10 min) for the extreme values (10 ms), the exact times is shown in milliseconds in the marker.

Representation of line styles



Four types of representation are offered for lines.


- 1st. Connects every measured point together (default for all graphs)
- 2nd. Represents only the measurement points, the points are not connected by lines
- 3rd. This level representation is particularly suitable for medium values, such as 15 minutes performance data. Here, the mean value over the measuring period is represented as a straight line.



- 4th. The "inverted level representation" enables network interruptions to be clearly shown in the level-time diagram.

Other functions in the **right mouse menu**:

- **Delete marker** – If one marker is set, it is possible to delete the marker
- **Flagging representation** = measurement data that were obtained during a network failure or interruption are marked (flagged). Here the marking can be toggled on and off.
- **Left axis scaling** = the left measurement axis can be scaled manually
- **Right axis scaling** = the right measurement axis can be scaled manually
- **Logarithmic axis scaling**
- **Share axes automatically** = SW automatically separates meaningful readings with their own scale so that no measurement values overlap .
- **Scale axes automatically** = SW automatically scales to the maximum and minimum values over the entire screen
- **Limit line setting** = the value and colour of a limit line can be set
- **Complete data** = the whole measurement period is shown
- **Data 1 day** = the time scale is set to one day
- **Data 7 days** = the time scale is set to exactly one week
- **Data 2 weeks** = the time scale is set to 14 days
- **Data 4 weeks** = the time scale is set to 1 month
- **Insert Comment** = This function enables a comment to be inserted into the graph. This will also appear in the printout.
- **Print** = the current graphic will be sent to the selected printer or saved as a PDF document
- **Clipboard** = The graphical display is copied to the clipboard. Then, for example, the graphic can be pasted into an **MS-WORD™** document

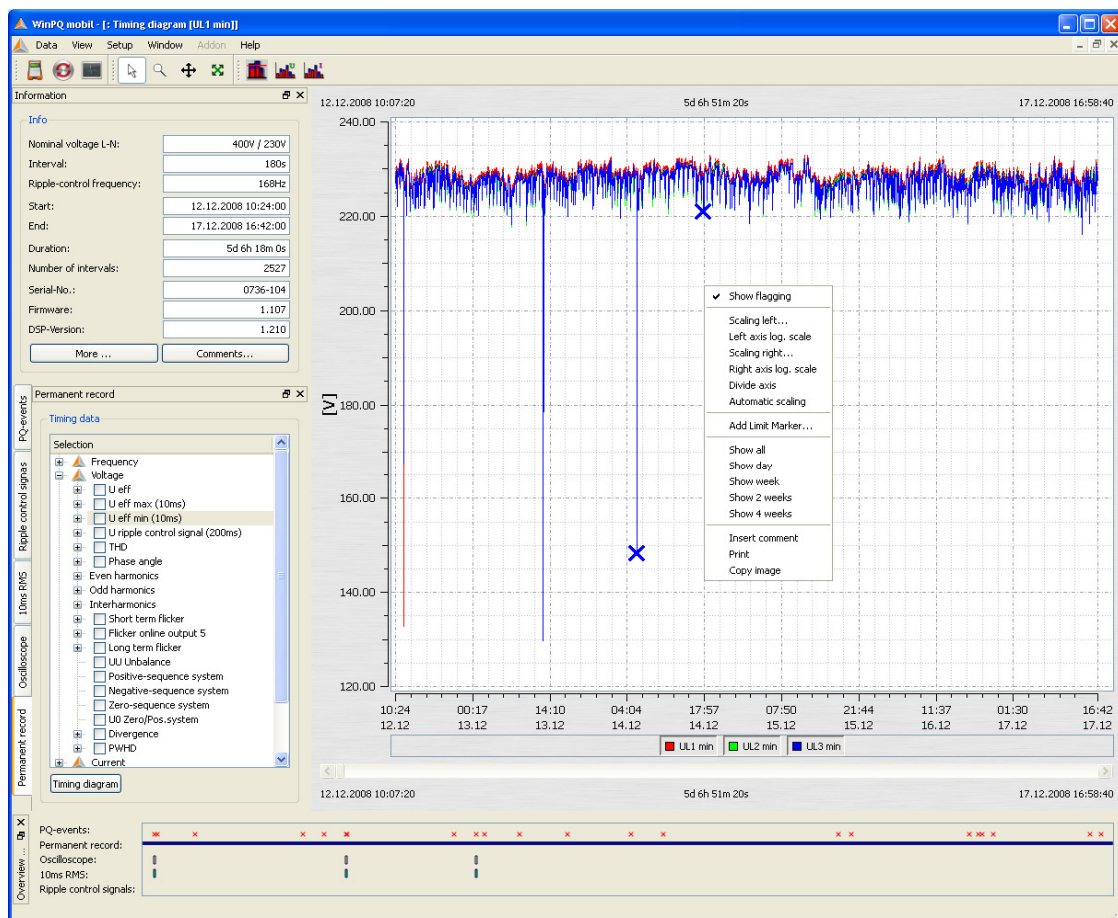


Limit Line Setting

In the "Limit line setting" menu option it is possible to define multiple limit lines.


The colour, value, and the corresponding y-axis of the limit line can be set.

Example: Limit line for the voltage; 207 V (-10% Unenn)

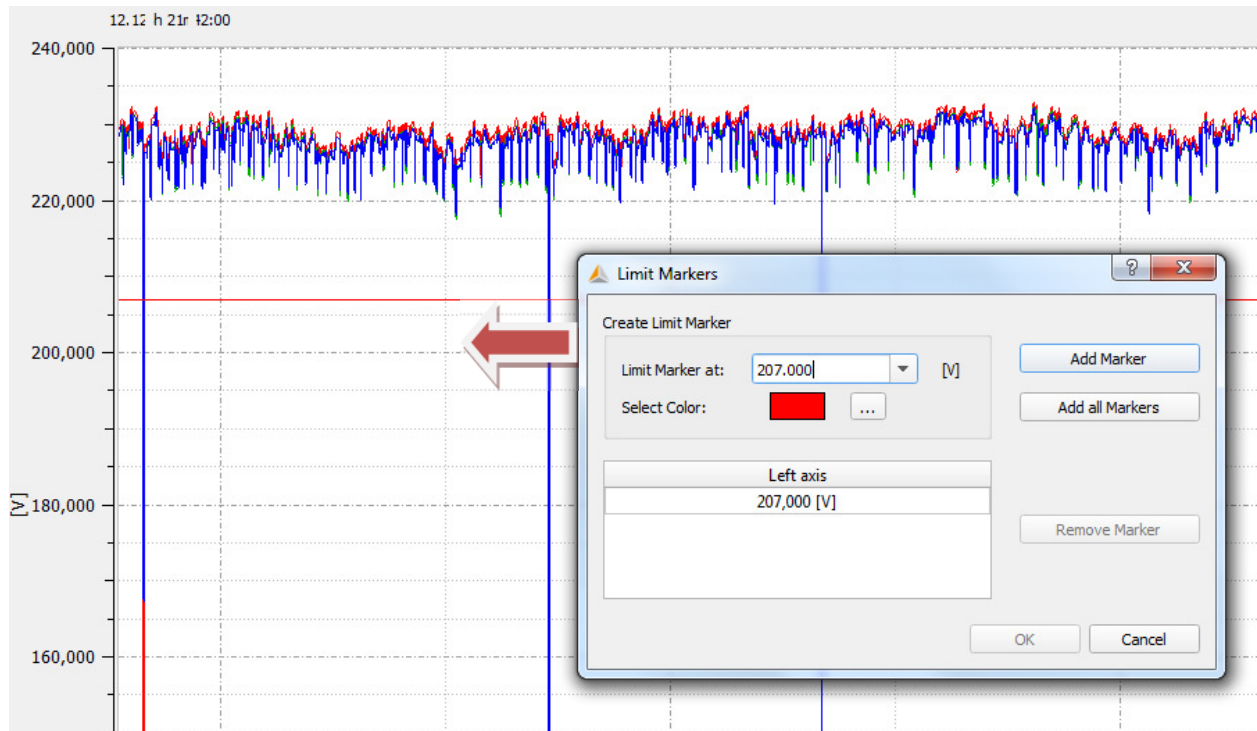

Show limit marker harmonics

The software automatically suggests the thresholds for harmonics, voltage, unbalance or flicker. The threshold can be a %-value or an absolute value, depending on the settings of the harmonics.

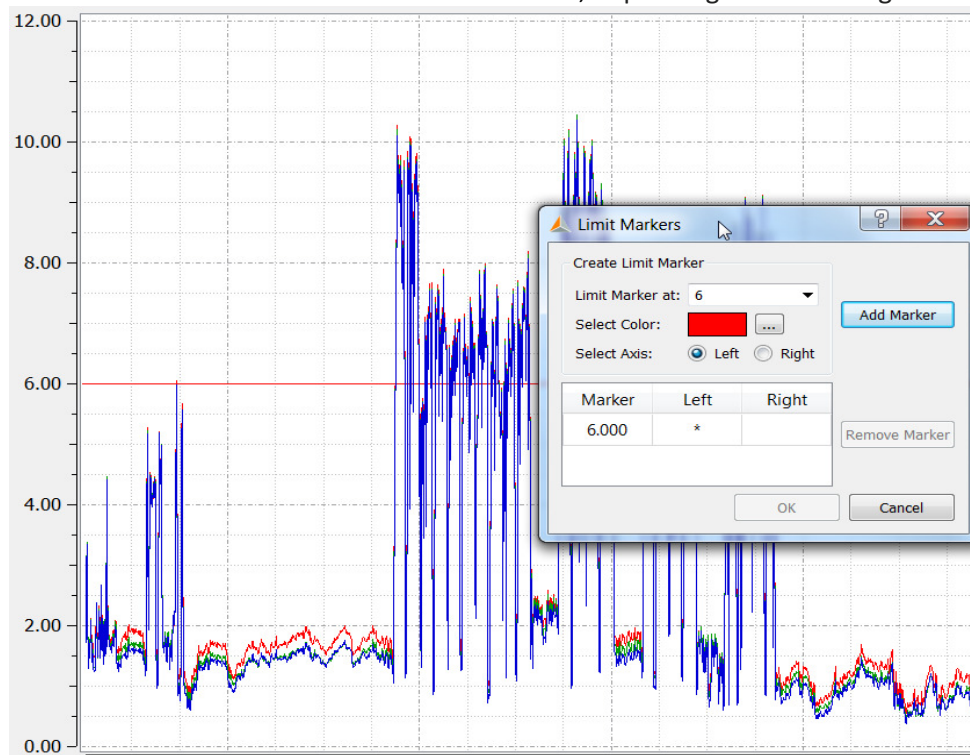


Insert and edit comment

With the "Insert comment" function, any number of texts can be placed in the graphic.

To delete or move this term in the graph, click it with the mouse so that it turns red.


Now, using the Windows "remove" function the text can be deleted or moved using the mouse.

With double mouse click it is possible to edit the comment.

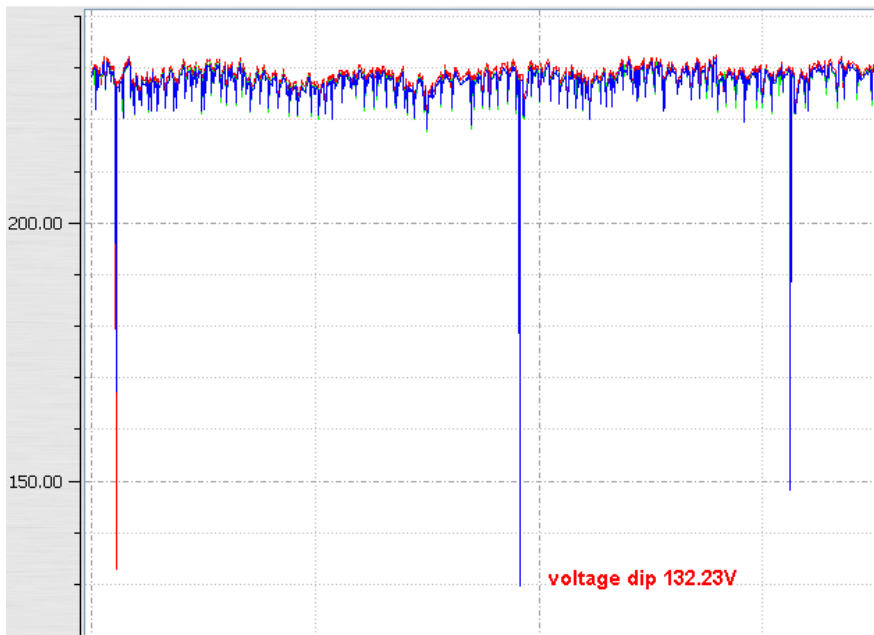



11.5.6 Oscilloscope recordings

With the "Oscilloscope" tab, all manually recorded and using oscilloscope trigger settings images are listed. These can be sorted by time, or trigger condition.


By double-clicking on the line, or by pressing the  button, you will get the relevant oscilloscope image.

For each fault record, all voltages "Conductor to Conductor" and "Conductors to ground" are recorded.

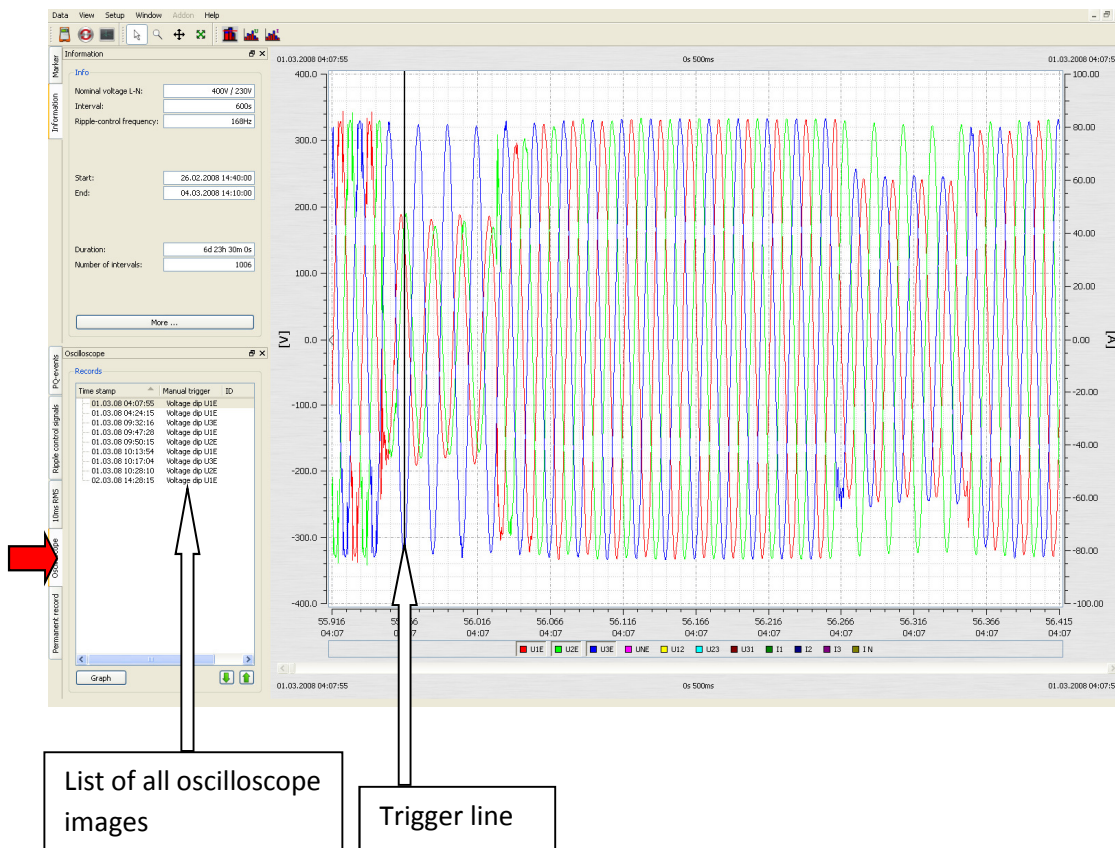



You can scroll through the triggered images using the two  keys. The software remembers the settings for the previous image and shows all other images with the same representation (e.g. in the example, only the voltage channels without the current)

"Right mouse" menu:

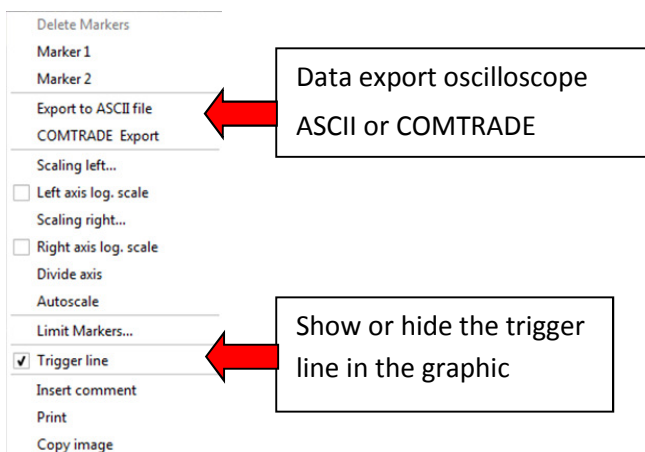


Calculation of the FFT spectrum is possible by activating the "FFT" field of each triggered oscilloscope image.

- PQ-Box 150 = DC to 10.000Hz

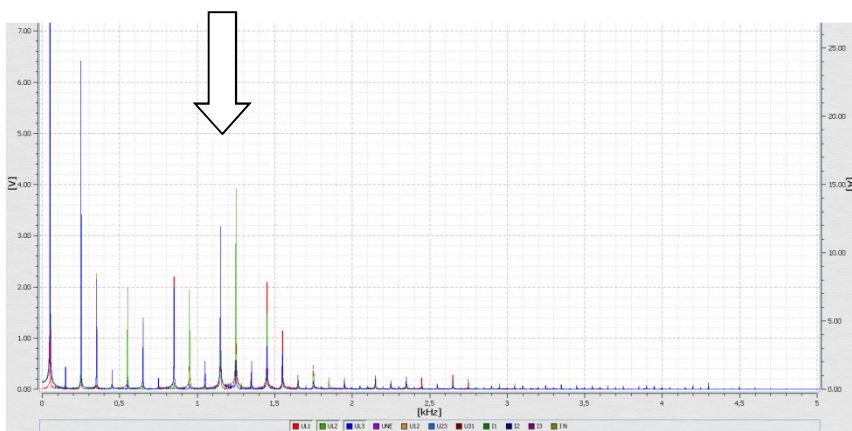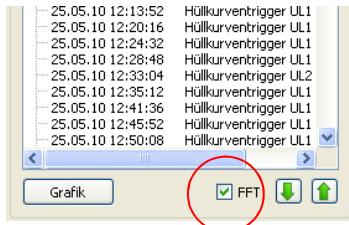


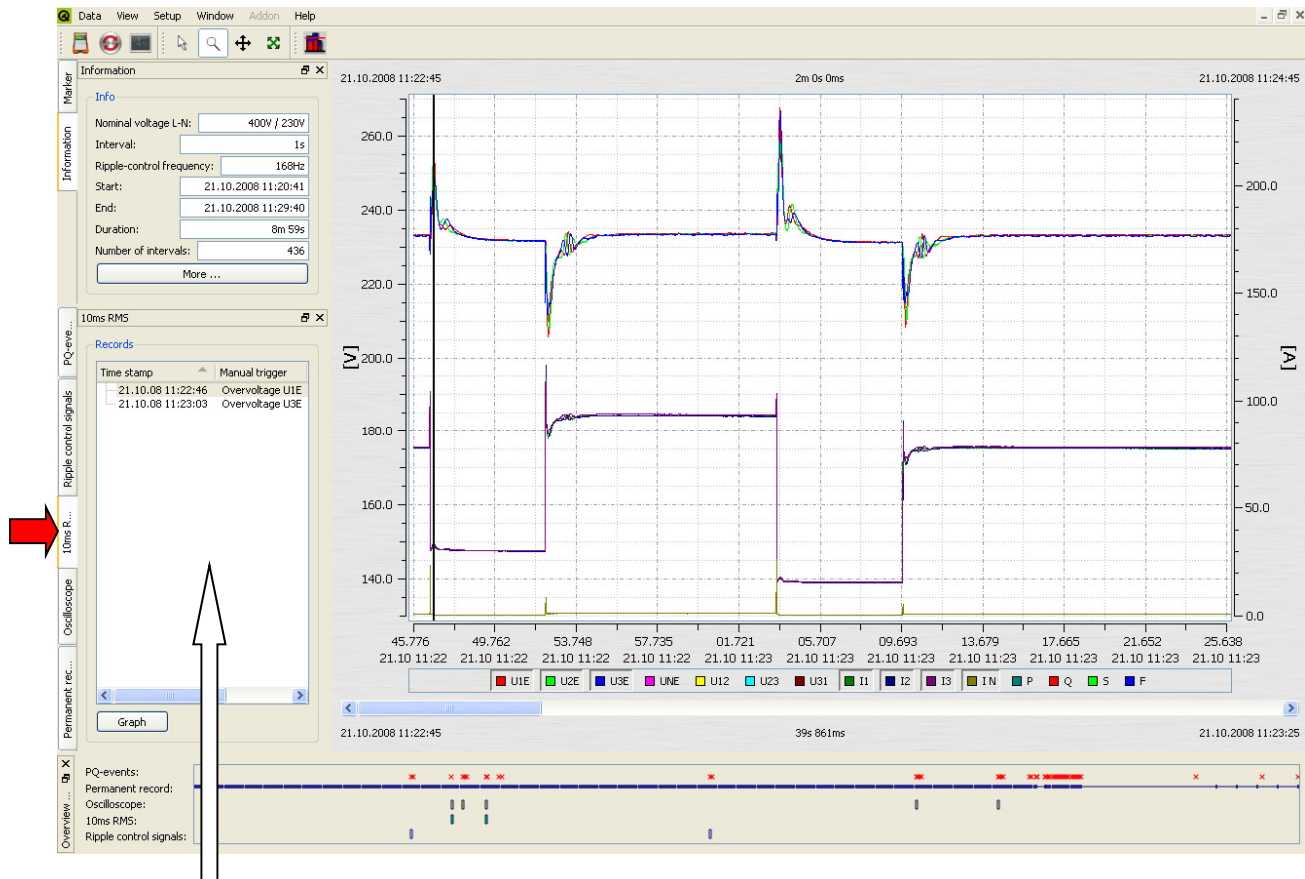
The markers fields in the FFT analysis show the selected frequency and amplitude in the spectrum.

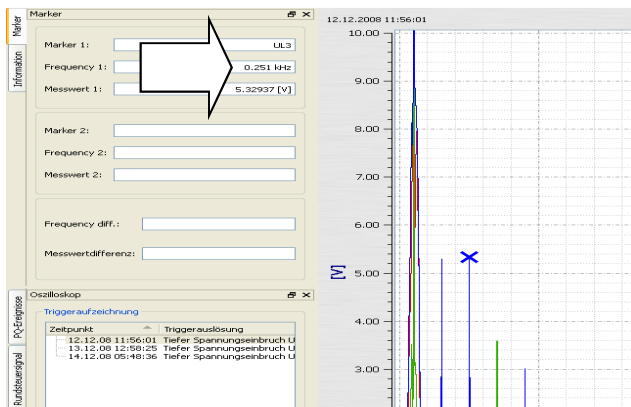


11.5.7 ½ periode rms RMS Recorder

With the "10ms RMS" tab, all RMS recordings manually recorded and using trigger settings are listed.

These can be sorted by time, or trigger condition. Double-clicking the line or pressing the  button retrieves the corresponding 10 ms RMS recorder value.



Listing all 10 msec. RMS recorder recordings

You can scroll through the triggered images using the two  keys. The software remembers the settings for the previous image and shows all other images with the same representation (e.g. in the example, only the voltage channels without the current)



11.5.8 Ripple Control Signal Recorder

With the option “**R1-Ripple signal recorder**” it is possible to trigger to the signal voltage and start a record especially for this frequency. The maximum length of the recorder is 210 seconds. There are recorded the voltages and currents

In this example the frequency of 180 Hz was recorded over 1 minute and 40 seconds.




All ripple control records are shown in the recorder list and in the overview picture

With these two icons   it is possible to scroll through the different recorders

11.5.9 PQ Events

With the "PQ Events" tab, all violations of the specified limits are displayed.

With the **List table** button, the detailed list of the PQ events with time point and extreme values is displayed.


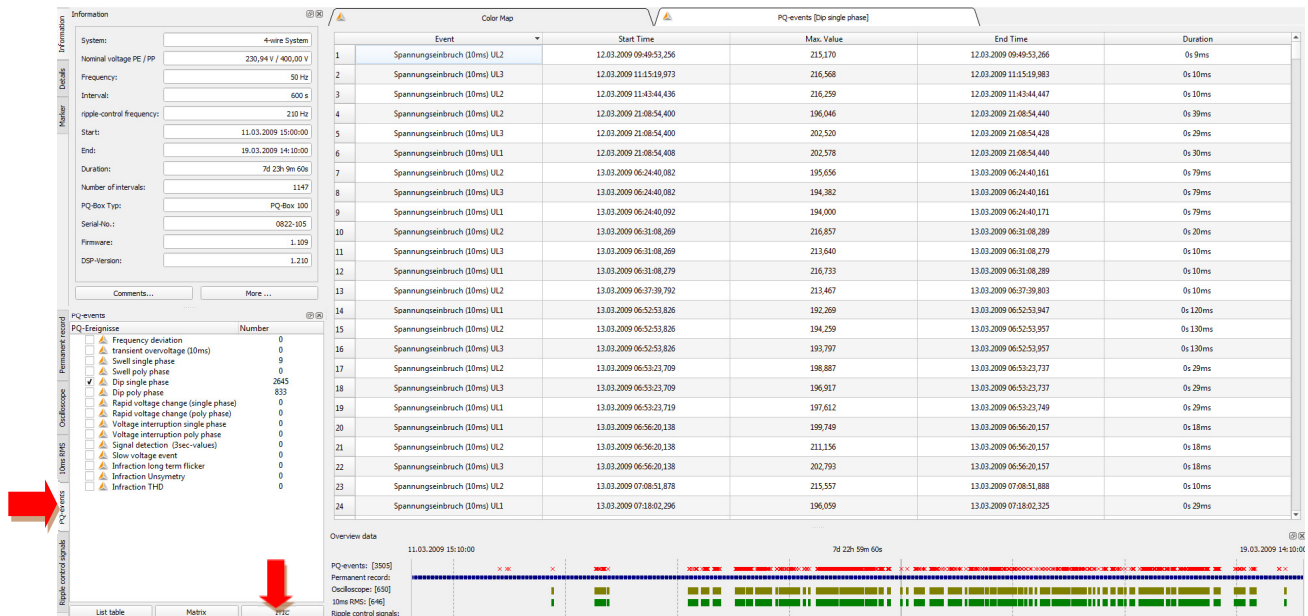


With the **ITIC** button it is possible to display all the voltage events as an ITIC representation. All deviations from the nominal voltage in duration and amplitude are displayed graphically.



On the "PQ Events" page in addition to the ITIC graphic is a UNIPED statistics event table for all voltage dips and overvoltages.

 
Using WinPQ mobile / Settings / General, these statistics from Evaluation to NRS 048 (South Africa PQ standard).

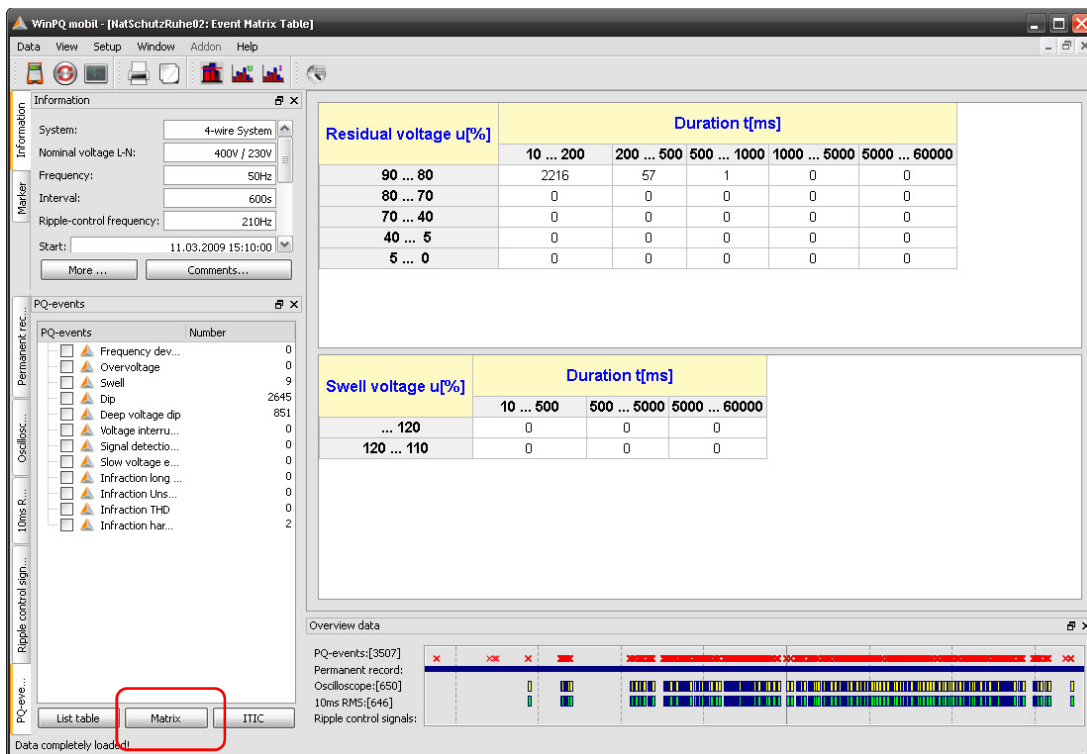


11.5.10 Data export – Interval data

Using "Settings / Export", it is possible to set basic parameters for the measurement data export.

The decimal point separator in a German Windows is a comma; in the English-language Windows it is a full stop.

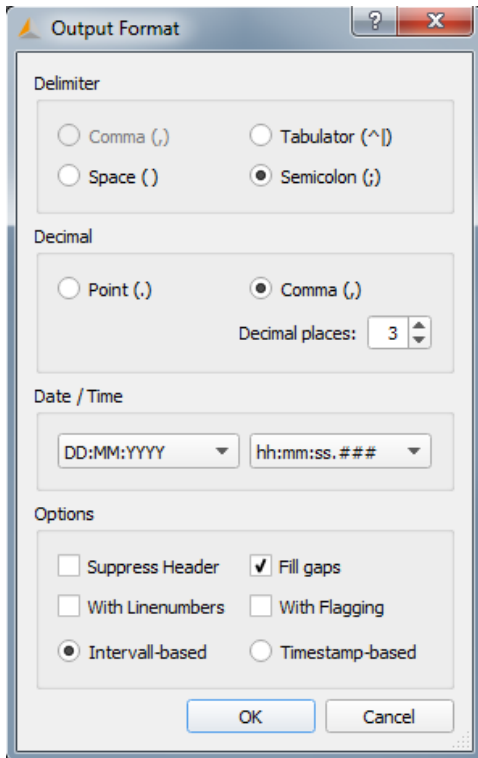


Using "Data / CSV Export", all measurement interval data can now be exported for open, for example, in MS Excel.

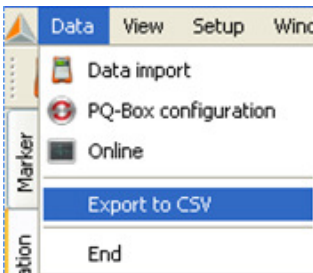


In the following menu, all measurement values can be selected and exported with the "Export" button to a file.

Using "Save", various selection for data export can be saved (e.g. file export of all harmonics). With load already stored files can be opened.

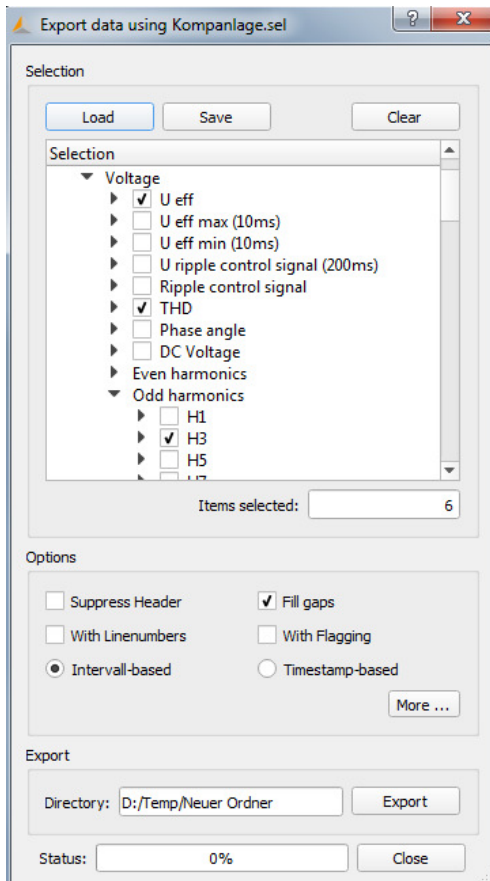

Any name can be specified for the export file. The file is saved in the PQ-Box / Export directory.

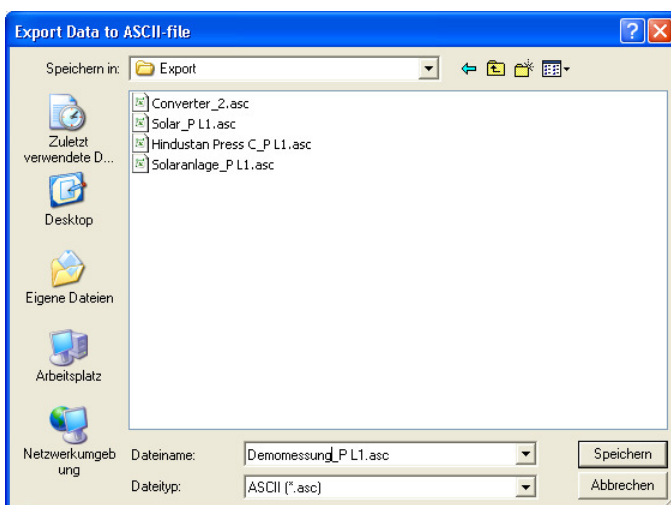

Example of an export file in MS Excel:

	A	B	C	D	E	F	G	H	I	J	K
1	PQ Box 100		Serial-No.: 0804-004								
2											
3	Measurement: Solar plant, Hofweg 28,										
4											
5	Interval: 600 sec										
6	Voltage: 230 V										
7											
8											
9	Date/Time: 18.11.2008 12:40:00 - 26.11.2008 09:50:00										
10											
11	Date	Time	P L1	P L2	P L3	P total	S L1	S L2	S L3	S total	Q L1
12	18.11.2008	12:40:00	28970.9	29141.8	28623.1	86735.7	33268.4	32337.8	32861.8	98529.4	16354.6
13	18.11.2008	12:50:00	35467.8	35369.3	35821.7	106659	38617.5	36427.2	38791.4	113940	15275.8
14	18.11.2008	13:00:00	37027.4	36698.5	37197.9	110924	39811.1	37975.3	39840.5	117718	14625.3
15	18.11.2008	13:10:00	30077.2	30896.3	30015.8	90989.1	33151.5	32195	32980.1	98415	13942.7
16	18.11.2008	13:20:00	28710.2	29336.5	29443.2	87489.9	30632.4	30212.2	31295.6	92214.9	10680.1
17	18.11.2008	13:30:00	36482.6	37915.5	36829	111227	39502.6	39227.4	39710.5	118495	15148.7
18	18.11.2008	13:40:00	29710.6	30129.8	29647	89487.3	33692.9	31855.7	33216.9	98892.1	15890.1
19	18.11.2008	13:50:00	39636.2	40203.4	39142	118982	42011.7	41812.8	41045.9	124953	13926.7
20	18.11.2008	14:00:00	32961.5	32672.7	31729.8	97364	35817.4	34063.2	34084.7	104121	14015.2
21	18.11.2008	14:10:00	24075.5	24809.9	23199.5	72085	26868	25623.7	25789.5	78576.4	11927.1
22	18.11.2008	14:20:00	30752.7	31526.1	30099.9	92378.7	33938.8	32864.1	32846.5	99826	14356.6



The order of the selected data in data export is automatically the order of columns in the export file.

In CSV export you will have the minimum - and maximum - RMS output with the exact time stamps.

Options

☐ Suppress Header
 ☐ Fill gaps

☐ With Linenumbers
 ☐ With Flagging

☒ Intervall-based
 ☐ Timestamp-based

The time format for CSV Export can be changed in general settings for export data

Also, the Short Time Flicker (PST) and the Long time Flicker (PLT) have it's own time stamps regardless of the programmed measurement interval as 10 min interval is issued.

Datum/Zeit: 17.10.2013 09:30		06:50:00									
Datum	Zeit	UL1	UL2	UL3	UL1 max	UL2 max	UL3 max	UL1 min	UL2 min	UL3 min	
07.10.2013	09:30:00	232,56	232,539	233,323							
07.10.2013	09:35:39					233,004					
07.10.2013	09:35:44						233,999				
07.10.2013	09:38:16				233,124						
07.10.2013	09:39:01							230,728			
07.10.2013	09:39:01								230,506	231,44	
07.10.2013	09:40:00	232,572	232,487	233,394							
07.10.2013	09:40:27						233,874				
07.10.2013	09:43:50								231,299	232,322	
07.10.2013	09:49:00				233,116						
07.10.2013	09:49:00					233,107					
07.10.2013	09:49:30							231,209			
07.10.2013	09:50:00	232,51	232,412	233,318							

Options

☐ Suppress Header ☒ Fill gaps


☐ With Linenumbers ☐ With Flagging

☒ Intervall-based ☐ Timestamp-based

OK Cancel

Using the "Window / Split" menu item it is possible to display all previously selected evaluations together in an overview.

The "information" and "Measurement data overview" fields can be closed to give more space for the evaluation graphics. These can be re-displayed with the "View" field.

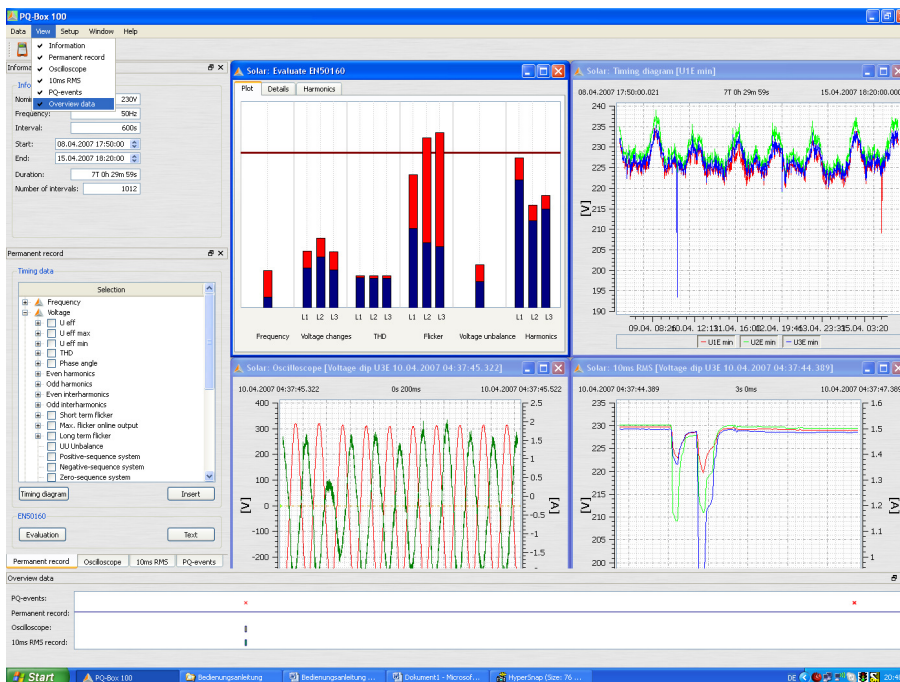


"Measurement data overview" close field


Comparing two separate measurement files.


During an evaluation, it is possible to open another measurement, start level-time charts and standard evaluations, display them next to one another in an image and compare them.

Figure: Two separate measurements displayed next to one another
(2 x EN50160 report; 2 x level-time diagrams)

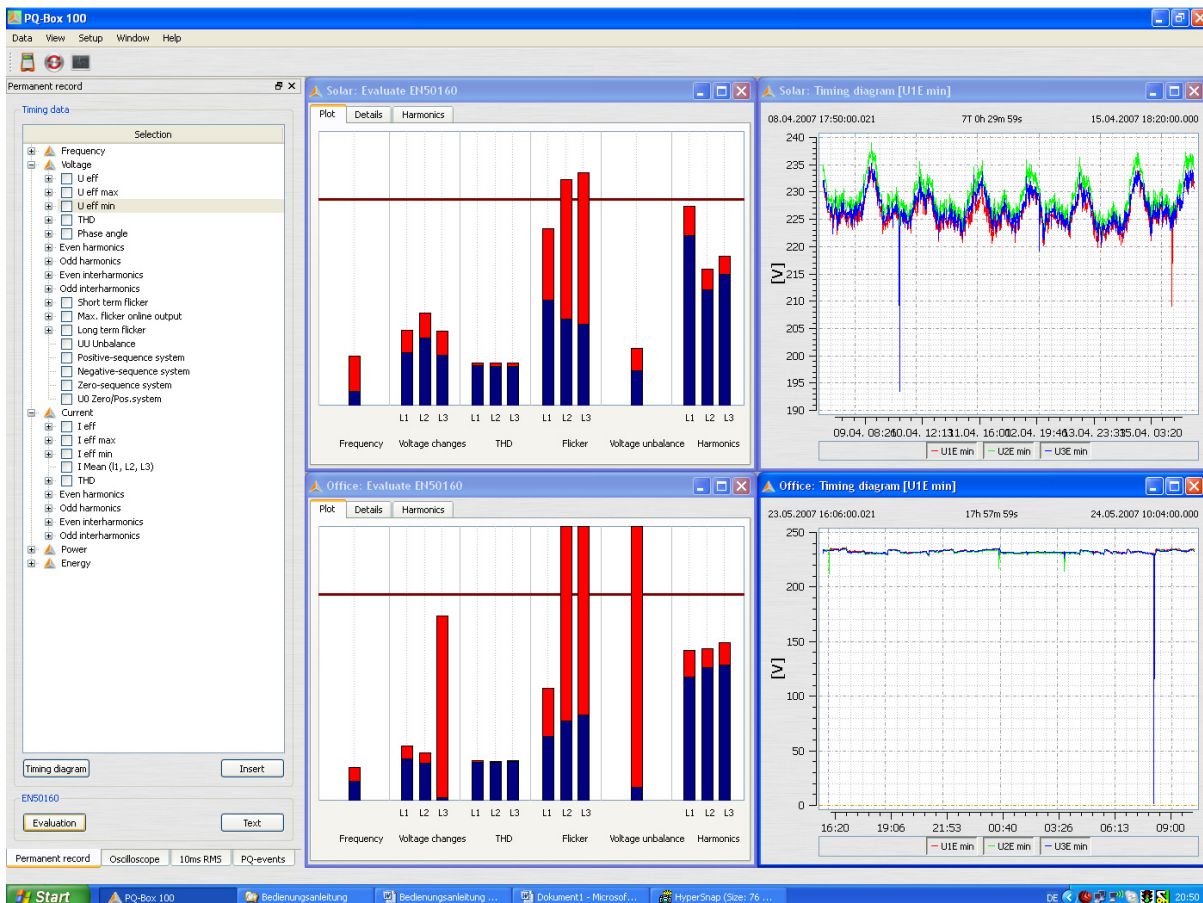

12. PQ-Box Limits and Settings

With the Setup“ icon  you can change the device parameters, trigger conditions and limits.

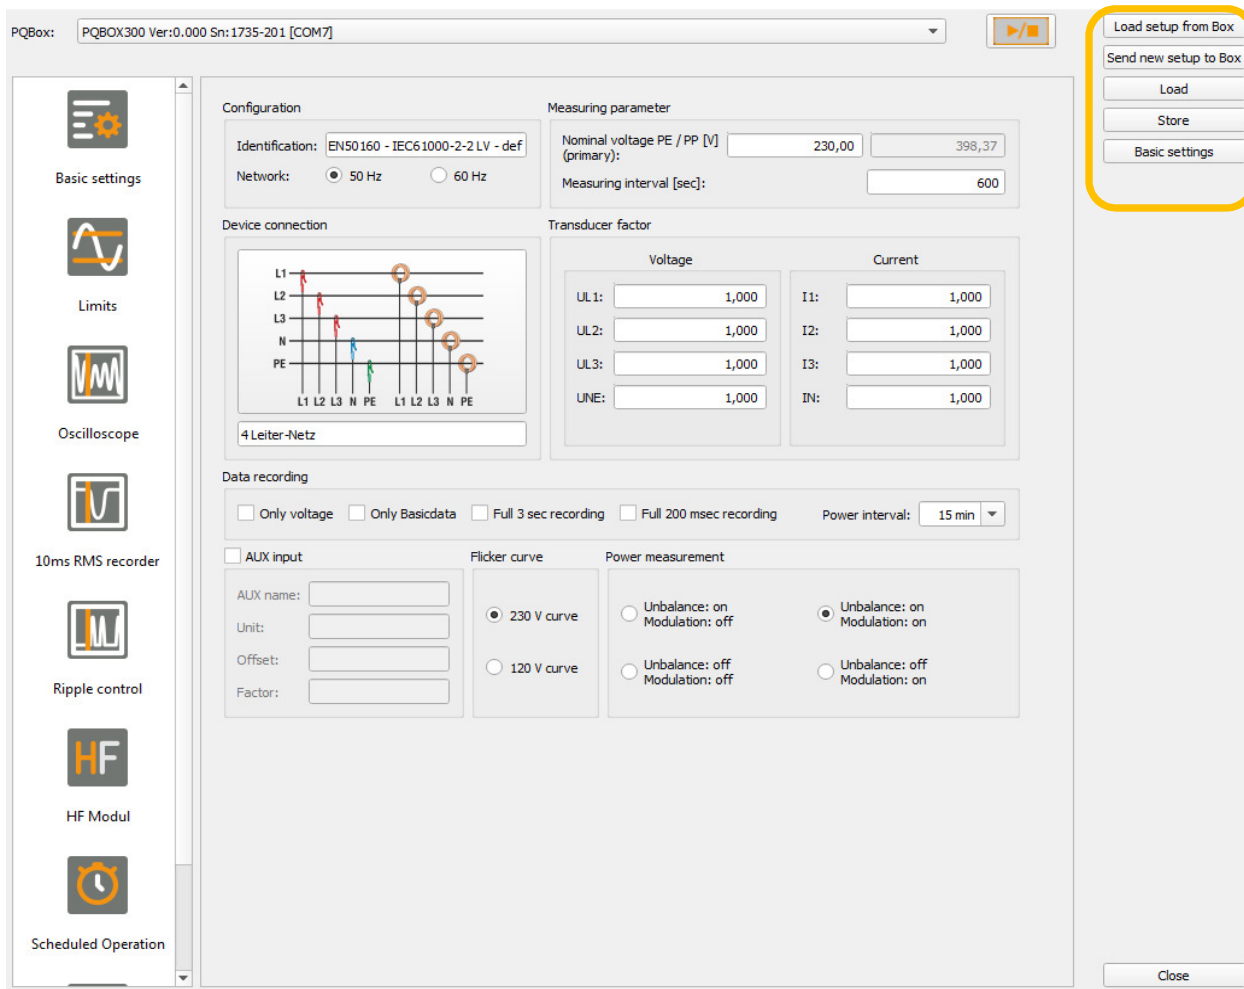

The screenshot shows the PQBox300 software interface. On the left is a sidebar with icons for Basic settings, Limits, Oscilloscope, 10ms RMS recorder, Ripple control, HF Modul, and Scheduled Operation. The main area contains several configuration panels: Configuration (Identification, Network), Measuring parameter (Nominal voltage, Measuring interval), Device connection (a diagram of a 4-leiter network), Transducer factor (Voltage and Current settings), Data recording (checkboxes for recording options and a power interval), AUX input, Flicker curve, and Power measurement. On the right side, there is a yellow-bordered panel with five buttons: 'Load setup from Box', 'Send new setup to Box', 'Load', 'Store', and 'Basic settings'. At the bottom right of the main window is a 'Close' button.

Load setup from Box

Loads the current settings from the network analyser to PC screen

Send new setup to Box

Sends currently displayed settings to the PQ-Box

Load

Opens a template file of settings, which has previously been stored on the PC

Store

Saves a setup file to the PC

Basic settings

Resets displayed settings to default values. (Please note these still need to be “sent” to the PQ-Box to take effect). The Basic settings button loads all settings from the stored file “PQBox_Param_default.ini” This file can be overwritten if you desire to create your own default settings. Note that each setting file contains all the “Basic Settings”, “Limits”, “Oscilloscope” & “10ms RMS recorder” setting values. These are not stored individually.



This function can start and stop a measurement on the meter from the software.

12.1 Setup - Basic Settings



Basic settings


In the Basic Settings menu, settings such as the network configuration, nominal voltage and transmission ratio of current and voltage transformers are set.

Voltage configuration:

- 1 wire system (single phase L1)
- 3 wire system (insolated network)
- 4 wire system (L1, L2, L3, N, earth)
- V-circuit (This function is activated if the secondary voltage transformer in the medium or high-voltage network is connected in a V-connection. The power connection U2 is at ground.)
- Delta high leg network
- Split phase network


With the 3-wire or 4-wire the device distinguishes the configuration of the network to be measured. In an isolated 3-wire network, all ratings from the EN50160 standard are calculated from the wire voltages. In a 4-wire network (grounded network) all Power-Quality parameters are derived from the phase voltages. For single phase measurement only phase L1, N and PE will be recorded.

8 configurations are available for PQ-Box connection.

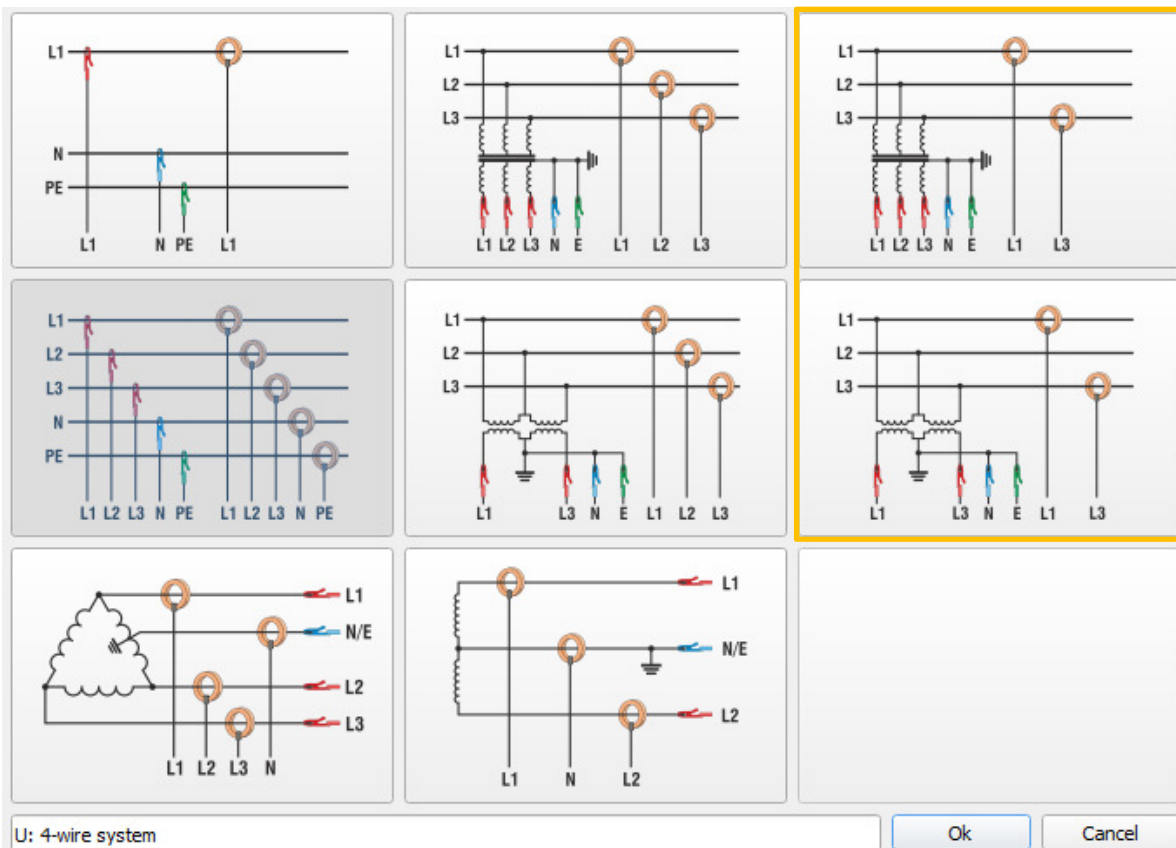

This function is activated if the secondary current transformer in the medium or high-voltage network is connected in an Aron-connection. The current L2 is not connected and calculated by the PQ-Box.

It is possible to describe the measurement/setup with user defined text (up to 32 characters). After the measurement is done, this text can be found in “Comment 2”.

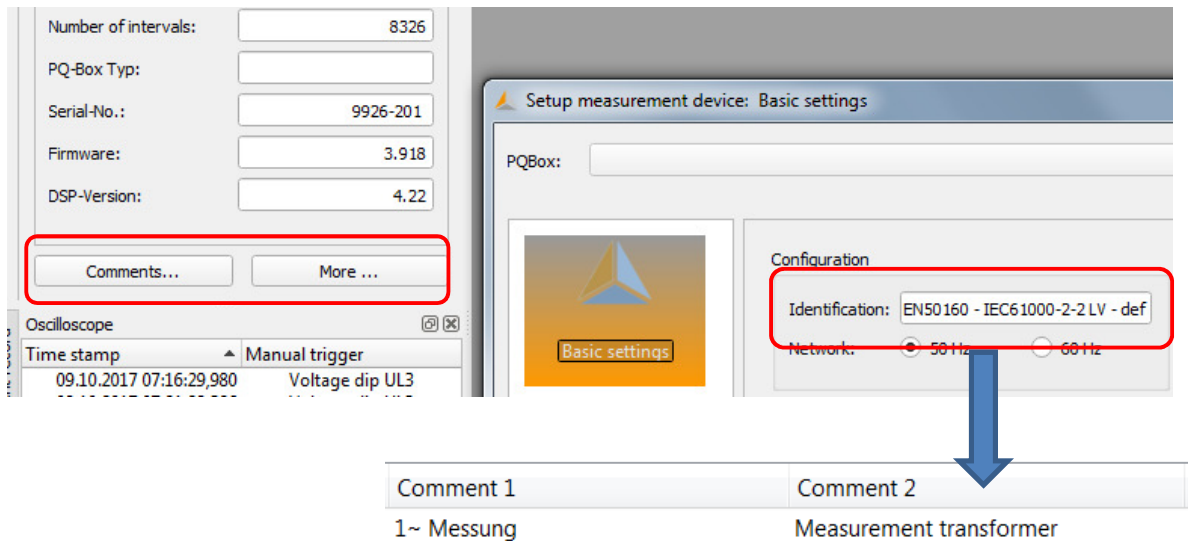

Nominal voltage PE / PP [V]:	230,00	398,37
------------------------------	--------	--------

The PQ-Box bases all trigger thresholds and PQ events on the set “Nominal voltage”.


The contractually agreed voltage should be specified as the nominal voltage in all network configurations, e.g. 230 V or 20500 V

Measuring interval [sec]:	600
---------------------------	-----

The measuring interval of the PQ-Box can be set to any value within the range of one second to 1800 seconds. The default setting is 10 minutes as this is the interval specified in the EN50160 and IEC61000-2-2 standards.

Data recording of PQ-Box

The resulting data size can be strongly influenced at this point.

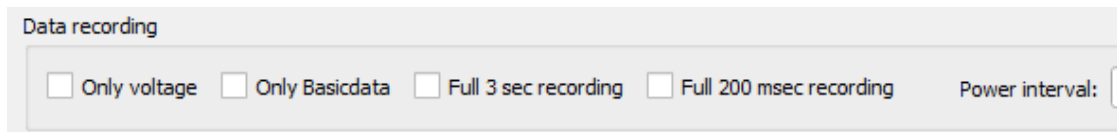

- **Only voltage**

In this setting, no currents and power values are recorded. The amount of data reduced to about 40%.

- **Only Basic data**

In “Basic data” no harmonics, interharmonics or phase angle of harmonics will be recorded. All recorders are still active.

- **Measuring interval 200ms / 3 sec**

Parallel to the free data class (1Sec to 30Min), the two data classes can be activated for 3 seconds and / or 200ms



Note - data quantity

These two data classes are only suitable for short measuring periods and produce a very large amount of data. The same applies to the setting of the free measuring interval less than 60 seconds. The fault records additional increase the memory.

Examples of the data size:

- The free measurement interval of **10 minutes (600 seconds)** produces a data size of about **15 MB in a week**
- The free measurement interval of **1 second** produces a data size of about **15 MB in 30 minutes**
- The 200 ms interval produce a data size of about **80MB per one hour**
- The 3 sec interval produce a data size of about **5MB per one hour**

- **Power interval**

All power values are also recorded at the freely adjustable interval of 10, 15 or 30 minute intervals.

These intervals always start in sync with the full hour.

Example: If recording is started at 14:37, and 15 minute interval has been selected, the first valid power date interval will be 14:45 to 15:00.

Measurement values in basic data:

☐ Only Basicdata

Status, Events, Flagging
Frequency values (mean, extreme)
Voltage values (mean, extreme)
Flicker
Current values (mean, extreme)
Power values (mean, extreme)
Ripple signal voltage
THC, K-Factor, Phaseangle, symmetrical components
Distortion power, Power factor
Spannungsabweichung, Symmetrie, PWHD
PWHD, PHC current
cosPhi, sinPhi, tanPhi, power values fundamental
Reactive power fundamental
10/15/30-minutes interval
Power values (mean, extreme)
Distortion power, Power factor
cosPhi, sinPhi, tanPhi, power values fundamental
Reactive power fundamental

Example for basic data:

- One measurement file with 1 sec interval produces about 6,6 MB data per hour.
- 1 GB memory will be filled in 6,6 days.

Transducer factor voltage and current

Transducer factor	
Voltage	Current
UL1: <input type="text" value="1,000"/>	I1: <input type="text" value="1,000"/>
UL2: <input type="text" value="1,000"/>	I2: <input type="text" value="1,000"/>
UL3: <input type="text" value="1,000"/>	I3: <input type="text" value="1,000"/>
UNE: <input type="text" value="1,000"/>	IN: <input type="text" value="1,000"/>

In the converter settings the transmission ratio of current and voltage transformers to which the network analyzer is connected is entered.

Example:

Voltage: primary = 20,000 V; secondary = 100 V; Conversion factor UL1 = 200

Current: 100 A / 5 A = Conversion factor 20

Setting of Power measurement

The calculation of the power values can be changed in different settings:

Power measurement	
<input type="radio"/> Unbalance: on Modulation: off	<input checked="" type="radio"/> Unbalance: on Modulation: on ← Basic setting
<input type="radio"/> Unbalance: off Modulation: off	<input type="radio"/> Unbalance: off Modulation: on

This setting on power calculation has also an effect on the power values in the display of the PQ-Box and the online values.

- Power measurement with calculation of the unbalance reactive power and modulation reactive power is the basic setting of the PQ-Box.


12.2 Setup – EN50160 / IEC61000-2-2 / IEC61000-2-4 Limits



Limits

In this menu item, all the limits from the EN50160 and IEC61000-2-2 standard are present. The compatibility levels can be changed by the user.


Using the Basic settings button, all the limits are reset to the standard values.

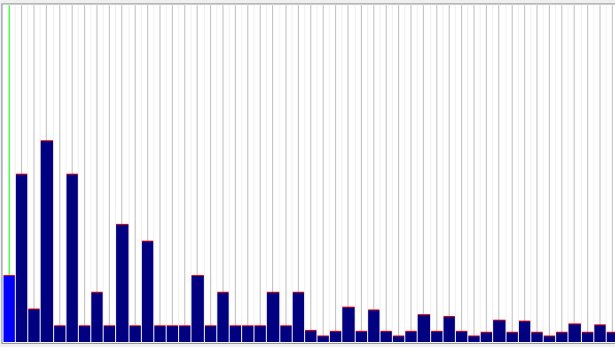Slow voltage change	
Tolerance 95%:	positive [%] 110,00 negative [%] 90,00
Tolerance 100%:	positive [%] 110,00 negative [%] 85,00
Voltage Changes (Dip/Swell)	
Tolerance 100%:	positive [%] 110,00 negative [%] 90,00
Rapid voltage change	
Tolerance band [%]	1,00
Detection limit for RVC [%]	5,00
Network frequency	
Tolerance 99.50%:	positive [Hz] 50,50 negative [Hz] 49,50
Tolerance 100%:	positive [Hz] 52,00 negative [Hz] 47,00
Unbalance	Long term flicker PIt
Tolerance 95% [%]: 2,00	Tolerance 95%: 1,00
Tolerance 100% [%]: 3,00	Tolerance 100%: 5,00
THD	
Tolerance 95% [%]: 8,00	
Tolerance 100% [%]: 12,00	
Voltage harmonics	
	
THD calculation <input checked="" type="radio"/> H2 - H40 <input type="radio"/> H2 - H50	
Grouping of harmonics (U/I) <input checked="" type="radio"/> IEC 61000-4-30 ClassA <input type="radio"/> Full grouped (EN61000-4-7 Kap.5.5.1)	
Harmonics: 2 Tolerance 95% [%]: 2,00 Factor 100%: 1,50	

2nd to 25th Harmonic
EN50160

 
26th to 50th Harmonic
IEC61000-2-2

As the EN50160 only specifies limits for harmonics up to the 25th ordinal, in the PQ-Box 200 basic settings the compatibility level from IEC61000-2-2 for the 26th to 50th harmonics are stored.

The  button enables different configurations stored on the PC to be opened. The IEC61000-2-4 limit files for industrial networks are also stored in the templates.

With the  icon any number of settings templates can be stored for the PQ-Box 200.


THD calculation



The THD calculation of voltage and current can be changed in the settings:

- 2 – 40th
- 2 – 50th

Calculation of harmonics

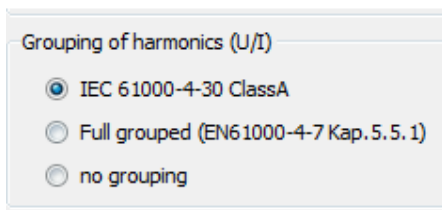

The calculation method for the harmonic groupings can be adjusted depending on the application (PowerQuality measurement or equipment testing).

- IEC61000-4-30 class A calculation
- Full grouping according IEC61000-4-7 section 5.5.1 (IEC 61000-3-X)
Harmonic calculation (f. e. 2. Harm. = 75Hz bis 125Hz).
Interharmonics. (f. e. IH1 55Hz bis 95Hz)
- No grouping – single frequency

12.3 Oscilloscope trigger settings




Oscilloscope

In the "Oscilloscope" menu item, trigger criteria can be set for the oscilloscope. In the default setting an RMS value threshold of +10% and -10% of the nominal voltage is set.

If a field is greyed out ☐ and not checked, this trigger criterion is not active.

All trigger conditions can be operated in parallel and work in "or operation".

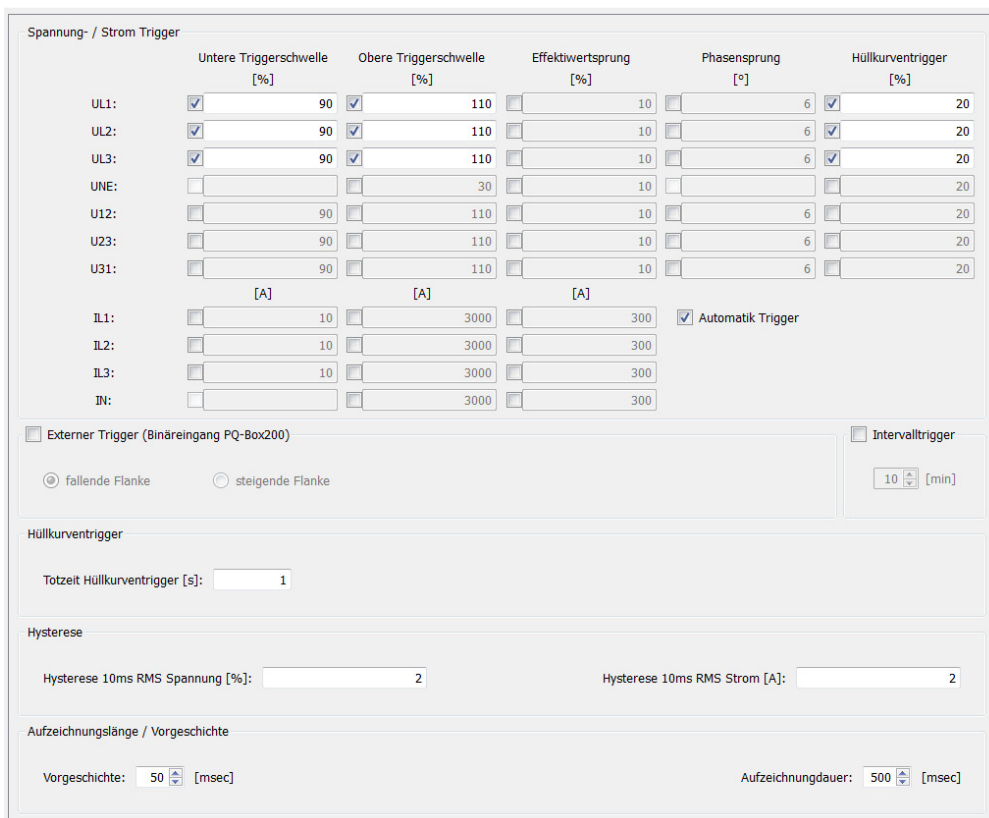


The "Recording Time" is the total recording time for the oscilloscope in milliseconds.

As "History", the time is defined that was recorded before the occurrence of the event.

The length of the oscilloscope image, and the history can be set to any value between 20 ms and 4,000 ms.

Automatic trigger for oscilloscope recorder: If enabled, then the PQ-Box changes all activated trigger thresholds on this page automatically in a limit setting is too sensitive. This prevents unnecessarily large amounts of data being recorded. The "Automatic Trigger" acts selectively on each threshold and increases it. If the network is without any problems, the limits automatically go back to the threshold in the setup.

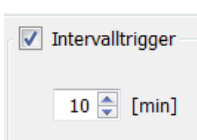

If enabled, an oscilloscope recorder is recorded according to the interval of time. With WinPQ mobil it is possible to calculate the spectrum of the recorder with the integrated FFT functionality.

Explanation of the trigger conditions:

If the trigger thresholds are indicated in "%", this value refers to the nominal voltage set in the setup, e.g. 20,300 V or 400 V.

lower threshold

[%]

Starts a trigger recording on exceeding the set trigger threshold.
Trigger bases are the 10 ms RMS value.

upper threshold

[%]

Starts a trigger recording on exceeding the set trigger threshold.
Trigger bases are the 10 ms RMS value.

step

[%]

Starts a trigger recording on an RMS value jump of the specified amount.
Trigger bases are the 10 ms RMS value.

phase step

[°]


Starts a trigger recording on a phase jump.
The trigger base is a displacement of the sine wave zero crossings in "°".

envelope

[%]

Starts a trigger recording on a sine wave violation. The measurement device identifies a violation of the sine curve on scanning. (e.g. commutation notch)
A reasonable setting of the threshold value is between 10% and 25% of the nominal voltage.

Example of a commutation notch:

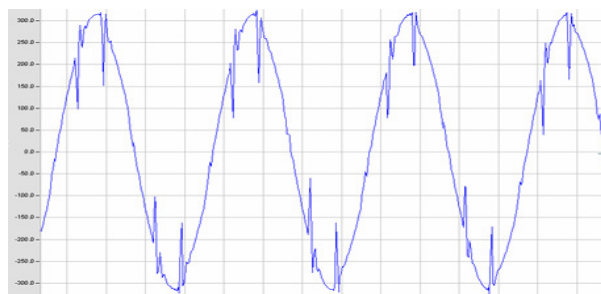

Break time envelope trigger:

The break time envelope trigger can very quickly produce a very large number of oscilloscope images. To reduce the amount of data you can set a fixed time interval between the individual recordings.

Example: break time = 5 seconds

At the end of an oscilloscope recording the trigger condition "envelope trigger" is deactivated for 5 seconds. All other trigger settings continue to work without a downtime.

Hysteresis: In the IEC61000-4-30 standard a hysteresis is provided for events.

Example: Limit for a voltage dip = 90% - Hysteresis = 2%

A network breakdown begins with the 90% limit line being exceeded and is ended when the network voltage reaches 92% (+2%) again.


12.4 ½ period rms Recorder



10ms RMS recorder

In the "rms (1/2 period)" menu item, trigger criteria can be set for the rms recorder. In the default setting an rms value threshold of +10% and -10% of the nominal voltage is set.

Only the threshold values with a tick are active, trigger conditions without ticks are not switched on.

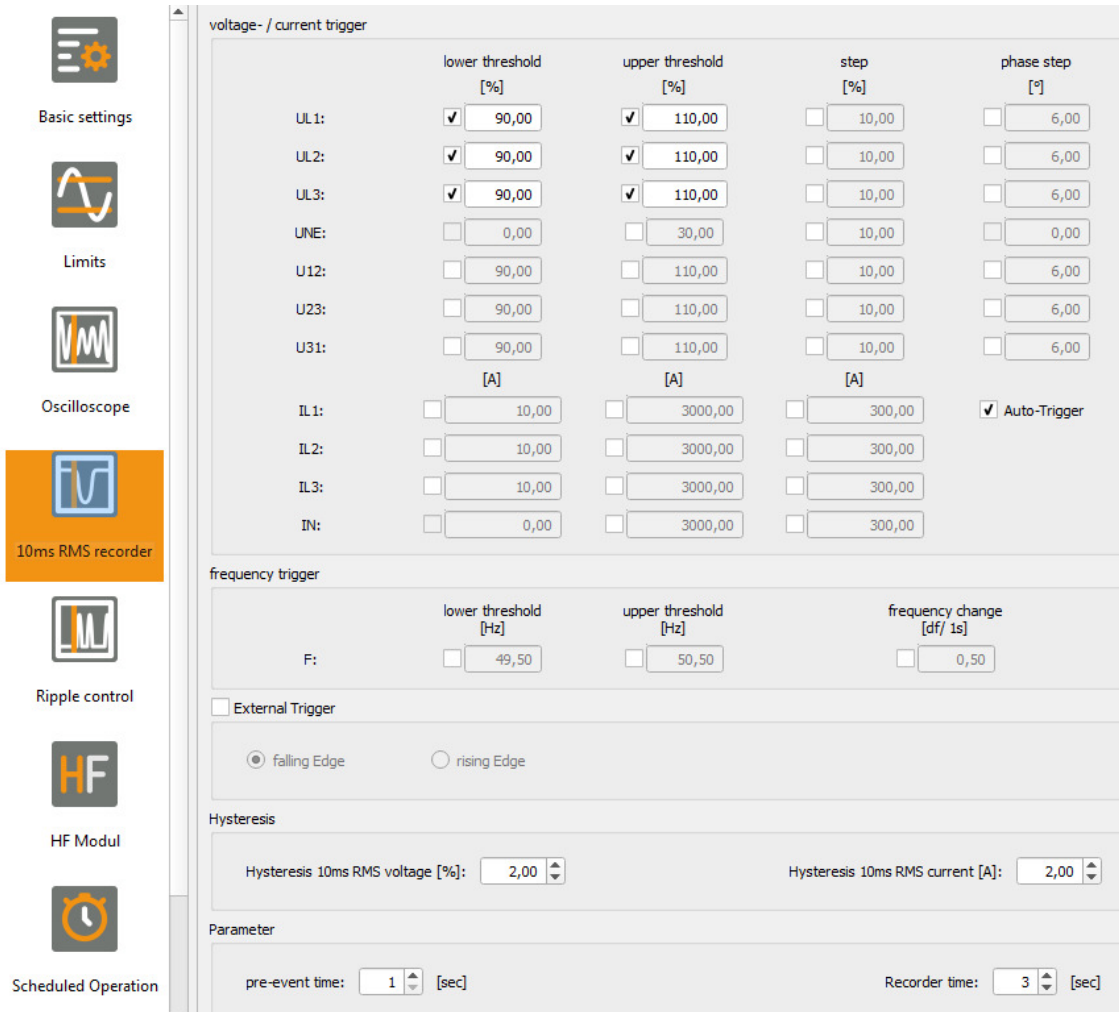

voltage- / current trigger

	lower threshold [%]	upper threshold [%]	step [%]	phase step [°]
UL1:	<input checked="" type="checkbox"/> 90,00	<input checked="" type="checkbox"/> 110,00	<input type="checkbox"/> 10,00	<input type="checkbox"/> 6,00
UL2:	<input checked="" type="checkbox"/> 90,00	<input checked="" type="checkbox"/> 110,00	<input type="checkbox"/> 10,00	<input type="checkbox"/> 6,00
UL3:	<input checked="" type="checkbox"/> 90,00	<input checked="" type="checkbox"/> 110,00	<input type="checkbox"/> 10,00	<input type="checkbox"/> 6,00
UNE:	<input type="checkbox"/> 0,00	<input type="checkbox"/> 30,00	<input type="checkbox"/> 10,00	<input type="checkbox"/> 0,00
U12:	<input type="checkbox"/> 90,00	<input type="checkbox"/> 110,00	<input type="checkbox"/> 10,00	<input type="checkbox"/> 6,00
U23:	<input type="checkbox"/> 90,00	<input type="checkbox"/> 110,00	<input type="checkbox"/> 10,00	<input type="checkbox"/> 6,00
U31:	<input type="checkbox"/> 90,00	<input type="checkbox"/> 110,00	<input type="checkbox"/> 10,00	<input type="checkbox"/> 6,00
	[A]	[A]	[A]	
IL1:	<input type="checkbox"/> 10,00	<input type="checkbox"/> 3000,00	<input type="checkbox"/> 300,00	<input checked="" type="checkbox"/> Auto-Trigger
IL2:	<input type="checkbox"/> 10,00	<input type="checkbox"/> 3000,00	<input type="checkbox"/> 300,00	
IL3:	<input type="checkbox"/> 10,00	<input type="checkbox"/> 3000,00	<input type="checkbox"/> 300,00	
IN:	<input type="checkbox"/> 0,00	<input type="checkbox"/> 3000,00	<input type="checkbox"/> 300,00	

frequency trigger

	lower threshold [Hz]	upper threshold [Hz]	frequency change [df/ 1s]
F:	<input type="checkbox"/> 49,50	<input type="checkbox"/> 50,50	<input type="checkbox"/> 0,50

☐ External Trigger

☒ falling Edge ☐ rising Edge

Hysteresis

Hysteresis 10ms RMS voltage [%]:


Hysteresis 10ms RMS current [A]:

Parameter

pre-event time: [sec]

Recorder time: [sec]

Explanation of the trigger conditions additional to oscilloscope trigger 12.3:

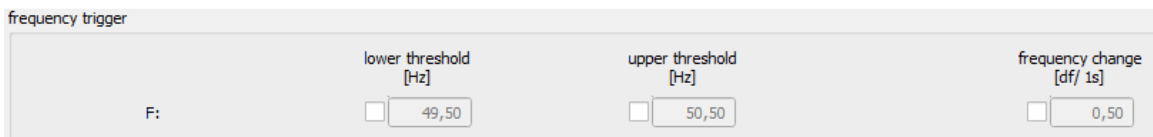

frequency trigger

	lower threshold [Hz]	upper threshold [Hz]	frequency change [df/ 1s]
F:	<input type="checkbox"/> 49,50	<input type="checkbox"/> 50,50	<input type="checkbox"/> 0,50

The ½ period rms recorder can be triggered on lower or upper threshold of the frequency or a frequency change within one second.

The "Recorder Time" is the total recording time for the oscilloscope in seconds.

As "pre event time", the time is defined that was recorded before the occurrence of the event.

The length of the recording, and the history can be set to any value between **1 sec and 600 sec**.

12.5 Automatic Trigger

The automatic trigger function for the oscilloscope recorder and half period recorder can be separated enabled or disabled.

If enabled, the PQ-Box changes independently for all enabled trigger thresholds, in case of a too sensitive threshold. This prevents the recording of unnecessarily large amounts of data.

The "automatic trigger" acts for each threshold selectively and can increase all these limits (e.g. the upper and lower threshold, the step, the phase shift or the wave shape trigger)

Should a power failure occur, which leads to a continuous violation of the lower trigger threshold, the limit is automatically reset to a preset value.

Implementation of the automatic trigger:

Three timers act to decrease the sensitivity of the affected trigger level. The trigger levels for the upper threshold, lower threshold, step, phase shift and wave shape triggers are each adjusted independently.

▶ Expansion threshold:

This timer acts to decrease the trigger sensitivity based on an exponential function. The larger the difference between the actual trigger condition and the setting, the longer (and larger?) a decreased sensitivity is applied.

▶ Hold threshold

If a new trigger condition occurs that is just slightly higher than the last trigger level, that new trigger level is used as the threshold for the next 600 seconds (the 'hold threshold').

▶ Approximation threshold

At the end of the 'hold threshold', the 'approximation threshold' timer adjusts exponentially the threshold back to the setting value.

Using the automatic trigger function the user can ensure that the highest interference will be recorded always.



For short measurement tasks or with custom trigger thresholds, please turn the automatic trigger function always off.

Do you want to capture measurement data over a long period (> 5 days) and you do not know the exact conditions of the network? Then the auto-trigger function helps when the thresholds are set too low to not fill immediately the device memory.

12.6 Ripple control signal analysis



Ripple control

<input checked="" type="checkbox"/> Ripple control signal: ON / OFF	
Ripple-control frequency [Hz]	287
Limit [% UN]	9,00
Bandwidth filter [Hz]	5
Recorder time [sec]	60
Trigger threshold [% UN]	0,5

Ripple-control frequency [Hz]	287
-------------------------------	-----

In the ripple control signal frequency field any frequency can be entered in the range from 100 Hz to 3,750 Hz. This frequency now will be permanently recorded as a maximum value of 200ms interval in the cyclic data. If the frequency will be set smaller than 100Hz, the 3 sec. recordings for this signal stop.

Limit [% UN]	9,00
--------------	------

At this point, the limit value of the standard evaluation for the ripple control frequency can be changed.

Option ripple signal recorder (R1)

If the option “ripple signal recorder” activated in the PQ-Box, it is possible to start a high speed recorder that monitors this frequency.

You can setup the frequency of the signal, the bandwidth of the filter, the recorder time length and the trigger threshold voltage. The maximum recorder length is 210 seconds.

<input checked="" type="checkbox"/> Ripple control signal recorder ON / OFF	It is possible to enable or disable this recorder
-----------------------------------------------------------------------------	---------------------------------------------------

PQ-Box with licensed/active optional “Ripple Signal Recorder” can be identified by the LCD display (6th Screen) showing “+S” after the PQ-Box 150 type.

- ▶ **The ripple control recorder can generate large amounts of data and should be turned on only when specifically a disturbance in the waveform is searched.**

12.7 Scheduled Operation



Scheduled Operation


Programming the PQ-Box through a time command


It is possible to start and stop the PQ-Box using a predefined time command.

Example: The PQ-Box should switch on at the 27th Dec. 2017 at 15:00 o'clock and stop at 1st Jan. 2018 at 15:00 o'clock.

- If the start button on the PQ-Box is pressed before the measurement job, the PQ-Box starts recording immediately.
- If the stop button of the PQ-Box is pressed before the end of the measurement job, the measurement is stopped immediately.

Setting the PQ-Box date and time:

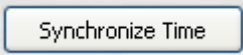 Synchronizes the PQ-Box time with the PC time at the moment when the button is pressed. The PQ-Box time will not hereafter be permanently shown on the PC screen.

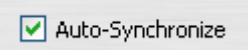 If this option is activated, the PC automatically synchronizes the PQ-Box as each setup is sent.

12.8 PQ-Box 150 Firmware Update




Update device


In the "Update" menu the firmware of the network analyzer can be updated or the PQ-Box can be assigned with a license code with more functions.

Sequence for a PQ-Box 150 update:

- 1) Connect the power to the PQ-Box (power supply)
- 2) Connect PQ Box with USB or TCP interface to PC
- 3) Open the Settings / Update menu in the software
- 4) Load the update file "MCU-Application" onto the device
- 5) The PQ-Box restarting automatically

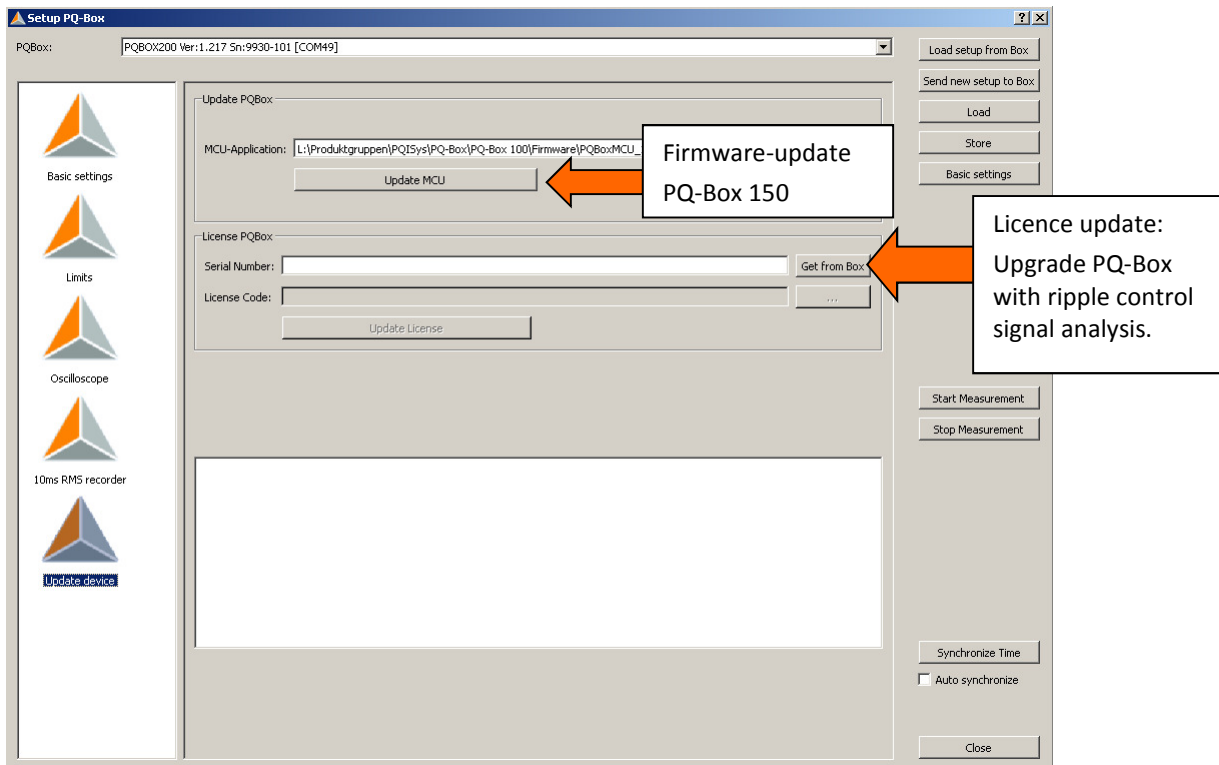

12.9 PQ-Box License Update

Using the  button, with the measurement device connected, the serial number of the PQ-Box is displayed. Enter the license code in the "License Code" field by specifying the directory or using the keyboard. If the license code matches the serial number of the device, the field "Update License" is activated.

13. Data Converter


13.1 Change VT and CT ratio

With the "Data Converter" program it is possible to make corrections to an existing measurement file. If a PQ-Box is parameterized with the wrong nominal voltage or the wrong current conversion factor, this can be changed here afterwards.

- ▶ **Changing the nominal voltage, e.g. from 400 V to 20,000 V**
- ▶ **Changing the current conversion factor, e.g. from 1:1 to 1:10**



- 1) Open the measurement file to be changed with "Load"
- 2) Enter the correct voltage or current conversion factor
- 3) With "Execute", the measured data are now converted and saved to a copy of the original file. This can be identified by the label "New" in comment field 4.

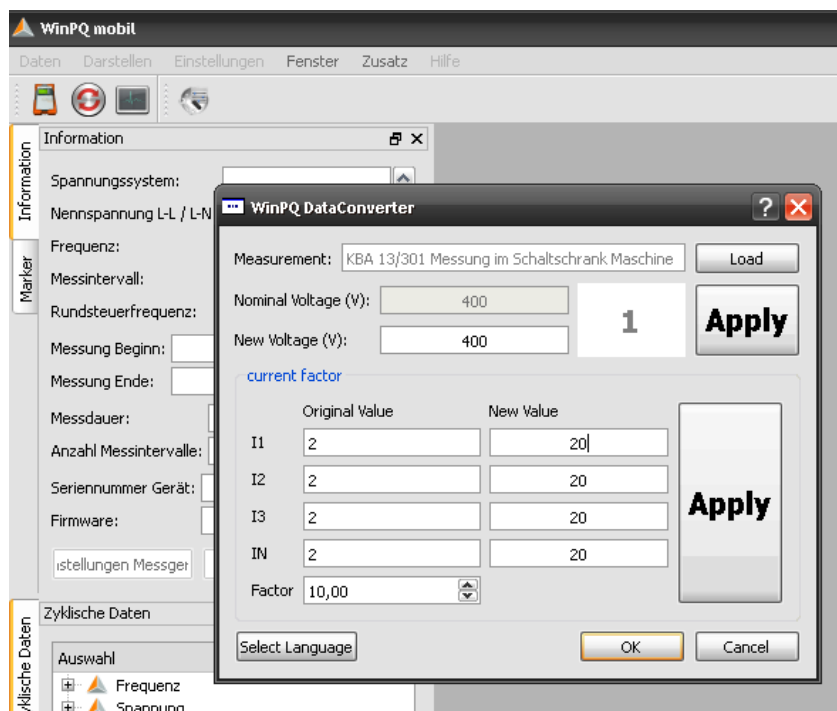

13.2 Merging partial measurements into a combined measurement

Using the Data Converter-program, individual partial measurements can be merged into one combined measurement.

- 1) Open the measurement file to be changed with "Load"
- 2) Mark two or more data files
- 3) With "Combine" these measurement files will be merged and saved in a new measurement file.

Hard disk | Import | Measurement device

Directory: D:\A-Eberle-Produktgruppen\Testmessungen

Date	Type	Version	Size	Comment 1	Comment 2	Comment 3	Comment 4
10.01.2017 10:03:26	200	V3.006	87508 KB	EMPTY	EN50160-IEC61000-2-2LV-def	EMPTY	EMPTY
05.10.2016 12:27:25	150	V3.004	699 KB	EMPTY	EN61000-2-4 Class 3	EMPTY	EMPTY
05.10.2016 08:44:29	150	V3.004	896 KB	Leistung Harmonische	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
05.10.2016 08:04:47	150	V3.004	3735 KB	Rundsteuer 250Hz	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
04.10.2016 15:57:32	150	V3.004	55271 KB	Test Flaggging	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
15.09.2016 09:48:49	150	V3.003	458721 KB	Test 200ms 3 s viele Oszi	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
15.09.2016 01:54:55	150	V3.003	523760 KB	EMPTY	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
14.09.2016 16:34:24	150	V3.003	696321 KB	EMPTY	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
07.09.2016 11:42:28	100	V02.013	666 KB	Unterbrechnung	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
06.09.2016 15:24:14	100	V02.013	8086 KB	Test Energie mit Unterbrechnung	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
06.09.2016 14:06:54	100	V02.013	396 KB	EMPTY	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
06.09.2016 12:14:34	100	V02.013	410 KB	EMPTY	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
06.09.2016 12:14:34	100	V02.013	804 KB	EMPTY_new	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
01.09.2016 09:14:28	150	V3.003	717 KB	nur n sec ohne 3 sec ohne 200ms	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
31.08.2016 12:11:05	150	V3.003	23962 KB	200ms 3 s nur Basisdaten	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
31.08.2016 11:53:01	150	V3.003	9585 KB	200ms 3s nur Spannung	EN50160 - IEC61000-2-2 LV - def	EMPTY	EMPTY
31.08.2016 10:51:49	150	V3.003	1508 KB	Test ohne 200ms	EN50160 - IEC61000-2-2 LV - def N Sec 60sec	EMPTY	EMPTY

Combine

Delete



Abort

14. Online Analysis: PQ-Box & PC



Using the "Online analysis" function, RMS values, oscilloscope images, harmonics, interharmonics, and current flow direction of the harmonics can be displayed online on the screen of a PC or laptop. The data displayed will be refreshed in the second intervals.


The online measurement is possible during a current measurement, before a started measurement and after a completed measurement,

All real time data screens can be started and stopped with the icons:  

14.1 Online - Oscilloscope Image

All of the following images of the online measurement are shown in the "Black Magic" design

From the "Oscilloscope" page, the online oscilloscope, with 40,96kHz sampling of all measurement channels are displayed on the screen.

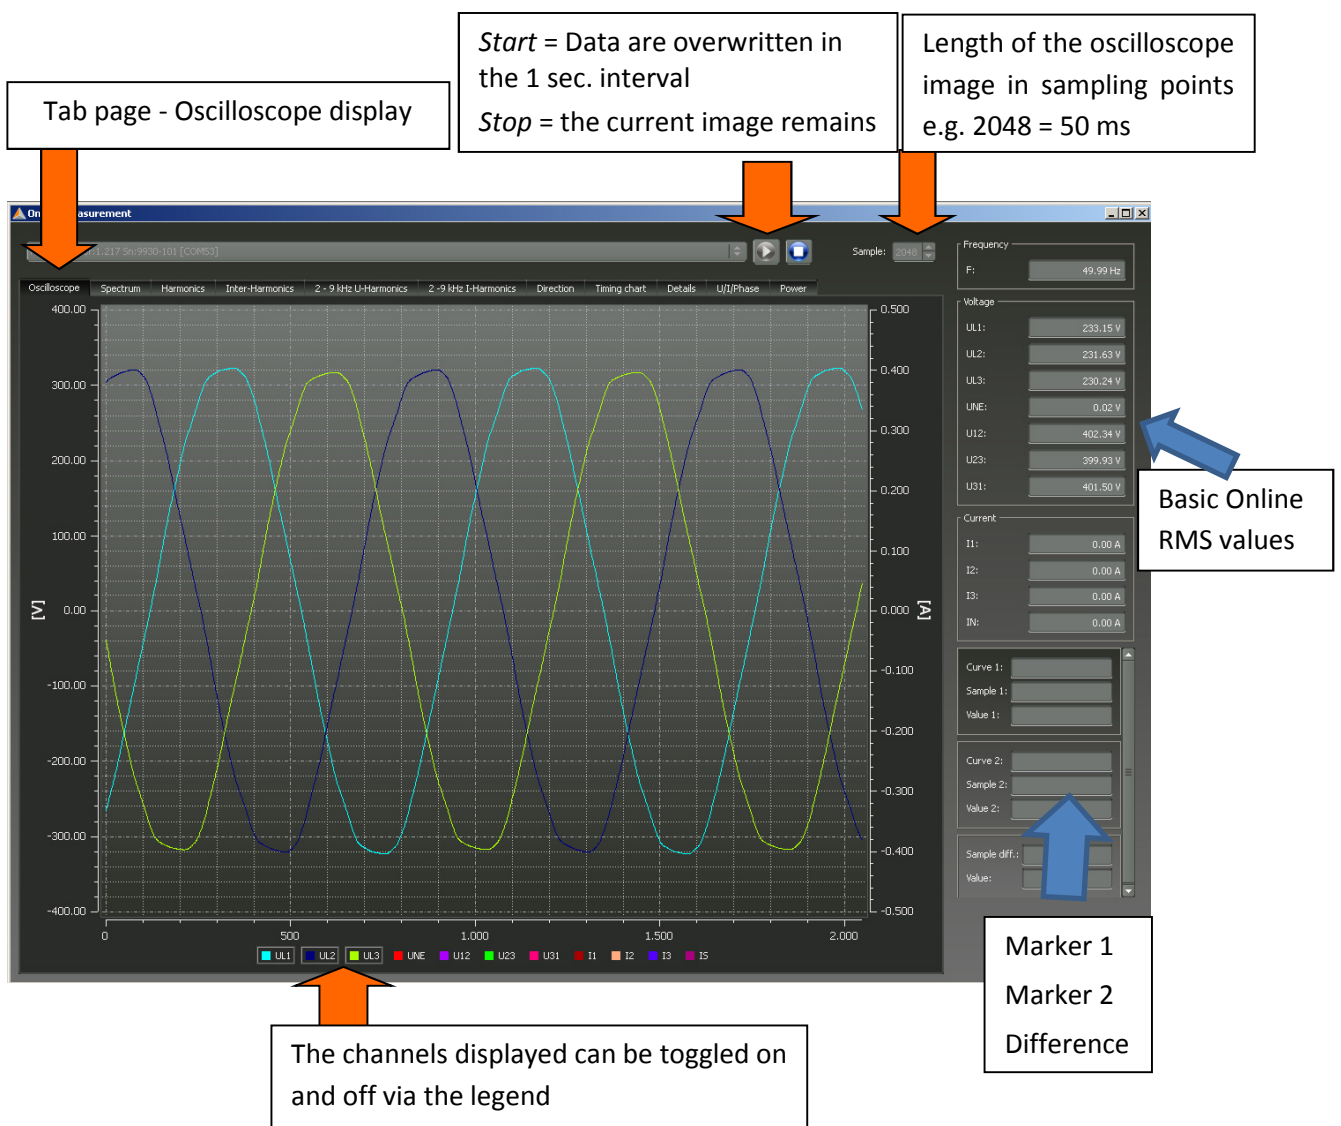


14.2 Online – FFT – 20,000 Hz


With the "Spectrum" measurement function, all of the harmonics and interharmonics for voltages and currents are displayed online.

- PQ-Box 150 - DC to 10.000 Hz

There is the possibility to choose between two FFT calculation methods in the online software:

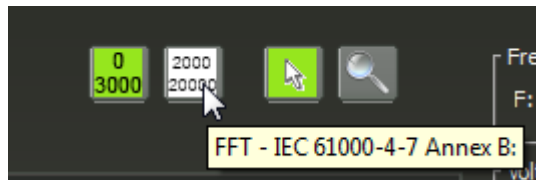

- 0 - 3.000 Hz: calculation procedure according to IEC 61000-4-30 class A (Grid synchronous FFT)
- 2.000 Hz – 10kHz: calculation procedure according to IEC 61000-4 -7 Appendix B

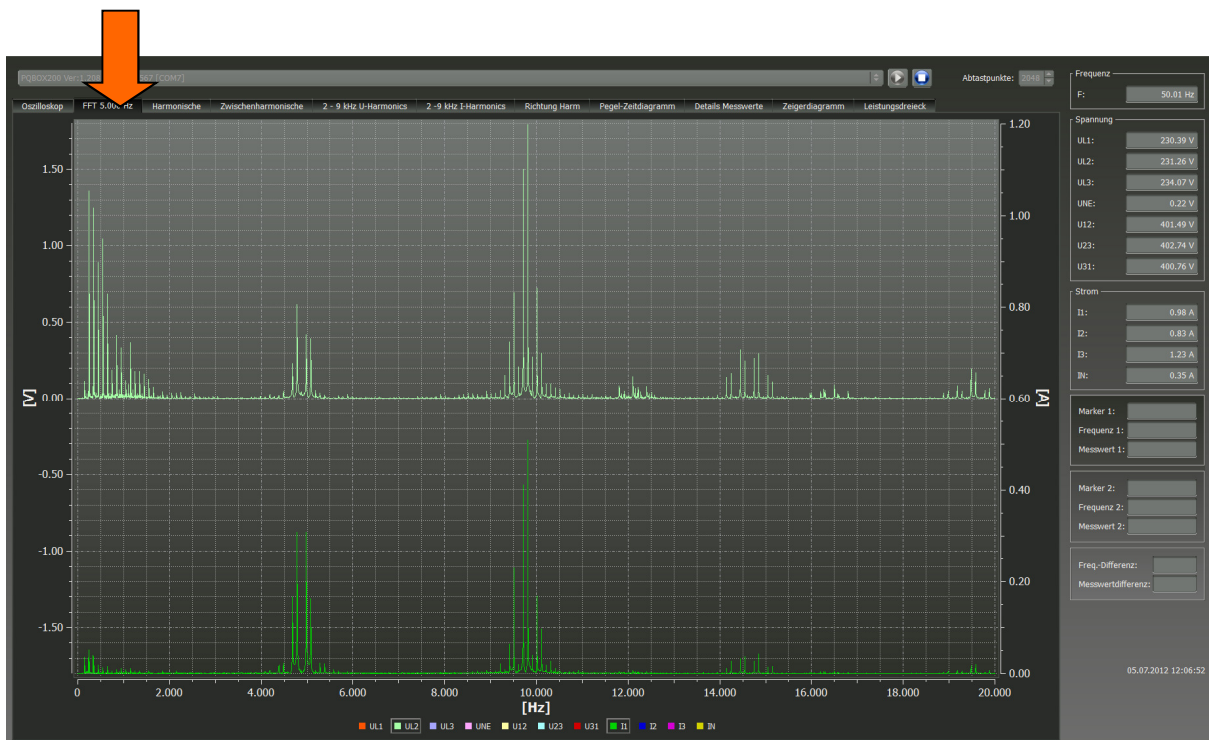


The following functions are available in the "right mouse" menu:

- Print: The current image is sent to the printer
- Clipboard: The spectrum is copied to the Windows clipboard
- Incl. DC: The DC components can be toggled on and off in the graphic
- incl. Fundamental oscillation: The fundamental oscillations can be toggled on and off in the graphic

Maximum values logging FFT

Using this function it is possible to hold the maximum value of the spectral lines of online FFT. (Dashed line).


With this function it is possible to determine direct in online view which maximum values of harmonics or interharmonics exists direct during one measurement period.

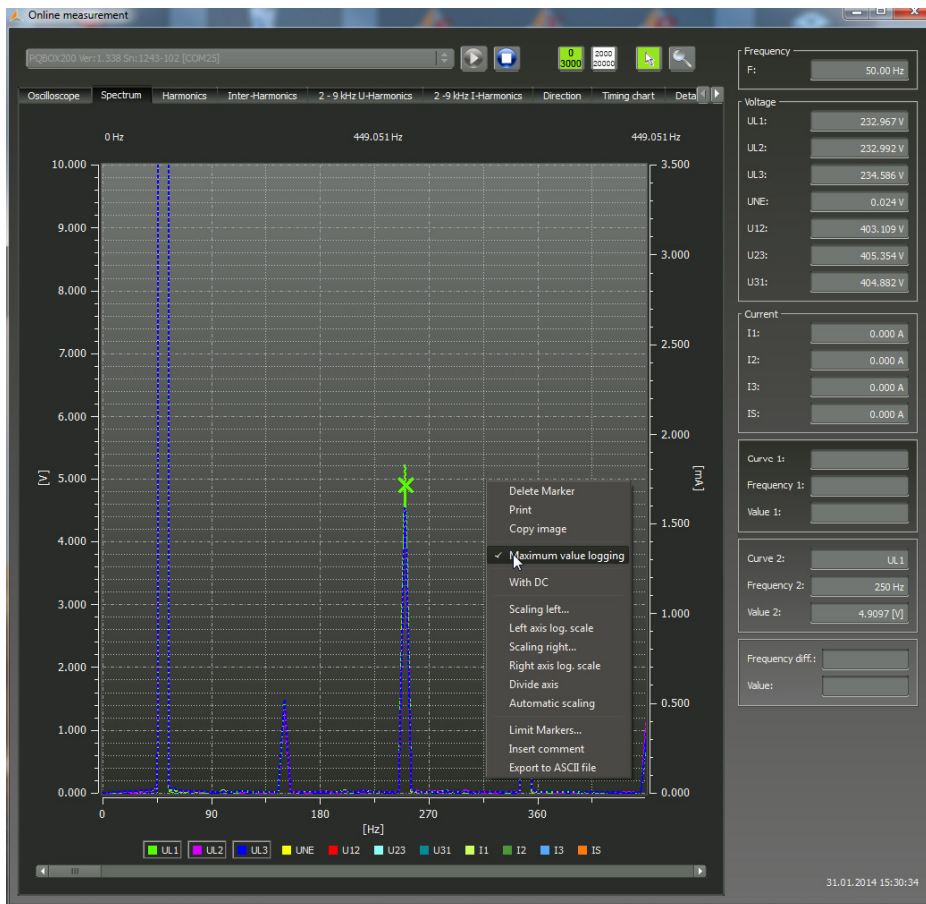


14.3 Online - Harmonics

From the "Harmonics" tab page, all of the current and voltage harmonics (2nd to 50th) can be displayed online. The measurement data is calculated by the measuring device in accordance with IEC61000-4-30 Class A and transferred to the PC.

Tab page – Voltage and current harmonics

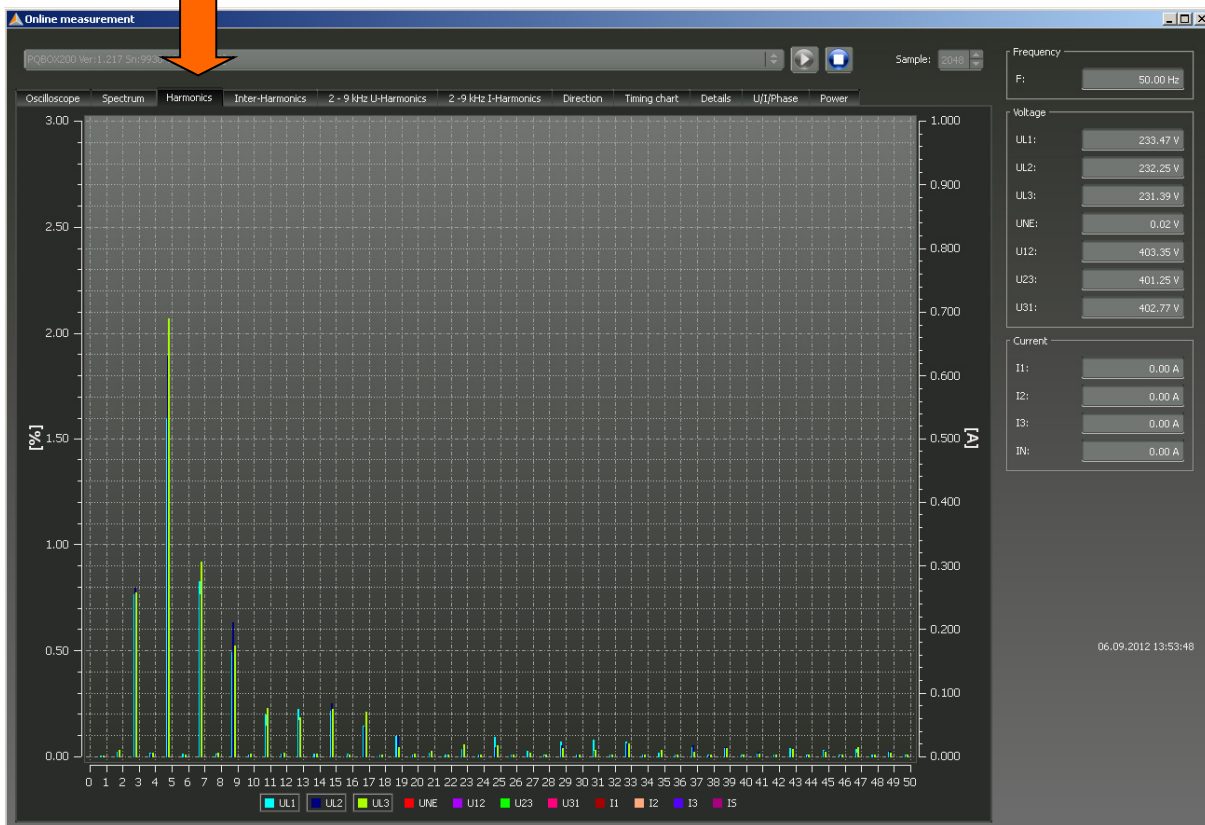


Different functions are possible in the "right mouse menu" (Data export, manual scaling, split axis)

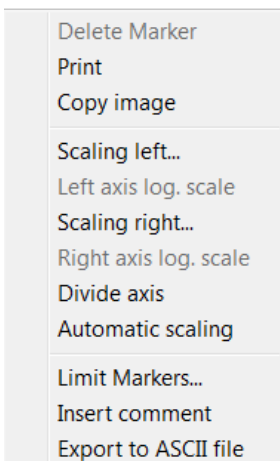


14.4 Online - Interharmonics

From the "Interharmonics" tab page, all of the current and voltage interharmonics up to 2,500 Hz can be displayed online. The measurement data is calculated by the measuring device in accordance with IEC61000-4-30 Class A following the grouping process and transferred to the PC.

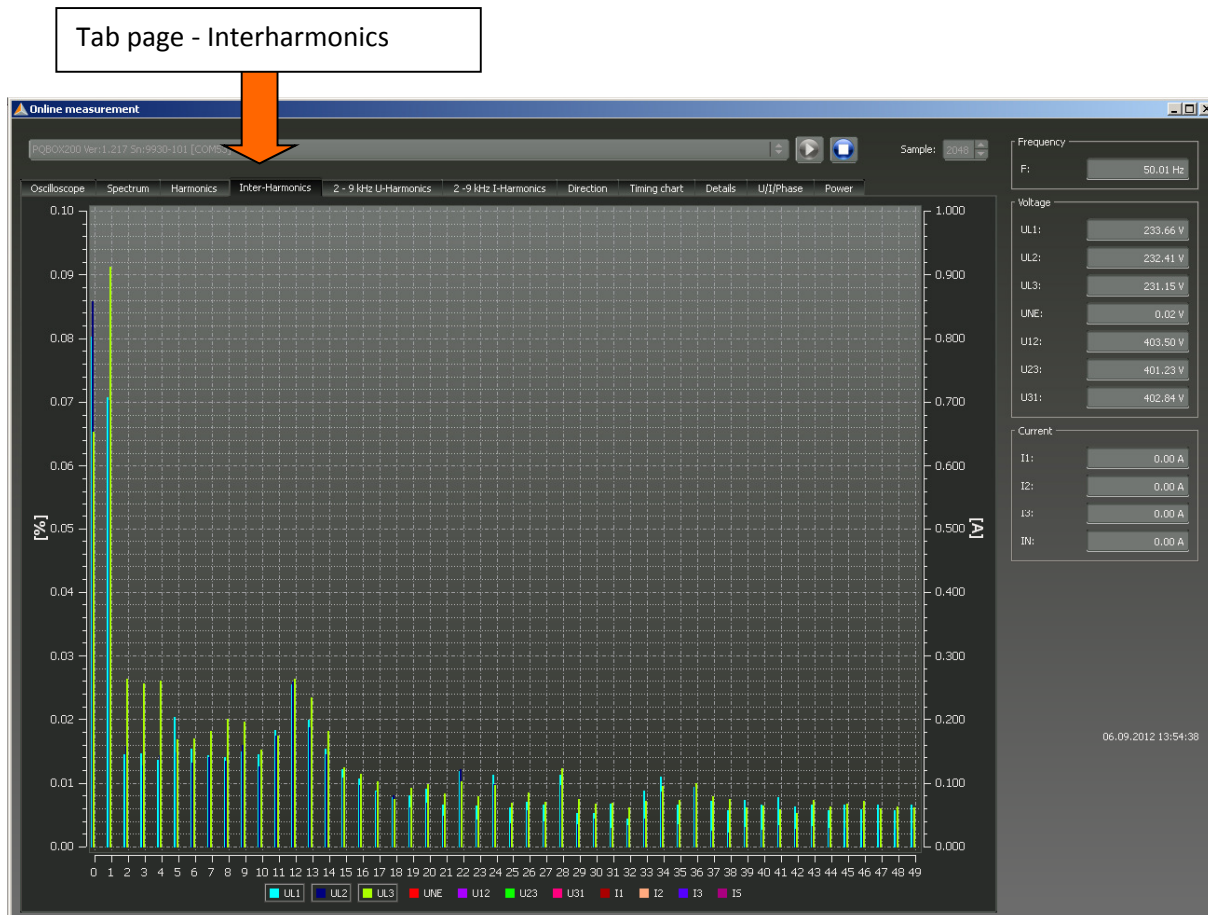

Explanation of the grouping process in accordance with the IEC:


To evaluate the interharmonics in the network, subgroups are created. In each case, all of the interharmonics between two harmonics are combined into one harmonics subgroup.

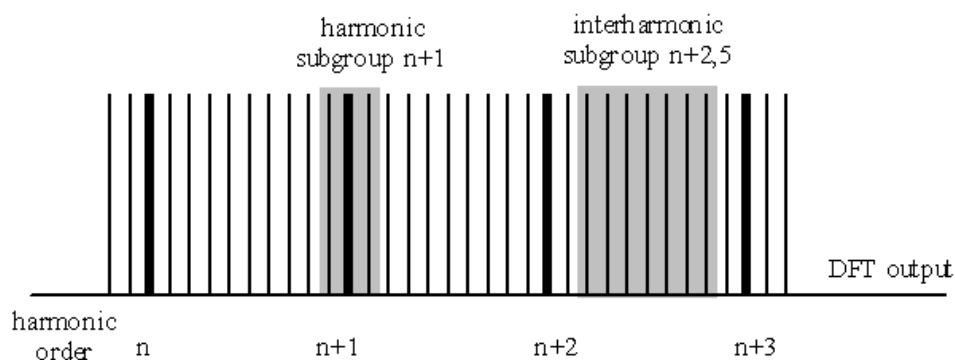

14.5 Online – Frequency Bands 2 kHz to 9 kHz (Option)

From the "2 to 9 kHz" tab page, all of the current and voltage harmonics shown in 200 Hz-groups. The centre frequency is always indicated.

- Example: All frequencies from 8,805 Hz to 9,000 Hz are located in the 8.9 kHz band.

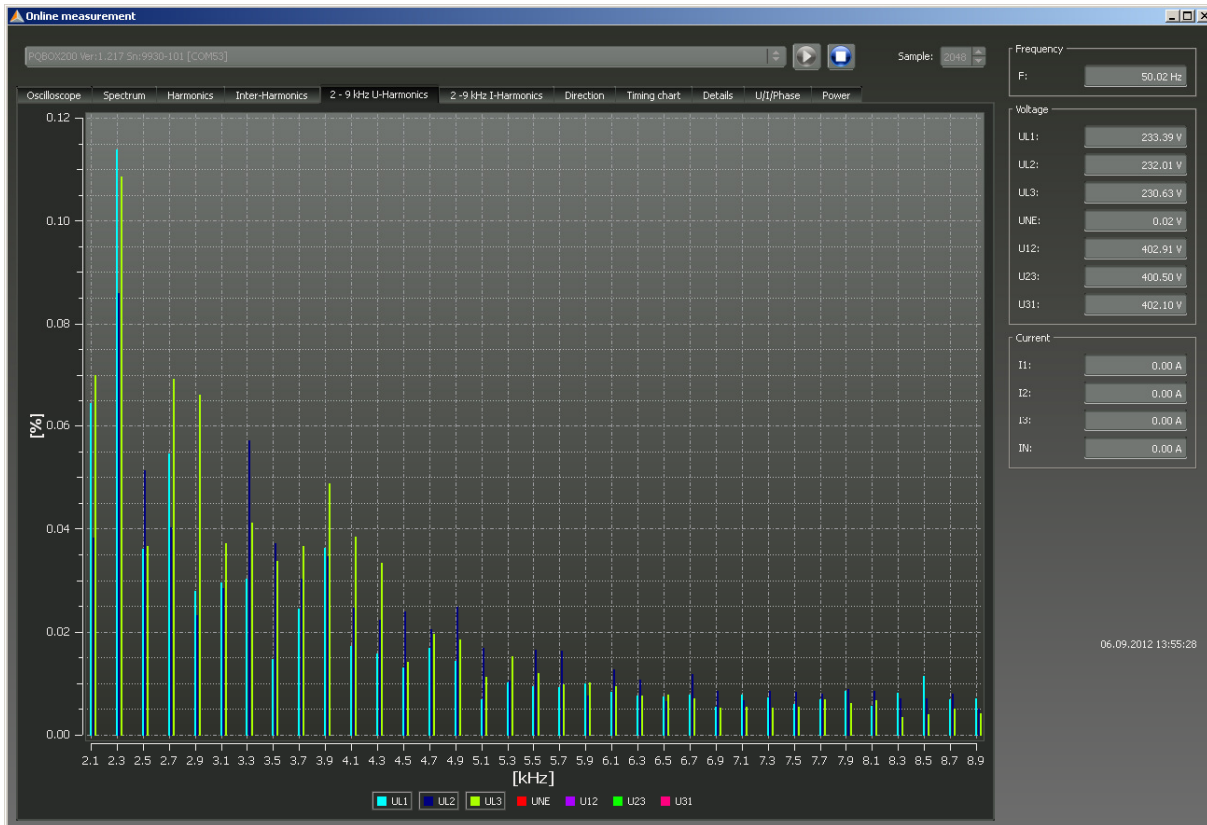


14.6 Online – Direction of the Harmonics

From the "Harmonics Direction" tape page, the current flow direction of the harmonics at the measuring point is displayed. A positive value (+) represents a direction of current flow from the network to the consumer (in this example, the 5th harmonic).

If the measurement value is negative (-), a current flow from the consumer to the network is present.

$$P_2 = U_2 \cdot I_2 \cdot \cos \varphi_2$$

Note: In a network preloaded with voltage harmonics, the statement of the direction of the harmonics is not always certain. The greater the load on the network with a current harmonic from the consumer is and the less the network is preloaded with voltage harmonics, the greater the significance of this sign on the causer of harmonics in the network.

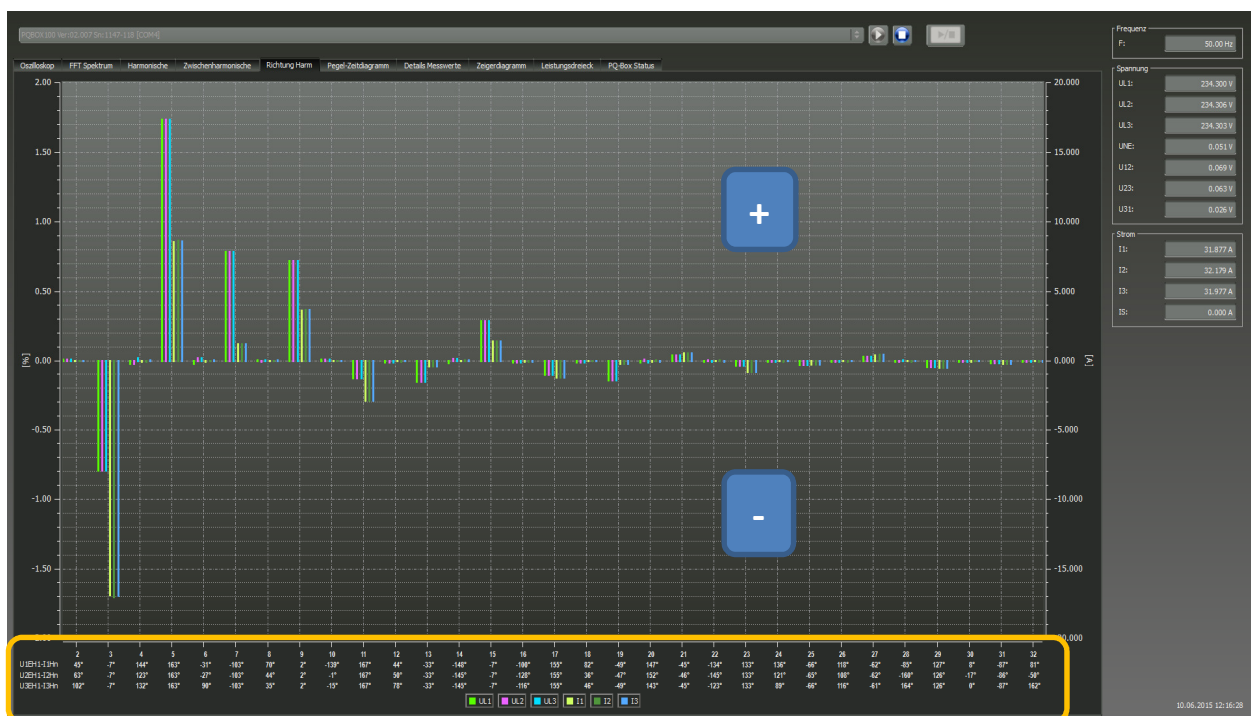


Phase angle of current harmonics:

The measured values at the bottom of the graph show the angle of the current harmonics with respect to each fundamental of the voltage.

► **Example:**


At one connections point with several consumers should be analyzed, whether the 5th harmonic will be added or subtracted. In our example customer A has 92A and customer B has 123A 5th harmonic current. Together with the phase angle of the current harmonic, it is possible to calculate complex the result with 55,5A.

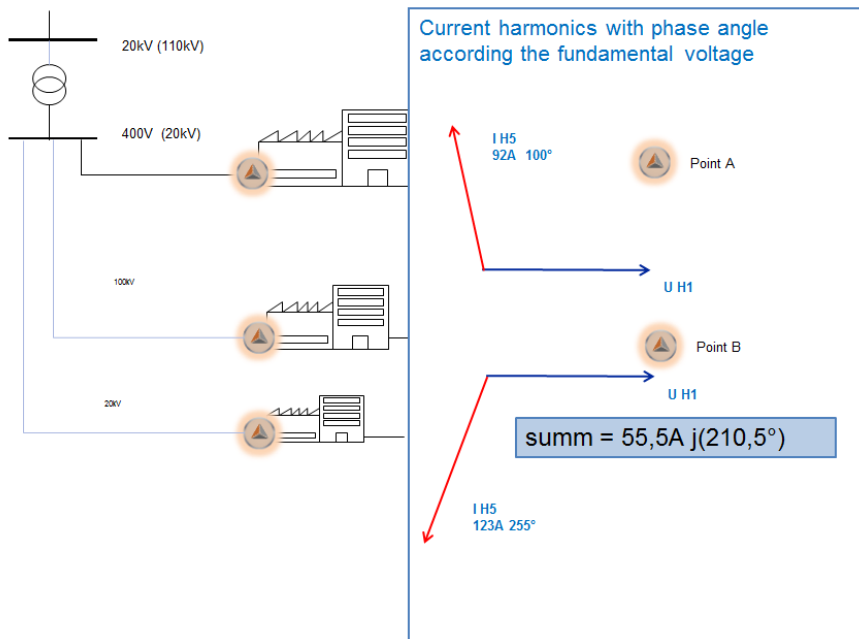

14.7 Harmonic power and phase angle

Phase angle and power values of harmonics 2nd to 40th order number listed on the screen below.

- ▶ Phase angle of the voltage harmonic relative to fundamental of the voltage
- ▶ Phase angle of the current harmonic relative to fundamental of the voltage
- ▶ Real power harmonics (W)
- ▶ Reactive power harmonics (Var)
- ▶ Apparent power harmonics (VA)

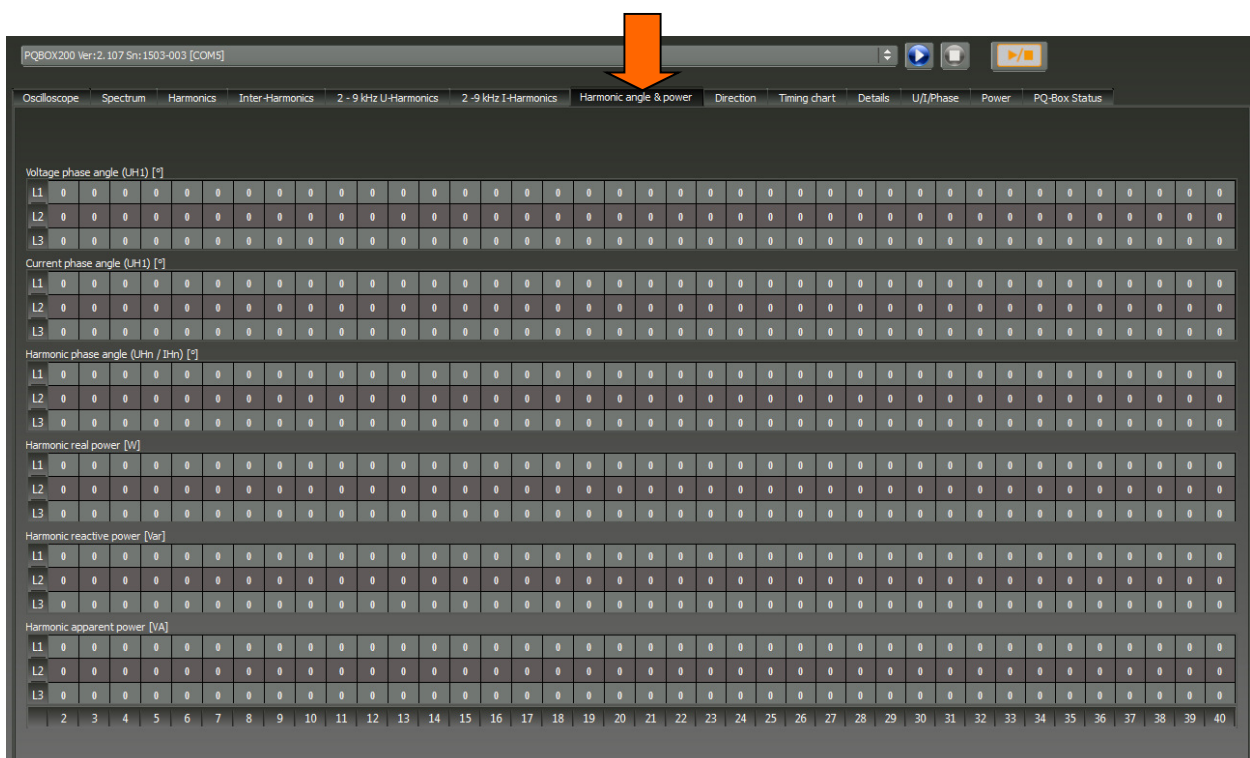

14.8 Online Level-Time Diagram

In the "Online level-time diagram", the voltages, currents and performance can be monitored over an adjustable period (1, 3, 5 or 10 minutes).


Using the right mouse menu, the scales can be adjusted or the image copied to the clipboard.

With the "Clear Display" function, the measurement data are removed from the image.



14.9 Online - Measurement Value Details

From the "Details" tab page, the active, reactive and apparent power of the single-phase and three-phase values are also displayed online, as well as the power factor and phase angle of the fundamental oscillation of the network.

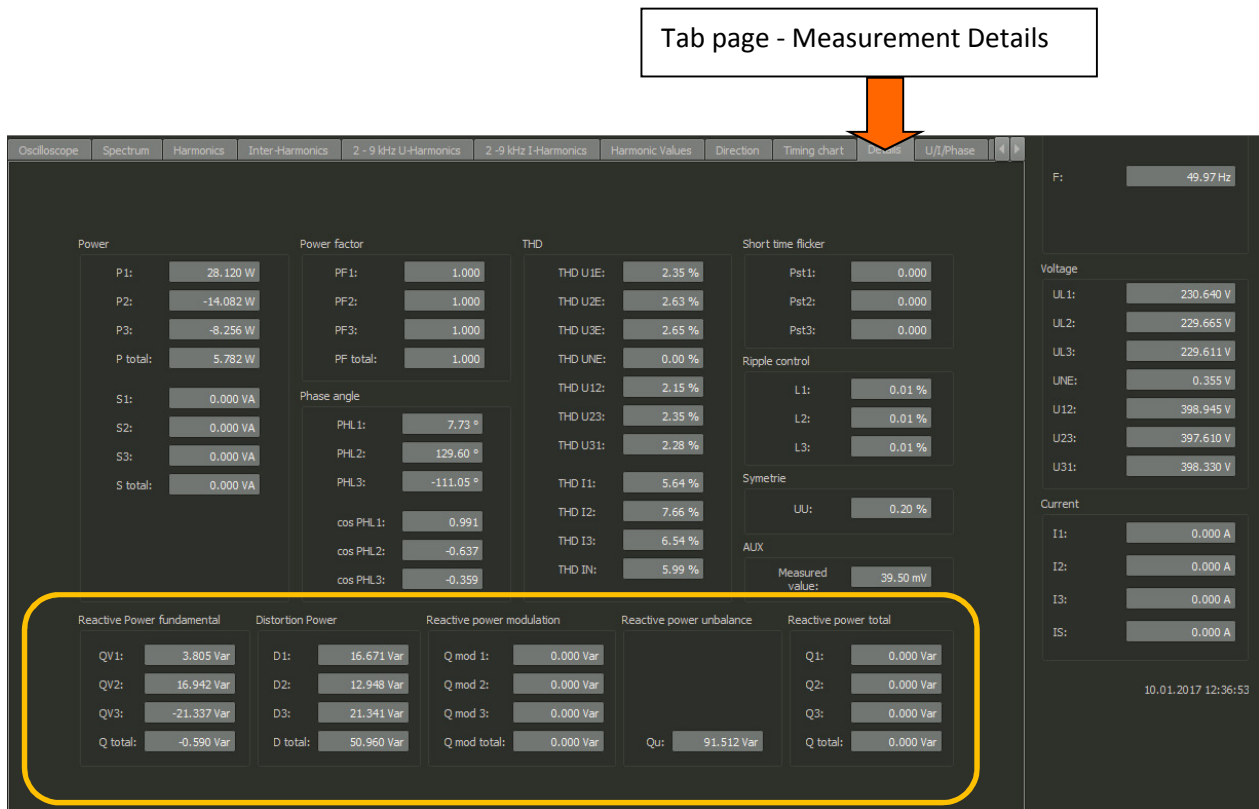

Description of power values in online "Details"

- P = real power values
- S = apparent power values
- Q = total reactive power


The total reactive power will be calculated from:

- QV = reactive power of fundamental frequency
- D = distortion power
- Qmod = modulation power
- Qu = unbalance power

$$Q_{\text{tot}, \Sigma} = \sqrt{Q_V^2 + Q_u^2 + Q_h^2 + Q_d^2 + Q_m^2}$$


14.10 Online - Phasor Diagram

Using the Phasor Diagram function, the voltages and currents are plotted graphically with their magnitude and phase angle.

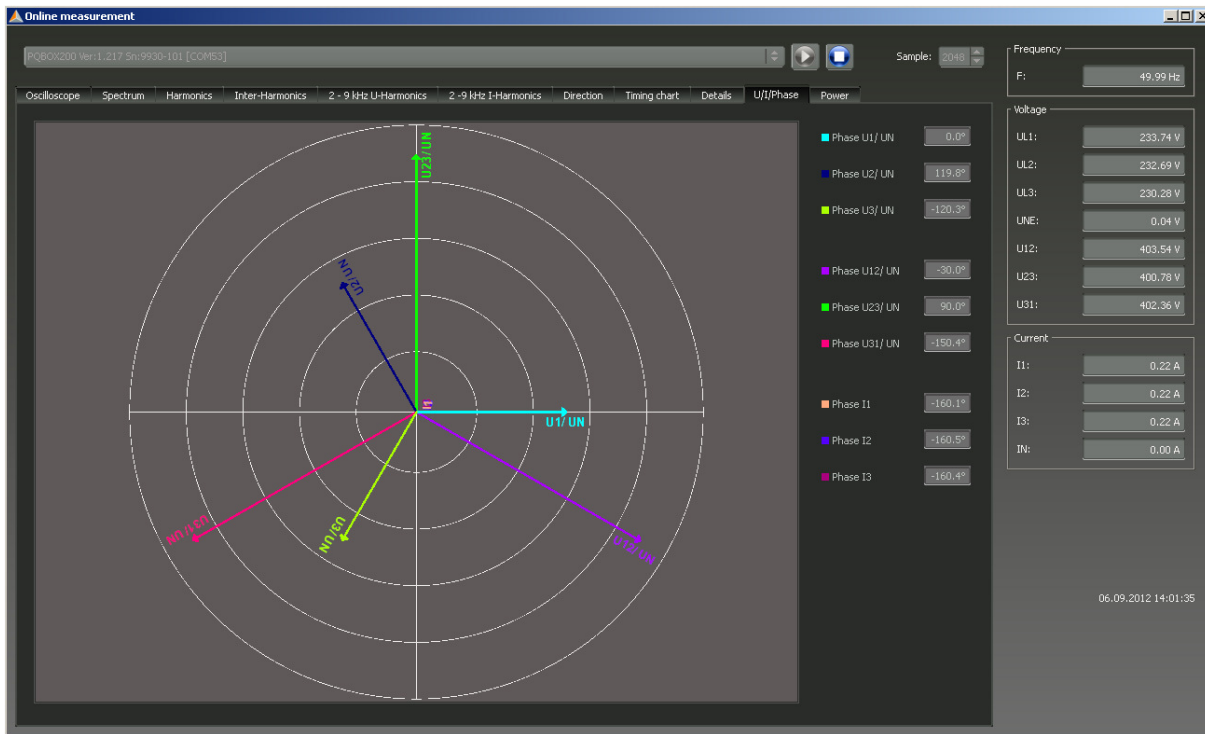


14.11 Power Triangle

On the "Power Triangle" tab page, all performance values are shown in a three-dimensional graphic. It in each case a power triangle is displayed for each phase and for the overall network performance.

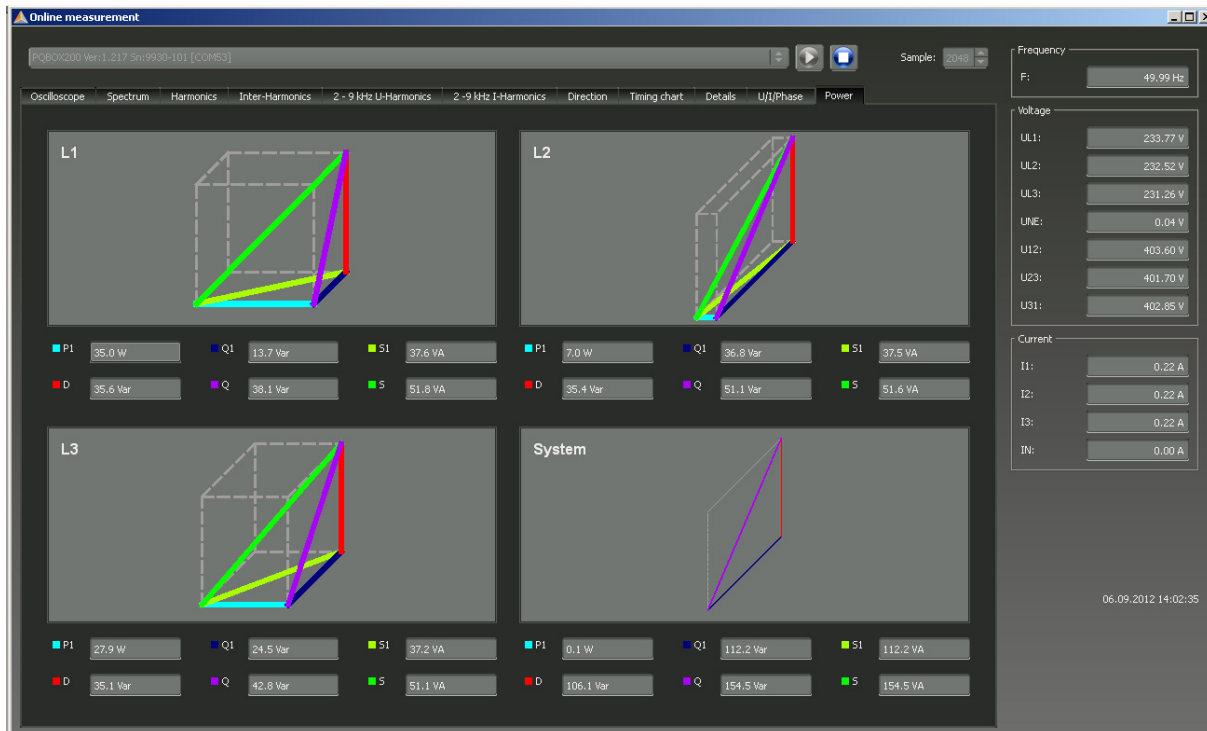


The graphic displays the individual power values once for the total RMS value as well as for the fundamental oscillation values.

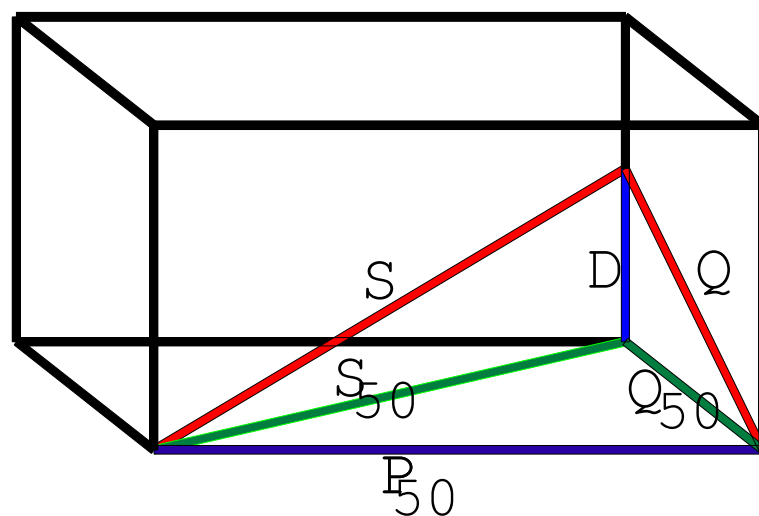

14.12 Online Status PQ-Box

In “Online status PQ-Box” the state of the power quality analyzer can be queried via a remote connection.

- Duration of the current measurement
- Number of fault records in the current measurement
- Used memory of the device
- Free memory of the PQ-Box
- Local date and time of the device

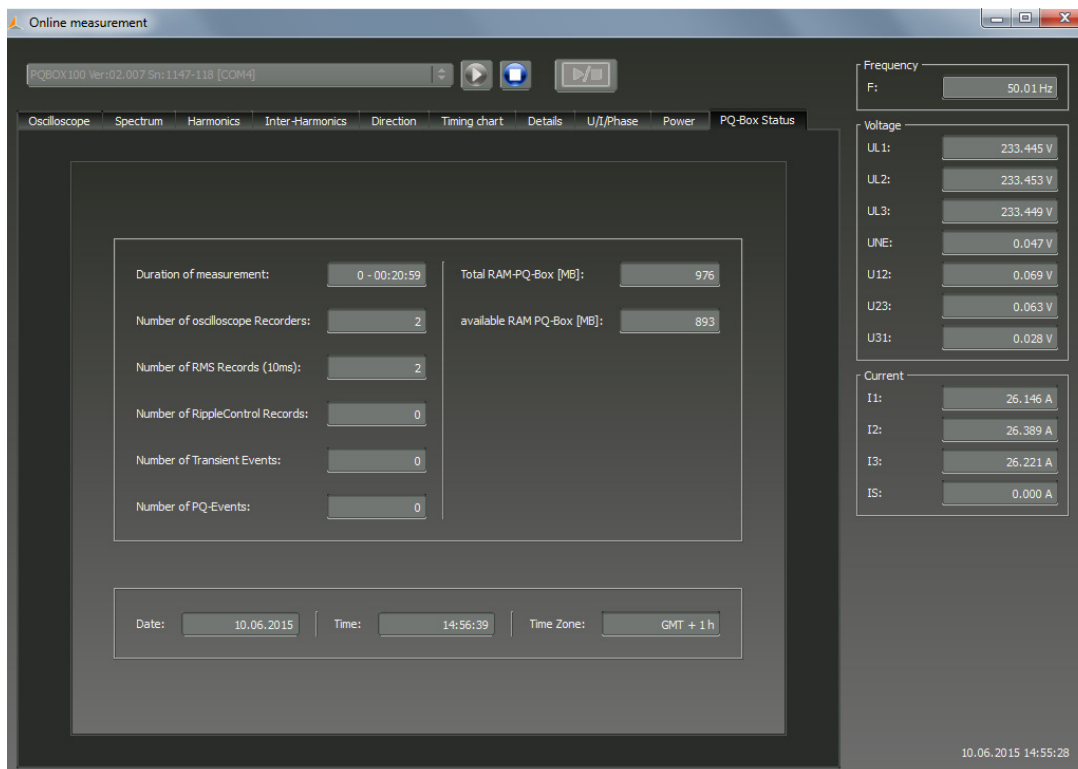

15. Measurement Data – PQ-Box 150

PQ-Box 150 Cyclic Measurement Values

Note: The interval corresponds to the freely selectable measurement interval (1 sec up to 30 min)

For each cyclic measurement interval there are 5604 bytes of recording data. If the memory space is reserved for cyclic data f. e. with 500 MB, 91360 measuring intervals can be written until the reserved disk space is full.

If the recording interval is set to 10 minutes, this corresponds to a recording duration of 632 days.

15.1 PQ-Box Measurement Procedure / Formulas

Signal sampling:

The voltage and current inputs are filtered with an anti-aliasing filter and digitized with a 24-bit converter.

The sampling rate is at the nominal frequency

- PQ-Box 150 20,48 k samples/s.

The aggregation of the measurements is based on IEC61000-4-30 for Class A devices.

RMS values of the voltages and currents, min. / max. values

U eff / I eff

The interval value of the voltage or current is the mean of the RMS values of the length of the selected interval.

U min / max; I min / max

Per measurement period, the highest and lowest 10 ms voltage or current RMS value is saved in addition to the average.

Ripple control signal

U Ripple Control (200 ms)

Any interharmonics can be set In the PQ-Box 200 setup. This is displayed as the 200ms maximum value within a measurement interval.

Flicker levels P_{st} / P_{lt}

The **Short term flicker levels P_{st}** (10 min) and **Long term flicker levels P_{lt}** (2 h) are calculated for the star and delta voltages. P_{st} and P_{lt} are defined in EN 61000-4-15: 2010.


- ▶ **The measuring interval of the P_{st} is set to 10 minutes fix and is independently from the free intervall.**

Formula for P_{lt} calculation:

$$P_{lt} = \sqrt[3]{\frac{1}{12} \sum_{i=1}^{12} P_{st,i}^3}$$

THD – PWHD – K factor

All calculations are based on a 10/12 cycle averaging interval (50 Hz = 10 cycles / 60 Hz = 12 cycles), according the formula of IEC61000-4-7 (exactly 2024 sample values will be used for calculation)

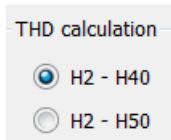

The THD calculation of voltage and current can be changed in the settings: 2 – 40th or 2 – 50th

THD voltage:

$$THD_u = \frac{\sqrt{\sum_{v=2}^{40} U_v^2}}{U_1}$$

THD current in %:

$$THD_i = \frac{\sqrt{\sum_{v=2}^{40} I_v^2}}{I_1}$$

THD(A) current in Ampere:

$$THC = \sqrt{\sum_{n=2}^{40} I_n^2}$$

PWHD - Partial Weighted Harmonic Distortion

The partial weighted THD calculates the 14th to 40th harmonics.

$$PWHD = \frac{\sqrt{\sum_{n=14}^{40} n \cdot C_n^2}}{C_1}$$

PHC - Partial Odd Harmonic Current

The PHC is calculated from the odd current harmonics $n = 21..39$.

$$PHC = \sqrt{\sum_{n=21,23}^{39} C_n^2}$$

K Factor

The values of the K-factors for phase currents are calculated from the corresponding RMS values C_n of the harmonics $n = 1..40$.

The K factor is a measure that indicates the ability of a transformer to withstand the current harmonics of a system.

Various transformer suppliers offer transformers with, for example, K factors $K=4$, $K=13$, $K=20$ and $K=30$.

Transformers are heated more by harmonic currents than 50 Hz currents.

A transformer with a higher K-factor withstands this better and is not heated as much as a transformer with a lower K factor.


The PQ-Box 200 shows the K factor for the current. Only the K values that appear at maximum power are of interest. Just as with the THD of the currents in %, the value is not relevant at very low currents.

$$K = \frac{\sum_{n=1}^{40} (n \cdot C_n)^2}{\sum_{n=1}^{40} C_n^2}$$


Harmonics / Interharmonics

The determination of the harmonics and interharmonics interval values displayed using the methods of the IEC61000-4-30 Class A standard based on 10/12 period values.

The PQ-Box 200 recognizes for all voltage and current channels, respectively, the harmonics up to the 50th ordinal. To evaluate the interharmonics, harmonic subgroups are created. 50 subgroups are recorded for all current and voltage channels.

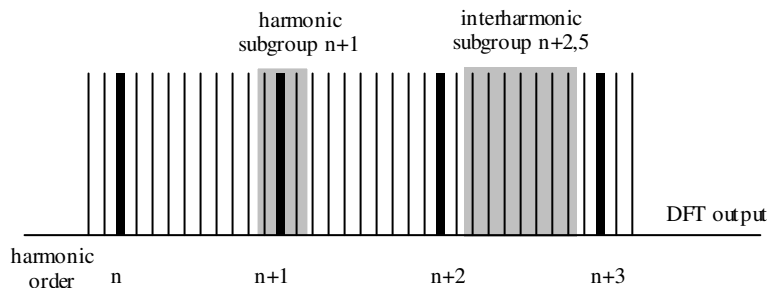

Example:

 

"IH1" is the first interharmonics group and evaluated the frequency range from 5 Hz to 45 Hz.

The harmonics for n=0...50 are calculated

Voltage harmonics (standardized, 10/12 periods):

$$|U_{n-10/12}| = \frac{\sqrt{\frac{1}{2} \cdot \sum_{k=n \cdot N-1}^{n \cdot N+1} |C_k|^2}}{U_{nom}}$$

Current harmonics:

$$|I_{n-10/12}| = \sqrt{\frac{1}{2} \cdot \sum_{k=n \cdot N-1}^{n \cdot N+1} |C_k|^2}$$

Frequency analysis 2 kHz to 9 kHz

In the frequency analysis 2 kHz to 9 kHz respectively 200 Hz frequency bands are summarized.

The specification of each frequency is the center frequency in this 200 Hz band.

$$Y_b = \sqrt{\sum_{f=b-95 \text{ Hz}}^{b+100 \text{ Hz}} Y_{Cf}^2}$$

Example: Frequency band 8.9 kHz corresponds to all 5 Hz spectral lines from 8.805Hz to 9.000Hz

Reactive power / Reactive energy

In the setup of the PQ Box 200 two variants of the power calculation are adjustable

a) Simplified power calculation

Reactive power without unbalanced reactive power calculation:

$$Q = \sqrt{Q_V^2 + D^2} \quad Q_{\Sigma} = Q_{L1} + Q_{L2} + Q_{L3}$$

b) Reactive power calculation according DIN40110 part 2

Reactive power calculation with unbalanced power:

$$Q_{L-10/12} = \text{Sgn}(\varphi_{L-10/12}) \cdot \sqrt{S_{L-10/12}^2 - P_{L-10/12}^2}$$
$$Q_{10/12} = \text{Sgn}(\varphi_{1-10/12}) \cdot \sqrt{S_{10/12}^2 - P_{10/12}^2}$$

Reactive energy:

"Supply reactive energy" inductive reactive energies +EQ.

$$Q_S(n) = |Q_{L-10/12}(n)| \quad \text{für : } Q_{L-10/12}(n) \geq 0$$

$$Q_S(n) = 0 \quad \text{für : } Q_{L-10/12}(n) < 0$$

"Consumer reactive energy" capacitive reactive energies -EQ.


$$Q_S(n) = |Q_{L-10/12}(n)| \quad \text{für : } Q_{L-10/12}(n) < 0$$

Distortion reactive power - D

The distortion reactive power - also called the harmonic reactive power - describes a specific form of reactive power that is caused in single phase and three-phase systems with non-linear loads such as rectifiers in power supplies. The current harmonics in combination with the line voltage result in reactive power components, which are called the distortion reactive power.

The distortion reactive powers are calculated from the voltage and the associated distortion currents:

$$D = U \cdot \sqrt{\sum_{v=2}^{\infty} I_v^2}$$

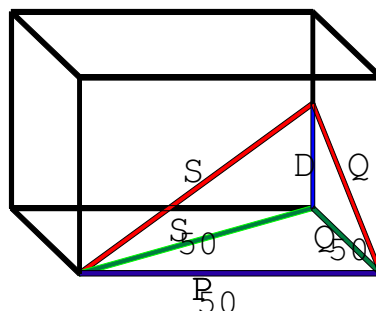

Power Factor PF

In electrical engineering the power factor or active power factor is calculated as the ratio of real power P to the apparent power S. The power factor can be between 0 and 1.

The ration is expressed in the following equation:

Power Factor PF: $\lambda = \text{IPI} / S$

The power factor contains the sign of the real power.


Cos phi

The PQ-Box calculates the cos phi in two versions:

- ☐ cos(Phi)
- ☐ cos(phi) - Real Power

Red = cos phi standard

Blue = cos phi calculated in the direction of the real power

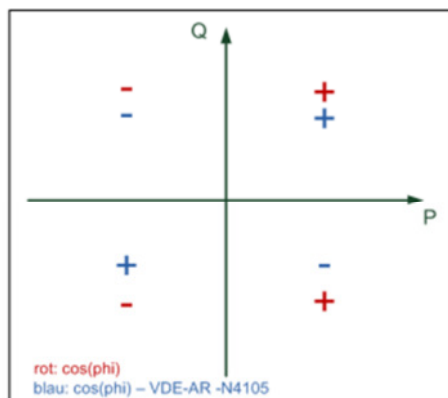

On device display and in online measurement data, the standard cos phi (version a) is shown.

In the long-term measurement data both versions are available.

Apparent Power - S

In the setup of the PQ Box 200 two variants of the power calculation are adjustable

a) Simplified power calculation

$$S = \sqrt{P^2 + Q^2}$$

b) power calculation according DIN40110 part 2

Conductor apparent power 4-wire system:

$$S_L = U_{LNrms} \cdot I_{Lrms}$$

Conductor apparent power 3-wire system:

$$S_L = U_{L0rms} \cdot I_{Lrms}$$

Collective apparent power in accordance with DIN40110:

$$S_{\Sigma} = U_{\Sigma} \cdot I_{\Sigma} \quad U_{\Sigma} = \frac{1}{2} \cdot \sqrt{U_{12rms}^2 + U_{23rms}^2 + U_{31rms}^2 + U_{1Nrms}^2 + U_{2Nrms}^2 + U_{3Nrms}^2}$$

4-wire network:

$$I_{\Sigma} = \sqrt{I_{1rms}^2 + I_{2rms}^2 + I_{3rms}^2 + I_{Nrms}^2}$$

3-wire network, $I_1 + I_2 + I_3 \neq 0$:

$$U_{\Sigma} = \frac{1}{2} \cdot \sqrt{U_{12rms}^2 + U_{23rms}^2 + U_{31rms}^2 + U_{1Erms}^2 + U_{2Erms}^2 + U_{3Erms}^2}$$

$$I_{\Sigma} = \sqrt{I_{1rms}^2 + I_{2rms}^2 + I_{3rms}^2 + I_{Erms}^2}$$

Geometric Fundamental Oscillations - Apparent Power:

$$\underline{S}_G = 3 \cdot [\underline{U}_{1_PS} \cdot \underline{I}_{1_PS}^* + \underline{U}_{1_NS} \cdot \underline{I}_{1_NS}^* + \underline{U}_{1_ZS} \cdot \underline{I}_{1_ZS}^*]$$

Active Power - P

The sign of the active power corresponds with the flow direction of the fundamental oscillation active energy (+: supply, - : consumer).

The values of the conductor - active power are calculated from the samples of a synchronisation cycle.

$$P_{L-10/12} = \frac{\sum_{n=1}^{2048} p_L(n)}{2048}$$

(200 ms values)

with conductor index $L = \{1, 2, 3, E\}$

The 10 min values are calculated as linear averages.

The collective effective power is defined for 4-wire systems as

$$P_{\Sigma} = P_1 + P_2 + P_3$$

The collective effective power is defined for 3-wire systems as

$$P_{\Sigma} = P_1 + P_2 + P_3 + P_E$$

Fundamental oscillation - active power (line):

$$P_G = \operatorname{Re}\{\underline{S}_G\}$$

\underline{S}_G = Geometric fundamental oscillation apparent power

Symmetric Components

The complex symmetrical components are calculated from the corresponding complex spectral components of the fundamental oscillations of the phase voltages and phase currents.

Phase voltage in a 4-wire system = Phase-to-Neutral voltage

Phase voltage in a 3-wire system = Phase-to-Ground voltage

Positive sequence:

$$\underline{U}_{1_PS} = \frac{1}{3} \cdot (\underline{U}_{1N-1} + \underline{a} \cdot \underline{U}_{2N-1} + \underline{a}^2 \cdot \underline{U}_{3N-1})$$

$$\underline{I}_{1_PS} = \frac{1}{3} \cdot (\underline{I}_{1-1} + \underline{a} \cdot \underline{I}_{2-1} + \underline{a}^2 \cdot \underline{I}_{3-1})$$

Negative sequence:

$$\underline{U}_{1_NS} = \frac{1}{3} \cdot (\underline{U}_{1N-1} + \underline{a}^2 \cdot \underline{U}_{2N-1} + \underline{a} \cdot \underline{U}_{3N-1})$$

$$\underline{I}_{1_NS} = \frac{1}{3} \cdot (\underline{I}_{1N-1} + \underline{a}^2 \cdot \underline{I}_{2N-1} + \underline{a} \cdot \underline{I}_{3N-1})$$

Zero sequence:

$$\underline{U}_{ZS} = \frac{1}{3} \cdot (\underline{U}_{1N-1} + \underline{U}_{2N-1} + \underline{U}_{3N-1})$$

$$\underline{I}_{ZS} = \frac{1}{3} \cdot (\underline{I}_{1N-1} + \underline{I}_{2N-1} + \underline{I}_{3N-1})$$

UU Unbalance

The unbalanced voltages are calculated from the corresponding values of the modal positive sequence, negative sequence and zero sequence components.

For the EN50160 (events) only the voltage unbalance u_u is relevant and corresponds to the ratio of the negative sequence to the positive sequence. The value is expressed in [%].

16. Maintenance/Cleaning

This unit is maintenance-free for customers.

Exceptions are the battery pack and micro-SD card, which can be accessed via a maintenance cover on the rear panel. The fuse in the voltage leads.

- PQ-Box 150 Open the housing cover by unscrewing the 6 screws on the back

Spare parts no.

● SD memory card, 4GByte industry-standard	900.9099
● Replacement battery pack	570.0010
● Fuse for voltage leads; 500mA (FF) 30kA AC/DC; 1000V 6,3mmx32mm	582.1058



Danger

Danger of electric shock!

- ✎ Do not open the unit.
- ✎ Maintenance of the equipment can only be carried out by A-Eberle.

For service, contact A-Eberle.

Service address:

A. Eberle GmbH & Co. KG
 Frankenstraße 160
 D-90461 Nuremberg

17. Calibration

We recommend a calibration interval of three years for the network analyzer PQ-Box 150 & 200 to maintain the accuracy of GEFOR-made-IEC61000-4-30 Class A instruments.

18. Disposal

To dispose of the device and its accessories, send all components to A-Eberle.

19. Product Warranty

- A-Eberle guarantees that this product will remain free of defects in material and workmanship for a period of three years from the date of purchase.
- For accessories like current clamps and the battery the period is one year.
- This warranty does not cover damage caused by accident, misuse or abnormal operating conditions.

To obtain service during the warranty period, please contact A-Eberle GmbH & Co KG in Nuremberg.

A. Eberle GmbH & Co. KG

Frankenstraße 160

D-90461 Nuremberg

Tel.: +49-(0)911-62 81 08-0

Fax: +49 (0) 911 / 62 81 08-99

E-Mail: info@a-eberle.de

<http://www.a-eberle.de>

No. 584.0841

Vers. PQ Box 150 – 21/03/2018